

the Toast Select™ Luxe

Instruction Book - BTA735



Breville®



Contents

- 2 Breville Recommends
Safety First
- 7 Components
- 8 Functions
- 11 Care & Cleaning

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material or promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a table, counter or bench top during operation. Ensure the surface is level, clean and free of water.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.

- Keep appliance clear of walls and other heat sensitive materials such as cloths and curtains.
- Do not use the toaster on sink drainboard.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this book.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Never cover the toaster whilst it is plugged into the power outlet or while hot.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not move the toaster whilst in operation or when hot.
- Do not touch hot surfaces. Use side areas for lifting and carrying the appliance.
- Do not leave the toaster unattended when toasting.
- Always turn the power off at the power outlet and then remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- Do not allow bread crumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

- Keep the appliance clean. Follow the cleaning instructions provided in this book.
- Unwind the power cord fully before use.
- Do not let the power cord hang over the edge of a table counter, touch hot surfaces or become knotted.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply power cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Always turn the power off at the power outlet and then remove the power plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning or storing.
- The temperature of accessible surfaces may be high when the appliance is operating.
- This appliance is not intended for use by young children or infirm persons without supervision.
- Young children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.



WARNING

Never operate toaster on its side. Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire. This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or fire.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS



Components



A. Brownness Indicators

LEDs to indicate the brownness setting and progress of your toasting.

B. Bread Selection Ring

Select your bread type to ensure comparable brownness across all bread types without the guess work.

The time taken to toast your bread depends on the bread type. Select from White, Fruit, Brown, Grain, Rye or Crumpet to ensure you get the same brownness level every time.

Crumpet setting activates additional heat to the middle heating elements to toast the insides of your crumpets or bagels without burning the outsides.

C. Brownness Selection Dial

Select how brown you like your toast, setting '0' (lightest) to '6' (darkest).

D. 'LIFT & LOOK™' / High lift lever

Use the lever during the toasting cycle to raise and lower the carriage so you can check the toasting progress without interrupting the toasting cycle. High lift feature makes it easier to remove small items such as English muffins, crumpets or bagels.

E. 'A BIT MORE™'

If your toast comes up too light, one press adds a little extra toasting time.

REHEAT button

If your toast has popped up & gone cold, Press 'reheat' to warm it up again.

F. FROZEN button

Activates additional toasting time required to toast frozen bread.

G. CANCEL button

Cancels the toasting cycle.

NOT SHOWN

Breville Assist™ Plug



Functions



NOTE

This toaster is electronically controlled and will not operate until the toaster is plugged into a 220-240V power outlet. Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 220-240V power outlet. The Brownness Indicators will illuminate from '0' to '6', and then align to the selected browning setting (indicated by the position of the Brownness Dial and Brownness Indicators). The toaster will revert to stand-by mode (Brownness Indicators will dim) after a few minutes if a button is not pressed or the dial is not adjusted.



NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

2. Place bread, crumpets, bagels, etc into each of the toasting slots. Ensure items for toasting are not too large or too thick to fit in the toasting slots.
3. Select the bread type in toasting slot using the Bread Selection Ring.



NOTE

Various types of bread may require a different browning setting. For example, raisin toast and white light textured breads require less toasting time, while heavier textured rye breads may require more toasting time. Changing the Bread Selection Ring accommodates for these changes (removes the guess work) without changing the Brownness Selection Dial so you always have the same browning no matter what the bread type.

4. When using the Brownness Selection Dial, align the needle with the desired browning setting '0' (lightest) to '6' (darkest). Indicators will illuminate and align to the selected browning setting. The Brownness setting is relative to each Bread Type so there's no need to keep adjusting the setting for different bread types if you have the same brownness requirements.



NOTE

When toasting bread for the first time, it is suggested to toast on browning setting '3' (9 LED Indicators).

5. To start the toasting process, press the lever down until it locks into place. The Brownness Indicators will begin flashing at "0" then start to gradually count up indicating the level of brownness until it reaches the browning setting.
6. Once the toasting cycle is complete the carriage will move to the raised position. Remove the toast. The brownness indicator will re-illuminate to the previously selected browning setting for a few minutes before entering stand-by mode.



NOTE

To re-activate the toaster from stand-by mode, press any button or adjust the Brownness Dial. The Brownness Indicators will re-illuminate.



WARNING

Do not leave the toaster unattended when in use as toast may jam. In the unlikely event that bread, bagels, English muffins or toaster pastries become jammed in the toasting slots, all the buttons and the LED toasting indicators will flash and the elements will turn off. Remove the power plug from the power outlet and allow the toaster to cool completely before carefully easing the bread out of the slots. Take care not to damage the heating elements. Do not use metal utensils.

A BIT MORE™ / REHEAT BUTTON

If your toast comes up too light, one press of this button adds a little extra toasting time. This feature can be selected before, during or after the toasting cycle and can be used with all Bread Types and FROZEN functions.

To use this feature during the toasting cycle:

Press the A BIT MORE™ / Reheat button. The button surround will illuminate white when selected. The toasting time will automatically increase but will not illuminate more Brownness Indicators. The A BIT MORE™ / Reheat function can be cancelled by pressing the A BIT MORE™ / Reheat button again and the original toasting cycle will continue.

To use this feature before or after the toasting cycle:

 
Press the A BIT MORE™ / Reheat button. The button surround will illuminate white when selected. Press down the lever until it locks into place. The Brownness Indicators will automatically align with the lowest browning setting then flash and count down for the additional browning time.

BREAD TYPE SELECTION


The bread selection feature changes the total toasting time for each bread type, so you can achieve the same brownness setting across different bread types.

To toast different bread types

1. Place the bread into the toasting slots.
2. Adjust the Bread Selection Ring to bread type in the toasting slots, ensuring the pointer aligns with the selected setting.

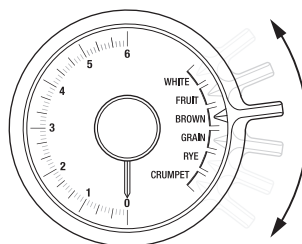

 3. Select the desired browning setting by adjusting the Brownness Selection Dial. Brownness settings range from '0' (lightest) to '6' (darkest).

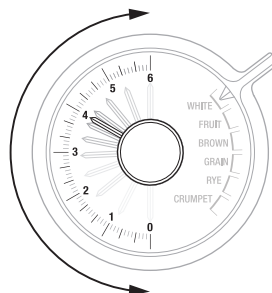


4. To start the toasting process, press the lever down until it locks into place.

CRUMPET SELECTION

The crumpet selection in addition to adjusting the total toasting time activates additional heat to the middle heating elements to perfectly toast the insides of your crumpets or bagels without burning the outsides.


To toast crumpets or bagels:

 1. Place the crumpet or bagel into the toasting slots with the inside of the crumpet or bagel facing inwards as per the crumpet & bagel markings above the middle heating elements of the toaster.
2. Adjust the Bread Selection Ring to CRUMPET, ensuring the pointer aligns with the CRUMPET setting.

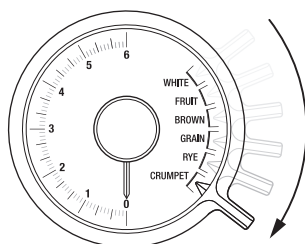

3. Select the desired browning setting by adjusting the Brownness Selection Dial. Brownness settings range from '0' (lightest) to '6' (darkest).

 CRUMPET & BAGEL SETTINGS



4. To start the toasting process, press the lever down until it locks into place.



NOTE

It is normal for the outside heating elements to appear off or on a lower power during the Crumpet setting. This ensures the inside of your crumpet toasts without burning the outside.

FROZEN BUTTON

This feature activates additional toasting time required to toast frozen bread.

To toast frozen bread:

1. Place the bread into the toasting slots.
2. Adjust the Bread Selection Ring so that the pointer aligns with the bread type you've inserted in the toasting slots.
3. Select the desired browning setting by adjusting the Brownness Selection Dial. Brownness settings range from '0' (lightest) to '6' (darkest).
4. To select the FROZEN setting, press the FROZEN button and the button surround will illuminate white.
5. To start the toasting process, press the lever down until it locks into place. The toasting time will automatically increase.
6. After the cycle has finished, the FROZEN button will turn off.



NOTE

The FROZEN function can be cancelled by pressing the FROZEN button again and the original toasting cycle will continue.

LIFT & LOOK™ LEVER

This feature lets you raise & lower the carriage so you can check the toasting progress without interrupting and/or cancelling the toasting cycle. During the toasting cycle, simply lift the lever to view the toasting progress. Lower the lever to continue the cycle or press the CANCEL button to stop the cycle at any time.

HIGH LIFT LEVER

The lever can be lifted approximately 2cm above the starting position. This raises the carriage making it easier to remove smaller items such as English muffins, crumpets or bagels.



Care & Cleaning

1. Switch the toaster off at the power outlet and then remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray (located under the left hand side handle) by pulling it outwards. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs caught inside, turn the toaster upside down over a bin and shake gently to free the crumbs. **DO NOT** bang the toaster, this may damage the elements or carriage mechanism.
4. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.



NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard and damage the finish of the toaster.

STORAGE

Switch toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard.

Do not store anything on top of the toaster.



WARNING

Do not use the toaster without the slide-out crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.

Breville Customer Service Centre

Australian Customers

Mail: Locked Bag 2000
Botany NSW 1455
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9700 1342

Web: www.breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Web: www.breville.co.nz

Breville®
Thought for food

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2017.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

BTA735 ANZ – B17

the Soft Top™ Luxe

Instruction Book - Suits all BKE735 models



Breville®



Contents

- 2 Breville Recommends
Safety First
- 8 Components
- 9 Functions
- 10 Care & Cleaning

BREVILLE RECOMMENDS SAFETY FIRST

At Breville[®] we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.

- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only.
Under no circumstances should this product be used to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the kettle on a sink drain board.
- Do not place the kettle on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the kettle clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.
- This kettle is not intended to be operated by means of an external timer or separate remote control system.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place anything on top of the lid.

- Always ensure the kettle switch is in the 'off' position, then turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle is switched to 'off' position after the water has boiled before removing the kettle from the power base.
- Do not move the kettle while it is switched on.
- Do not open the lid during operation.
- Do not overfill the kettle past the maximum water level mark. If the kettle is overfilled, boiling water may be ejected.
- Keep the kettle clean. Follow the cleaning instructions provided in this book.



CAUTION

To prevent damage to the appliance, do not use alkaline cleaning agents when cleaning, use a soft cloth and a mild detergent.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Unwind the power cord fully before use.

- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
 - Connect only to a 230V or 240V power outlet.
 - To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid.
 - Always turn the appliance to the OFF position, switch off at the power outlet, remove the plug and allow all parts to cool before attempting to move the appliance, when the appliance is not in use, before cleaning and when storing.
 - The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Cleaning and user maintenance shall not be made by children unless they are 8 years or above and are under supervision. Keep the appliance and its cord out of reach of children aged less than 8 years.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way.
- Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not

use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other

appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.

- Do not spill water onto the connector.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- It is recommended to regularly inspect the appliance. Do not use the appliance if power supply power cord, plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.

- Any maintenance, other than cleaning, should be performed at an authorised Breville Service Centre.
- The use of attachments not sold or recommended by Breville may cause fire, electric shock or injury.
- The appliance is not intended to be operated by means of an external timer or separate remote control system.



WARNING

Do not operate the kettle on an inclined surface. Do not move the kettle while it is switched on.

- The heating element surface is subjected to residual heat after use.
- The appliance is designed for boiling of drinking quality water only. Never use to heat or boil any other liquids or foodstuffs. The lid should always be firmly in place and locked into the closed position before use.
- Do not press the lid release button to open the lid during and after operation. This may result in boiling water splashing from the kettle. Pour out all the hot water from the kettle before opening the lid to refill.
- Never immerse the kettle base, switch area, power base, power cord or power plug in water, or allow moisture to come into contact with these parts.
- To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

SAVE THESE INSTRUCTIONS



Components



- | | |
|--|---|
| A. Cushion controlled lid with viewing window. | G. Rapid boil 2400W concealed element. |
| B. Removable scale filter. | H. Lid release button. |
| C. Stainless steel vessel. | I. Ergonomic Handle. |
| D. 1.7 litre/7 cup capacity. | J. Illuminated power 'On/Off' switch with ready bell. |
| E. BPA Free* dual water windows. | K. Multi directional base with cord storage. |
| F. Auto shut off & boil dry protection. | Breville Assist™ plug (not shown) |

* Breville makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per EU Commission regulation No 10/2011.



Functions

BEFORE FIRST USE

Remove any promotional material attached to your kettle. It is recommended that before first use, the kettle is filled to the maximum level with cold tap water, boiled and water discarded. Your kettle will only operate when positioned on the power base with the 'On/Off' switch in the 'On' position. The kettle will automatically switch off once the water has boiled.

OPERATION OF YOUR KETTLE

To fill the kettle, remove it from the power base and open lid by pressing the lid release button. Fill with the desired amount of water.



NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window. Too little water will result in the kettle switching 'Off' before the water has boiled. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.

Ensure the lid is locked firmly into place. Position the kettle securely onto the power base. Insert the power plug into a 230/240V power outlet and switch on.

Press the 'On/Off' switch to the 'On' position for water to boil.



NOTE

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

The kettle will automatically switch 'Off' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle level, especially when filled to the maximum level. To re-boil it may be necessary to wait for up to 30 seconds to allow the control to reset.

If further heating of the kettle is not required, switch 'Off' at the power outlet, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs, the kettle will stop heating. Switch 'Off' at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will then automatically reset.

For additional safety, your kettle is fitted with an additional thermal cut out. In the event of overheating, the kettle will automatically shut down to prevent further damage. Should this occur, take your kettle to an authorized Breville Service Centre.



Care & Cleaning

Always switch 'Off' at the power outlet and unplug the appliance from the power outlet before cleaning.

REMOVABLE FILTER

The kettle features a removable mesh filter to remove scale deposits for cleaner water. To remove the scale deposits from the filter, open the lid and slide the filter up and out of the kettle.

The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.



NOTE

The filter could become damaged with time. Please check regularly and replace if found damaged.



NOTE

The concealed element in the base of the kettle is made from high quality stainless steel. Any brown stains appearing are the result of mineral deposits and are not rust.

DESCALING

It is essential that regular descaling takes place. Frequency will depend on the usage of the kettle and the hardness of the water in your area. A build-up of scale may cause the inside of the kettle to discolour and ultimately may damage the element. This will affect the efficiency of the appliance and may invalidate the warranty agreement. We recommend the use of Breville Kettle Cleaner as it's specially formulated for descaling kettles. To order visit www.breville.com.au

Directions for use:

1. Add 60ml of Breville Kettle Cleaner to 1 litre of water.
2. Fill kettle with mixture on a protected surface.
3. Bring kettle to boil and let stand for 30 minutes.
4. Clean spout by using a soft cloth dampened with Breville Kettle Cleaner, rub well, then wipe off.
5. Bring the kettle to boil for a second time, then empty solution.
6. Fill kettle with fresh water and bring to the boil, discard boiled water. Now your kettle is ready to make your next cup of tea or coffee.



NOTE

Do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure the lid is closed and locked securely into place. Wrap the power cord around the cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



Notes

Breville Customer Service Centre

Australian Customers

Mail: Locked Bag 2000
Botany NSW 1455
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9700 1342

Email: Customer Service:
askus@breville.com.au

Web: www.breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: Customer Service:
askus@breville.co.nz

Web: www.breville.co.nz

Breville®
Thought for food

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2024.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.