

the Aroma Style Electronic™

Instruction Book – LCM700



Breville®



Contents

- 2 Breville Recommends Safety First
- 7 Components
- 8 Functions
- 12 Tips
- 13 Care, Cleaning and Storage

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the coffee maker for the first time and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the coffee maker for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this coffee maker.
- When unpacking the coffee maker, check to see you have received all the items listed in the parts list, before discarding the packaging.

- Do not place the coffee maker near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances
- Always ensure the coffee maker is properly assembled before use. Follow the instructions provided in this book.
- Use only the carafe provided; do not substitute with any other carafe.
- Do not place the carafe on a heated stove top or in a microwave oven.
- Do not use on metal surfaces, for example, a sink drain board.
- Do not open the water tank lid during the brewing cycle as hot steam could cause injury.
- Do not touch hot surfaces.
- The heating plate surface is subject to residual heat after use.
- This coffee maker is intended for household use only and not for commercial or industrial use.
- To avoid electrical circuit overload, it is recommended that no other appliances are plugged into the same circuit as your coffee maker when it is in use.
- Disconnect the power plug before assembling, dismantling or before cleaning and when the coffee maker is not in use.
- Do not operate in the presence of explosives and/or flammable fumes or liquids.
- Do not unplug the coffee maker by pulling on the cord.
- Never carry the coffee maker by the cord or yank to disconnect from an outlet; instead, grasp the plug and pull to disconnect.

- Do not pull the power cord around sharp edges or corners.
- Allow the coffee maker to cool completely, always switch off at the power outlet, and then unplug the coffee maker from the outlet:
 - Before leaving it unattended
 - Before attempting to move the coffee maker
 - Before cleaning and maintenance unless otherwise specified in this booklet
 - Immediately after use.
- To prevent damage to the coffee maker, do not use alkaline cleaning agents when cleaning, use a soft cloth and mild detergent.
- Do not place anything, on top of the coffee maker when assembled, when in use and when stored.
- Do not pour water into any openings except for the water tank.
- Never overfill the max indicator line of the water tank.
- The coffee maker should not be placed in a cabinet when in use.
- The coffee maker is not intended to be operated by means of an external timer or separate remote-control system or any other device that switches the coffee maker on automatically.
- Keep the coffee maker clean. Follow the cleaning instructions provided in this book.



NOTE

To use the delay brew function, the coffee maker must be powered on and not switched off at the power outlet. If the power is switched off, the time and delay brew program will need to be set again.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the part, unless it is recommended in the cleaning instructions.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville service centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or

boats. Do not use outdoors.


Misuse may cause injury.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTION**



Components

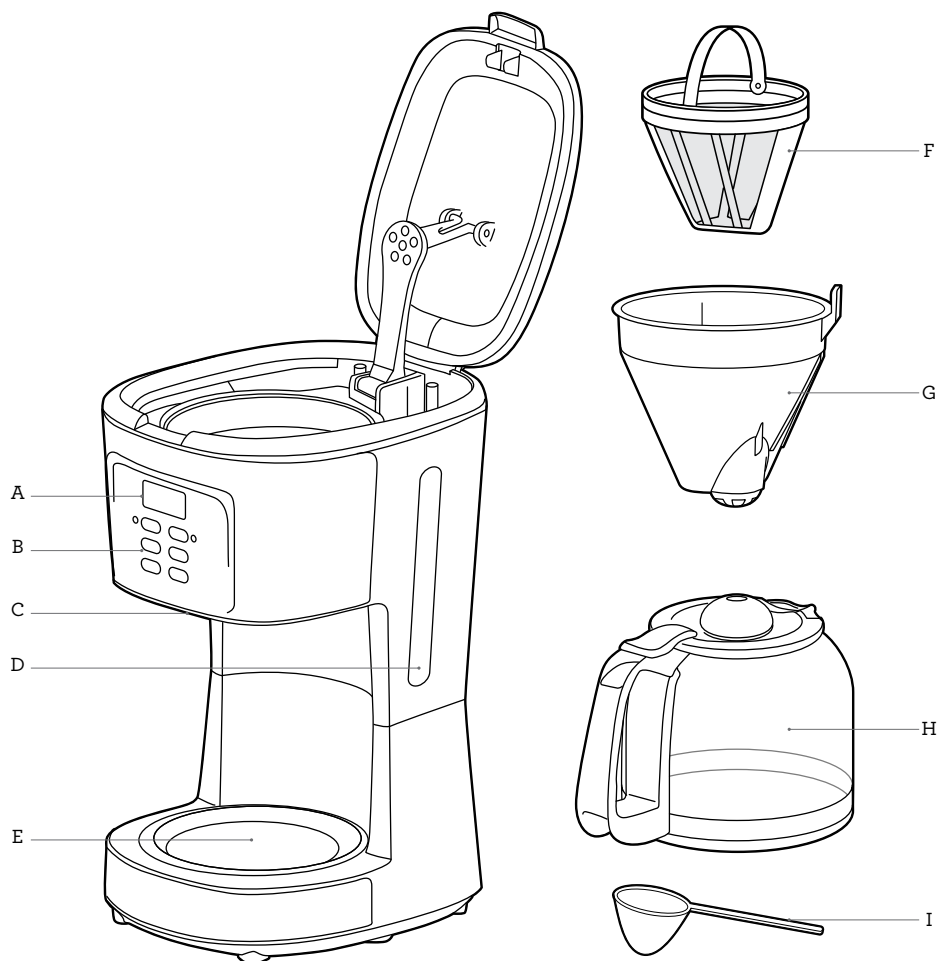

A. LCD Display

B. Control Panel (ON/OFF button with red indicator light, Strength button with orange indicator light, Delay Brew button, Program button, Minute button and Hour button)

C. Non-drip valve system

D. Water tank with water level indicator

E. Thermostatically controlled hot plate

F. Removable stainless-steel mesh filter basket

G. Removable filter basket holder

H. Glass carafe with hinged lid

I. Measuring Scoop



Functions

BEFORE FIRST USE

Before using your Breville coffee maker for the first time, remove all packaging material and promotional labels. To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this coffee maker.

Before brewing your coffee for the very first time, clean the coffee maker thoroughly as follows:

1. Lift the water tank lid and fill the water tank with cold water to the maximum mark.
2. Insert the plug into a 230/240V power outlet and then switch on at the outlet.
3. Ensure the filter holder with filter basket is firmly positioned into place. Close the water tank lid.
4. Position the empty carafe, with the lid down, onto the hot plate and press the ON/OFF button to switch the coffee maker on. The light above the ON/OFF button will illuminate and the water will start to drip through.
5. When the water has dripped through, press the ON/OFF button to switch the coffee maker off. Remove the carafe from the hot plate, empty and allow to cool before washing in warm soapy water. Rinse and dry thoroughly.
6. Wipe the exterior of the coffee maker with a soft, damp cloth only.

Your coffee maker is now ready for use.

FILTER BASKET & FILTER HOLDER



NOTE

Both the filter holder and filter basket are removable. The fine, stainless steel mesh filter basket sits inside the filter holder and is designed for optimal flavour extraction from the finely ground coffee. Using the filter basket means that disposable paper coffee filters are not necessary. However, if paper filters are preferred, place inside the filter holder without the filter basket.

The filter basket (if used) and filter holder should be cleaned after each use as per the instructions in this book.

SETTING THE CLOCK



NOTE

The clock does not have to be set to the time of day for the manual operation of the coffee maker. The clock must be set for time of day for the automatic operation of the coffee maker.



NOTE

To use the delay brew function, the coffee maker must be powered on and not switched off at the power outlet. If the power is switched off, the time and delay brew program will need to be set again.

To set the clock to the time of day:

1. When the coffee maker is plugged in and switched on at the power outlet, the LCD will flash 12:00 and the AM icon in the top left hand corner.

2. Press the 'HOUR' button to select the current hour time. Press and hold the 'HOUR' button to scroll through numbers quickly. When the number displayed approaches the desired setting, press and release the button to advance one digit at a time. (AM is indicated in the upper left hand corner of the clock display and PM in the lower left hand corner).
3. Press the 'MINUTE' button to select the current minute time. Press and hold the 'MINUTE' button to scroll through numbers quickly. When the number displayed approaches the desired setting, release and press the button to advance one digit at a time.

The Clock is now set.

BREWING COFFEE

MANUAL OPERATION

1. Lift the water tank lid and fill the water tank with cold water. The number of cups is shown by the water level indicator. Do not exceed the maximum fill level. It is recommended not to make less than 4 cups.



NOTE

There are two drain holes on the back of the water tank to prevent exceeding the capacity of the coffee maker. If too much water is added it will flow from these holes down the back of the coffee maker.

2. Insert the plug into a 230/240V power outlet and then switch on at the outlet.
3. Ensure the filter holder is firmly positioned into place. Insert the stainless steel mesh filter basket into the filter holder.



NOTE

If disposable paper filters are used, insert into the filter holder instead of the stainless steel mesh filter basket.

4. Spoon ground coffee into the stainless steel mesh filter basket. Allow approximately 1 heaped teaspoon of ground coffee for each cup of brewed coffee. Close the water tank lid.
5. Position the empty carafe, with the lid closed, onto the hot plate.
6. Press the ON/OFF button to switch the coffee maker on. The light beside the ON/OFF button will illuminate red and the coffee will start to drip through

Strength Control

To adjust the coffee strength stronger, press the 'STRENGTH' button once before pressing the ON/OFF button, the 'STRENGTH' indicator will illuminate in orange and the coffee maker will brew stronger coffee. If you do not want to adjust the coffee strength, do not press the 'STRENGTH' button.



IMPORTANT

While the non-drip valve feature is a convenient way to pour a cup of coffee mid-cycle, we recommend you wait until the completion of the brew cycle as the strength and flavour of the coffee poured mid-cycle will vary from the finished brew. While removing the carafe mid-cycle will temporarily stop the coffee from dripping into the carafe, it does not stop the brewing cycle. After pouring a cup of coffee, the carafe should immediately be returned to the hot plate for completion of the brewing cycle and to prevent the filter basket from overflowing.

7. The non-drip valve feature allows you to interrupt the brewing cycle to pour a cup before the entire carafe has finished filling.
8. When the brewing process ends and the water tank level indicator is on empty, there will still be hot liquid in the filter basket. Wait a few minutes for the remaining liquid to drip through into the carafe. The coffee is now ready to be consumed.
9. After the coffee grounds have cooled, open the water tank lid and carefully lift the mesh filter basket by the hand up and away from the filter holder to remove.

Keep Warm

10. The hot plate will keep the coffee in the carafe hot for two hours as long as the coffee maker remains switched on.
11. Always switch the coffee maker off when the carafe is empty or when you no longer want to keep the coffee hot.



NOTE

There are two drain holes on the back of the water tank to prevent exceeding the capacity of the coffee maker. If too much water is added it will flow from these holes down the back of the coffee maker.



WARNING

To avoid the filter basket overflowing, the carafe must fit securely into the coffee maker hot plate, with the lid on at all times. If not properly positioned on the hot plate, hot water or hot coffee may overflow. Do not open the water tank lid during the brewing cycle as hot steam could cause injury.



WARNING

If water/coffee is not dripping from the coffee maker, immediately turn off the coffee maker by pressing the ON/OFF button, switch off at the power outlet, unplug and wait 10 minutes before opening the water tank lid and checking the filter basket. The coffee maker becomes very hot during the brewing cycle. Please handle with extreme care.

DELAY BREW - PROGRAMMING YOUR COFFEE MAKER

The clock must be set to the time of day for the automatic operation of the coffee maker. See 'Setting the Clock' section in this book.

Delay brew allows you to pre-set the timer program to automatically brew coffee at a later time within a 24-hour period.

TO SET THE DELAY BREW OPERATION

1. Press the 'PROGRAM' button. The ON/OFF indicator light will flash in green to indicate brew time is being selected and "AM 12:00" will flash on the LCD screen.
2. Select the time you want the coffee to start brewing by using the 'HOUR' button, then the 'MINUTE' button, following the same instructions for setting the clock.
3. To confirm your delay brew start time, press the 'DELAY BREW' button. The ON/OFF button will solidly illuminate green and the pre-set time will be displayed for a few seconds on the LCD display. It will automatically return to the current time after a few seconds.
4. After setting the delay brew start time, prepare coffee following the directions in 'Brewing coffee' section of this book.
5. Press the 'DELAY BREW' button. The green ON/OFF light will illuminate.
6. Your coffee maker will automatically begin brewing at the pre-set time. When the brew cycle begins, the 'ON/OFF' indicator light will illuminate red to indicate the coffee maker is in operation.



NOTE

To use the delay brew function, the coffee maker must be powered on and not switched off at the power outlet. If the power is switched off, the time and delay brew program will need to be set again.



NOTE

If you do not want to serve immediately, the coffee can be kept warm on the warming plate.

The coffee maker will automatically turn off after 2 hours, the ON/OFF indicator light will illuminate red if it has not been manually turned off at the completion of brewing.

BREWING TEA

The coffee maker can be used for brewing tea if desired. Simply place 4-6 teabags or teaspoons of tea in the stainless steel mesh filter basket and follow the same procedure as for brewing coffee. It is advisable to thoroughly clean out the coffee residue in the stainless steel mesh filter basket and filter basket holder before brewing tea and vice versa.



WARNING

Do not immerse the drip filter coffee maker body in water or any other liquid.



Tips

There are a few small tips that if followed correctly, can result in the best tasting coffee from your Stainless Drip Filter.

- Coffee strength and flavour is an individual preference. It is suggested that you experiment with different brands, flavours and amounts of coffee.
- Always use finely ground coffee for drip filter coffee makers. If the coffee is too course, the water will pass rapidly through the coffee maker resulting in poor extraction of coffee flavour.
- To maintain coffee freshness, store opened packets of coffee in an airtight container in a cool dark place.
- Brewed coffee can be kept hot for an indefinite period, however, the flavour of the coffee will deteriorate with time.



Care, Cleaning & Storage

CARE & CLEANING

Before cleaning ensure that the ON/OFF button is in the off position. Switch off at the power outlet, unplug the power cord and allow the coffee maker to cool.

The stainless steel mesh filter basket, filter basket holder, scoop and carafe can be placed in the dishwasher or washed in warm soapy water then rinsed and dried thoroughly. The outer housing can be cleaned with a soft, damp cloth (do not use abrasive agents or cloths which can damage the surface). The warming plate can be wiped with a clean damp cloth when necessary.



NOTE

Do not try to clean the inside of the water tank with a cloth, this will leave a residue of lint and may clog your coffee maker. Just rinse with cold water periodically.

REMOVAL OF MINERAL DEPOSITS

Mineral deposits from hard water can build up in the water tank and internal tubes. If these deposits are not removed, the brew time will be extended.

To remove mineral deposits

1. Fill the water tank to the maximum mark with 2/3 cold tap water and 1/3 white vinegar.
2. Ensure the filter holder is firmly positioned into place. Close the water tank lid.
3. Position the carafe, with the lid on, on the hot plate and switch the coffee maker on. Allow the mixture to drip through the machine until the cycle is complete.
4. Once the cycle is complete empty the carafe and refill the water tank with water. Place the carafe back into position on the hot plate.
5. Switch the coffee maker on and allow the fresh water to drip through. Once the cycle is complete, switch the machine off and empty the carafe. Mineral deposits will have been removed from the water tank and internal pipes.

STORAGE

- Press the ON/OFF button to off, switch off at the power outlet and unplug.
- Ensure all water has been removed from the coffee maker.
- Wash the mesh filter basket and holder, carafe and lid in warm, soapy water. Rinse and dry thoroughly.
- Replace all parts back into position in the coffee maker and close the water tank lid.
- Store upright on the bench top or in a cupboard.



Notes



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment and Aroma Style Electronic are trademarks of Breville Pty. Ltd. A.B.N. 98 000 092 928.

Copyright Breville Pty. Ltd. 2020.

Due to continued product improvement, the products illustrated/photographed in this brochure may vary slightly from the actual product.