

the Brunch Duo™ Toaster & Kettle

Instruction Book - Suits all LKT682 models



Breville®



CONTENTS

2 Limited Product Warranty

LTA682 Toaster:

2 Breville® Recommends Safety First

7 Components

8 Functions

10 Care & Cleaning

LKE682 Kettle:

11 Breville® Recommends Safety First

16 Components

17 Functions

18 Care & Cleaning



LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit



QR149

www.breville.com.
Alternatively, call the
Breville Service Centre
(see back cover for
QR149 contact details).

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the toaster for the first time and save for future reference.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this instruction book.
- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster (where applicable).

- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate the toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the toasting slot.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of the toasting slots to warm toast as this may prevent correct air circulation and damage the toaster.
- Do not move the toaster whilst in operation or when hot.
- The temperature of accessible surfaces may be high when the toaster is in operation and also for some time after use.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Do not place the toaster in enclosed areas.
- Do not leave unattended when in use as toast may jam or wedge in the toasting slot. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element but cause electrocution.
- Do not touch hot surfaces. Use side areas and oven mitts for lifting and carrying the toaster.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the toaster, when the toaster is not in use and before cleaning or storing.

- Do not operate the toaster without the removable crumb tray in place.
- The crumb tray should be regularly cleaned. Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb tray regularly may result in a fire hazard. To clean any additional crumbs, turn the toaster upside down over a sink and shake crumbs free.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Do not place the toaster in direct sunlight. Colour fading and discolouration may occur when the toaster is consistently exposed to UV light.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
-  The symbol on the product or on its packaging  indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 220-240V power outlet.
- The appliance must be used on a properly grounded outlet. If you are not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.

- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.

- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

NOTE

This Breville toaster is electronically controlled and will not operate until the toaster is plugged into a 220-240V power outlet, switched on and the lever latched down.



Hot Surfaces
Do Not Touch

This symbol indicates, temperature of accessible surfaces may be high when the appliance is operating and for some time after use.

WARNING

- Never operate the toaster on its side.
- Never add butter, spreads, or other food substances to bread, muffins, or crumpets before toasting, as this can cause fire or electrocution.

- This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or a fire.

WARNING

 
Do not carry or move the toaster by holding the top metal cover between toasting slots as sharp edges may cause injury.

POWER MANAGEMENT FUNCTION


The appliance has a power management function. The appliance switches to off mode immediately once it is plugged in or automatically operation. The off mode power consumption is less than 0.3W. Under this mode, the appliance consumes low power if it remains plugged into a switched-on power outlet.

To save energy, turn the appliance to off mode, switch off at the power outlet and unplug at the power outlet if the appliance is not in use.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS



COMPONENTS

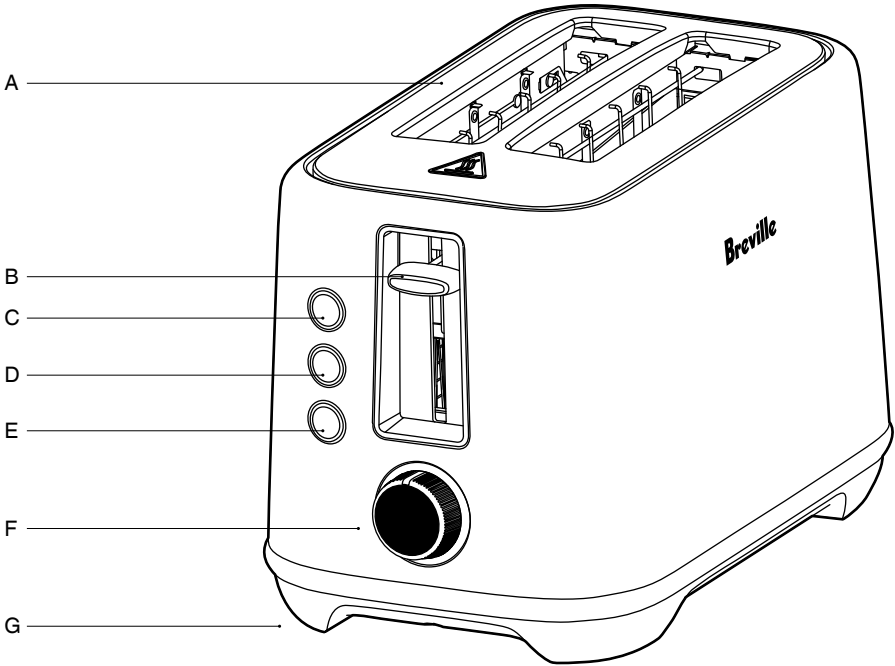 

- A. Self-centring, Extra Wide and Deep Toasting Slots
- B. Carriage Control Lever with LIFT & LOOK™/HIGH LIFT
- C. A BIT MORE® Button
- D. FROZEN/FRUIT BREAD Button
- E. CANCEL Button
- F. Browning Control Dial
- G. Non-slip Feet

Not Shown

- Power Cord Storage
- Slide Out Crumb Tray
- Power Cord and Plug



FUNCTIONS

BEFORE FIRST USE

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Place the toaster on a dry, level heat resistant surface and unwrap the power cord from the base of the toaster.
2. Insert the power plug into a 220-240 volt power outlet and then turn the power on at the power outlet.



NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

OPERATING YOUR TOASTER

1. Place bread, crumpets, bagels, English muffins etc. into each of the toasting slots. Ensure the items are not too large or thick to fit the slots. If toasting 1 slice only, it is recommended to lower the browning setting to prevent burning.
2. Turn the browning control dial to select the desired browning setting from '1' lightest to '6' darkest.



NOTE

When using the toaster for the first time, we suggest toasting the bread on setting 3 or 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

3. To start the toasting cycle, press down the lever until it locks into place.



NOTE

If the toaster is not plugged in and switched on at the power outlet, the lever will not lock into position.

4. If the toaster is not plugged in and switched on at the power outlet, the lever will not lock into position.



WARNING

Do not leave unattended when in use as toast may jam or wedge in the toasting slot. Never attempt to extract toast, crumpets or muffins or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements can cause electrocution and may also damage the elements.

LIFT & LOOK™ FEATURE

This feature can be used to check on the progress of the toasting cycle without interrupting it. Simply raise the carriage control lever to check on the browning progress of the toast and lower it down again if you wish to continue to toast.

HIGH LIFT FEATURE

Once the toasting cycle has completed, to remove smaller items such as crumpets and muffins, lift the carriage control lever to the HIGH LIFT position, approximately 1cm above the starting position. In the unlikely event that the bread, crumpet or muffins become jammed, switch the power off at the power outlet, then remove the power plug from the power outlet and use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

A BIT MORE® SETTING

For additional toasting time or reheating, use this feature after the toasting cycle has completed. Once the toast has popped up, lower the lever back down and then press the A BIT MORE® button.



NOTE

The A BIT MORE® setting will bypass the normal toasting cycle and toast for approximately 30 seconds when using the toast setting or approximately 15 seconds with the FRUIT BREAD setting.

FROZEN/FRUIT BREAD SETTING

Frozen Bread

1. Place the frozen bread into the toasting slots.
2. Select the browning setting you would normally select if the bread was fresh.
3. Press down the lever until it locks into place.
4. Press the FROZEN/FRUIT BREAD button once and the button will illuminate white.
5. Once the toasting cycle is complete the toasting slot will move to the raised position. Remove the toast.

Fruit Bread

1. Place the fruit bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control dial from setting '1' (lightest) to '6' (darkest).
3. Press down the lever until it locks into place.
4. Press the FROZEN/FRUIT BREAD button twice and the button will illuminate blue.
5. Once the toasting cycle is complete the toasting slot will move to the raised position. Remove the toast.



NOTE

The FROZEN BREAD and A BIT MORE® functions cannot operate at the same time.

CANCEL BUTTON

Toasting can be stopped at any time by pressing the CANCEL button. This will cancel the operation, and the toasting slot will move to the raised position.



CARE & CLEANING

1. Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. The crumb tray will need to be cleaned regularly to avoid breadcrumbs, dried fruits, crusts etc. accumulating in the bottom of the toaster.
3. Slide the crumb tray out from under the toaster carriage by pulling outwards away from the toaster.
4. Discard the crumbs and wipe tray over with a soft, damp cloth and dry thoroughly.
5. To remove any additional crumbs that have accumulated in the toasting carriages, turn the toaster upside down over a sink or bin and shake crumbs free.
6. Ensure crumb tray is dried thoroughly. Place crumb tray back into position by sliding the tray back and push in until completely locked into place.
7. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.



NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing.

Follow the directions for cleaning and wrap the power cord in the cord wrap under the toaster.

Store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.



WARNING

Do not immerse the toaster or power cord in water or any other liquid.



WARNING

Do not use the toaster without the slide-out crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard.



NOTE

Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the toaster. If the toaster is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the exterior surface of the toaster. Dry thoroughly before use.

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Remove and safely discard any packaging material and promotional labels before using the kettle for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this kettle.
- Always ensure the kettle is properly assembled before use. Follow the instructions provided in this book.
- The kettle must be used only with the power base supplied.

- This kettle is not intended to be operated by means of an external timer or separate remote-control system.
- This kettle has been designed specifically for the purpose of boiling drinking quality water only. Do not use to boil any other liquids or foodstuffs.
- Do not place the kettle near the edge of a bench or table during operation. Ensure surface is level, clean and free of water or other substances.
- Do not operate the kettle on a sink drain board.
- Do not touch hot surfaces. Use the handle for lifting and carrying the kettle.
- Do not place objects on top of the kettle lid.
- Do not release the lid while the water is boiling. Ensure the lid is closed whilst boiling.
- Do not press the lid release button to open the lid during and after operation. This may result in boiling water splashing from the kettle. Pour out all the hot water from the kettle before opening the lid to refill.
- Never immerse the kettle base, power base, power cord or power plug in water, or allow moisture to come into contact with these parts.

- To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.
- Do not move the kettle while it is switched on.
- Always ensure the kettle switch is in the 'OFF' position, then turn the power off at the power outlet and remove the power plug from the power outlet before attempting to move the kettle, when the kettle is not in use and before cleaning and storing.
- Use caution when pouring water from the kettle, as boiling water and steam will scald. Do not pour the water too quickly.
- To protect against electric shock, do not immerse the kettle base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not remove the kettle from the power base during operation. Ensure the kettle has switched off after the water has boiled, before removing the kettle from the power base.
- If the kettle is removed from the power base during the boiling cycle, the kettle will automatically switch off.
- Always fill the kettle with water between the minimum (MIN) and maximum (MAX) marks on the water window on the kettle. Too little water will result in the kettle switching 'OFF'. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.
- The lid should always be locked firmly in place in the closed position before and during use. Do not open the lid during operation as this may result in boiling water splashing from the kettle. Pour all the hot water from the kettle before opening the lid to refill.
- Do not place the kettle in direct sunlight. Colour fading and discolouration may occur when the kettle is consistently exposed to sunlight.
- When using the kettle, avoid spillage of water on the kettle base and connector as this may cause damage to the kettle.
- Care should be taken when handling the kettle during use, ensuring that the kettle body and parts are not touched as these may still be hot due to residual heat after boiling. Always ensure to use the kettle handle when removing the kettle or pouring water after kettle has boiled.
- Do not use chemicals, steel wool, or abrasive cleaners to clean the outside of the kettle.



- The filter could become damaged with time. Check regularly and replace if found to be damaged.
- Ensure the kettle has cooled down before attempting to clean the filter and kettle.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



WARNING

Do not operate the kettle on an inclined plane. Do not operate the kettle unless the element is fully immersed. Do not move while the kettle is switched on.

- Keep the kettle clean. Follow the cleaning instructions provided in this book.

-  The symbol on the product or on its packaging  indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 220-240V power outlet.
- The appliance must be used on a properly grounded outlet. If not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.

- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.

- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

POWER MANAGEMENT FUNCTION

 
The appliance has a power management function. The appliance switches to off mode one minute after it is plugged in or automatically if there is no further operation. The off mode power consumption is less than 0.3W. Under this mode, the appliance consumes low power if it remains plugged into a switched-on power outlet.

To save energy, turn the appliance to off mode, switch off at the power outlet and unplug at the power outlet if the appliance is not in use.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



COMPONENTS

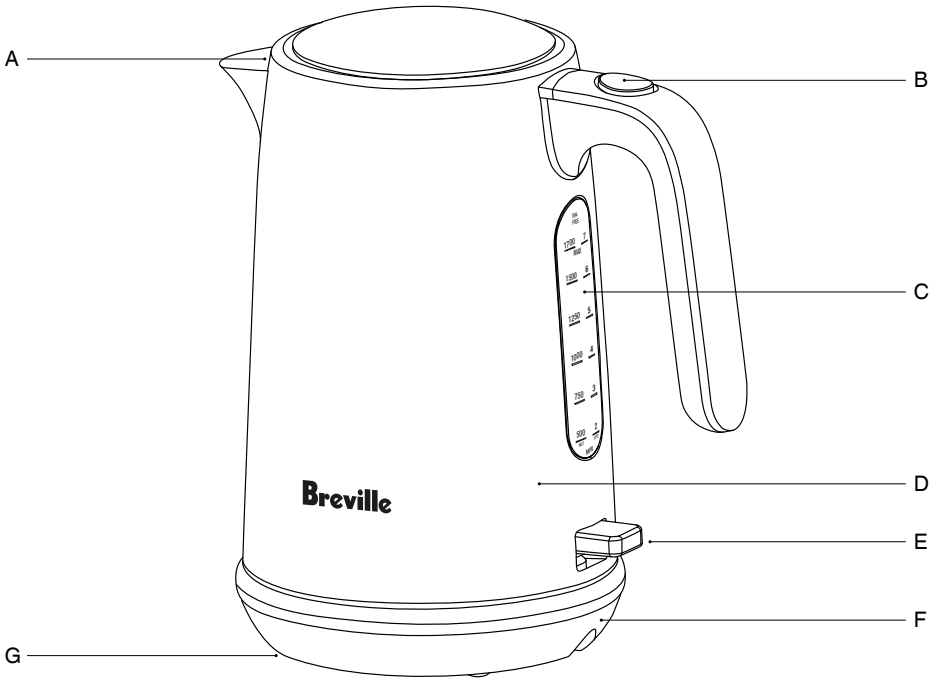

- A. Removable Scale Filter
- B. Ergonomic Handle with Lid Release Button
- C. BPA Free* Water Window
- D. Premium Stainless Steel Cord Free Kettle (1.7L/ 7 Cup Capacity)
- E. Power ON/OFF Switch with Illuminated 'ON' Light
- F. Power Base
- G. Non-slip Feet

Not Shown

- Safety Boil Dry Protection
- Power Cord Storage

*Breville® makes its BPA free claim for this product based on independent laboratory testing performed for all the food contact plastic materials of the product per Commission Regulation (EU) 2024/3190.



FUNCTIONS

BEFORE FIRST USE

Before first use, remove any packaging material or promotional labels attached to your kettle. It is recommended that before first use, the kettle is filled to the maximum level with cold tap water, boiled and water discarded. Your kettle will only operate when positioned on the power base with the 'ON/OFF' switch in the 'ON' position. The kettle will automatically switch off once the water has boiled.

OPERATING YOUR KETTLE

1. To fill the kettle, remove it from the power base and open the lid by pressing the lid release button. Fill with the desired amount of water, then close the lid ensuring it is locked firmly into place.



NOTE

Always fill the kettle between the minimum (500ml) and maximum (1700ml) marks on the water window. Too little water will result in the kettle switching off due to the safety boil dry protection. Filling above the maximum mark (MAX) may result in boiling water splashing from the kettle.

2. Position the kettle securely onto the power base. Insert the power plug into a 220-240V power outlet and switch the outlet on.
3. Press the 'ON/OFF' switch to the 'ON' position for water to boil.



NOTE

This kettle must only be used with the power base supplied. Use caution when pouring water from your kettle, as boiling water will scald. Do not pour the water too quickly.

The kettle will automatically switch 'OFF' once the water has boiled. Lift the kettle from the power base and pour the water. Take care to hold the kettle handle, especially when filled to the maximum level. To reboil, it may be necessary to wait for a few seconds to allow the control to reset.

If further heating of the kettle is not required, switch 'OFF' at the power outlet, unplug the power cord and empty the water from the kettle. Replace the kettle onto the power base and close the lid.

SAFETY BOIL DRY PROTECTION

The kettle is fitted with a safety device, which protects against overheating should the appliance be operated with insufficient water. If this occurs, the kettle will stop heating. Switch 'OFF' at the power outlet and allow kettle to cool before refilling. Remove the kettle from the power base and add water. Return the kettle to the power base. The safety device will then automatically reset when the kettle has cooled down.



CARE & CLEANING

Always switch 'OFF' at the power outlet and unplug the appliance from the power outlet before cleaning.

REMOVABLE FILTER

The kettle features a removable mesh filter to remove scale deposits for cleaner water. To remove the scale deposits from the filter, open the lid and slide the filter up and out of the kettle.

The filter can be cleaned by running under hot water and rubbing with a cleaning cloth or brush. To replace filter, simply slide the filter down into the slot behind the spout of the kettle and push back into position.



NOTE

The filter could become damaged with time. Please check regularly and replace if found damaged.



WARNING

Never immerse the kettle base, power base, power cord or power plug in water, or allow moisture to come into contact with these parts.



WARNING

To prevent damage to the kettle do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

MINERAL DEPOSITS AND DISCOLOURATION

Due to the large surface area of the immersed element (interior base), discolouration due to mineral deposits from tap water may appear more obvious by leaving a brown stain on the base. **THIS IS NOT RUST.** Discolouration may be removed by purchasing the Breville Kettle Cleaner and following the instructions on the packaging.

ALTERNATIVELY:

1. Fill the kettle until 2/3 full with 1 part vinegar (or a few slices of lemon) and 2 parts water, bring to the boil and allow to stand overnight.
2. Empty the solution from the kettle. Fill the kettle with clean water, bring to boil and discard the water. Repeat and the kettle will be ready for use.

TO CLEAN THE EXTERIOR

The exterior of the kettle and power base should be wiped with a damp cloth then polished with a soft, dry cloth.

STORAGE

Ensure the kettle is switched off, clean and dry before storing. Ensure that the lid is closed and locked securely into place. Wrap the power cord around the power cord storage under the power base. Stand the kettle upright on the power base. Do not store anything on top.



NOTES

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville Logo, Brunch Duo, LIFT & LOOK, and A BIT MORE are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.
Copyright Breville Pty. Ltd. 2025.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.