 


the Easy Wave™ Inverter Range

Instruction Book – LMO425 & LMO434

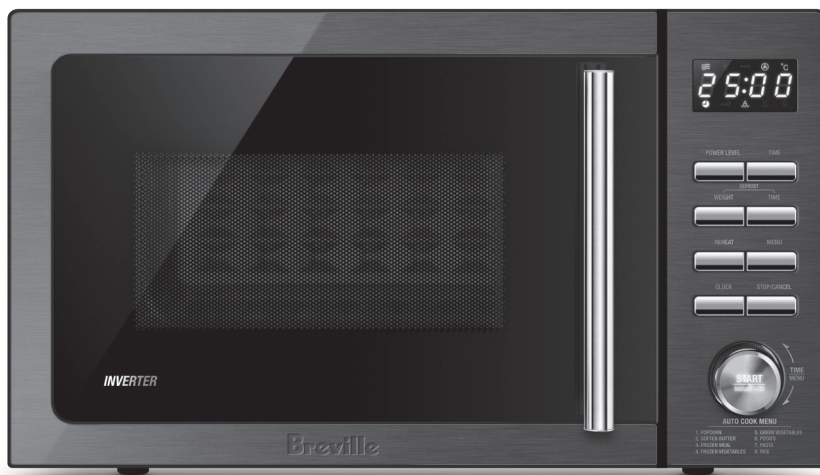

Breville®



 
CONTENTS

- 2 Limited Product Warranty
- 2 Breville® Recommends Safety First
- 13 Components
- 14 Controls
- 15 Functions
- 20 Care & Cleaning
- 21 Troubleshooting



LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit **www.breville.com**. Alternatively, call the Breville Service Centre (see back cover for QR149 contact details).

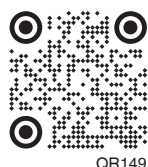

QR149

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE



WARNING

- To reduce the risk of burns, explosion, electric shock, or to prevent damage to property, personal injury, or loss of life, or exposure to excessive microwave energy:
- Remove and safely discard any packaging material and promotional labels before using the Breville microwave oven for the first time.

- Do not remove the microwave guide cover placed on the right panel inside the cavity. This sheet is not part of the packaging and needs to remain inside the microwave cavity.
- Read and follow the specific “PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY” on page 10.
- This appliance must be grounded. Connect only to a properly grounded outlet. See “GROUNDING INSTRUCTIONS” on page 12.
- The outer housing of the microwave oven may be hot during and after cooking. Please do not touch hot surfaces. Always keep the power cord of this microwave oven, and those of other appliances near the microwave oven, clear from the microwave oven housing.
- The microwave oven is not suitable to be used in a small appliance enclosure. Ensure to leave adequate space all around the microwave oven. Minimum space of 20cm is recommended.
- Install and locate this appliance only in accordance with the supplied installation instructions.
- This appliance can be used by children aged from 8 years and above and persons with physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be performed by children unless they are 8 years and older and supervised.
- Keep the appliance and its power cord out of reach of children less than 8 years old.
- Some products such as whole eggs and sealed containers (for example, closed glass jars), have the potential to explode and should not be heated in this microwave oven.
- Use this appliance only for its intended use as described in the manual. Do not use corrosive chemicals or vapours in this appliance. This type of microwave oven is specifically designed to heat, cook, or dry food. It is not designed for industrial or laboratory use.



WARNING

As with any appliance, close supervision is required when used by children.

- Regularly inspect the power cord. Do not operate this appliance if it has a damaged

power cord or plug, when it is not working properly, or when it has been damaged or dropped. Immediately stop using the appliance and contact Breville Customer Service Centre.

- The power cord cannot be replaced. If the power cord is damaged, the appliance should be scrapped. This appliance shall be serviced only by qualified personnel. Contact Breville Customer Service Centre or the nearest Breville Authorised Service Centre for examination, repair or adjustment.
- Do not cover or block any openings on the appliance.
- Do not store this appliance outdoors.
- Do not use this product near water, for example, near a kitchen sink, in a wet basement, near a swimming pool, or similar location.
- Do not immerse power cord or plug in water.
- Keep power cord away from heated surfaces.
- Do not let the power cord hang over edge of table or counter, touch hot surfaces or become knotted.
- To reduce the risk of fire in the microwave oven cavity:
 - i) Do not overcook food.
Carefully attend appliance
 - when paper, plastic, or other combustible materials are placed inside the microwave oven to facilitate cooking.
 - ii) Remove wire twist-ties from paper or plastic bags before placing bag in microwave oven.
 - iii) In the event materials inside the microwave oven ignite, keep the microwave oven door closed, turn the microwave oven off, and disconnect the power cord, or shut off power at the fuse or circuit breaker panel.
 - iv) Do not use the cavity for storage purpose. Do not leave paper products, cooking utensils, or food in the cavity when not in use.
- Always operate the microwave oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the microwave oven without the turntable roller and glass turntable in place. Ensure the glass turntable is positioned correctly into the indents on the turntable roller.
- Never use the microwave oven without food or water in the microwave oven cavity. Operating the microwave oven when empty could cause damage to the appliance.

- Do not leave the microwave oven unattended when in use.
- Do not touch hot surfaces. Allow the microwave oven to cool entirely before moving or cleaning any parts.
- Always turn the microwave oven off by pressing the STOP/CANCEL button, switch off at the power outlet and unplug at the power outlet when it is not in use.
- Before cleaning, always press the STOP/CANCEL button, switch off at the power outlet and unplug at the power outlet.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.
- When cleaning surfaces of door and microwave oven that come together on closing the door, use only mild, non-abrasive soaps, or detergents applied with a sponge or soft cloth. The use of corrosive chemicals in cleaning will damage the appliance and may result in radiation leaks.
- The appliance shall not be cleaned with a steam cleaner.
- Do not place the microwave oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.
- Do not place the microwave oven on or near a hot gas or electric burner, or where it could touch a heated oven.
- When using the microwave oven, provide adequate air space above and on all sides for air circulation.
- Microwave oven is to be used as a free-standing unit. Do not build in or enclose microwave oven in a cabinet or confined space as it will cause overheating.
- Do not use the microwave oven on a metal surface, for example a sink drain board.
- The microwave oven is not intended to be operated by means of external timer or separate remote-control system.
- Liquids, such as water, coffee or tea can overheat beyond the boiling point without appearing to be boiling. Visible bubbling or boiling when the container is removed from the microwave oven is not always present. **THIS COULD RESULT IN VERY HOT LIQUIDS SUDDENLY BOILING OVER WHEN THE CONTAINER IS DISTURBED OR A UTENSIL IS INSERTED INTO THE LIQUID.**
- 15 mins after plugged in and no further operation, or finished cooking operation, the appliance goes into standby mode. The power measurement of standby mode does not exceed 0.8W.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.
- The appliance must be used on a properly grounded outlet. If you are not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as a hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance OFF, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance OFF switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.
- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.

- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance.

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- The microwave oven is intended for heating food and beverages.
- Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloths and similar may lead to risk of injury, ignition or fire.
- Ensure all food containers and/or plates are suitable for use in the microwave oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Always monitor food and liquids heating or cooking in the microwave oven due to the possibility of containers igniting.
- All suitable glass or plastic food containers should be used in strict compliance with the cookware manufacturer's recommendations.
- Food and/or liquids should not be heated or cooked directly on the glass turntable.
- They must be placed into a suitable microwave-proof container before placing onto the glass turntable.
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting.

- Metal clips or twist ties should be removed from the packaging as these could cause sparking and/or fire.
- Do not use recycled paper or paper towels when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the microwave oven as these could cause sparking and/or fire except the accessories provided with this microwave oven.
- Food grade foil should not be used in the microwave oven as this could cause sparking and/or fire.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the microwave oven.
- Feeding bottles and baby food jars should have lids and caps removed before warming or heating in the microwave oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.
- Always ensure the temperature of food or drink which has been heated or cooked in the microwave oven has been tested before eating, drinking or serving.
- Some containers and/or plates may appear suitable for use in the microwave oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Utensils should be checked to ensure that they are suitable for use in microwave ovens.
- Allow proper cool down time for heated food or drink before handling or serving from the microwave oven. Always test before eating, drinking or serving to others, especially children, disabled or elderly.
- If cooking meat, poultry or fish, always make sure they are cooked thoroughly and measured with an appropriate temperature registering device to help protect against foodborne illness.
- Do not heat popcorn in the microwave oven unless it has been commercially packaged for microwave oven use. There may be several un-popped kernels that may overcook and burn when popping popcorn.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc.) without first piercing the membrane several times with a fork or similar utensil.

- “Boilable” cooking pouches, bags or containers should always be slit, pierced or vented as directed by the package. If they are not, plastic or packaging could burst resulting in burns and injury.
- Always allow items to cool down before opening or handling. Use caution when opening or handling.
- Use caution when opening bags, pouches, lids or containers as hot steam, food or liquid can escape causing burns or injury.
- Eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the microwave oven as they may explode during cooking, at the end of cooking or after removing from microwave oven.
- Caution should be taken when toasting and grilling high oil content foods, such as pine nuts and walnuts. They may catch fire. If this occurs, please keep the microwave oven door closed and switch off and unplug microwave oven until flame has extinguished.
- Do not heat oil or fat in the microwave oven. Doing so may cause the microwave oven and/or the oil to overheat and/or ignite.
- If smoke is observed, switch off and unplug the microwave oven at the power outlet. Keep the door closed to stifle any flames.
- If you see any sparks, arcing or flashing within the microwave oven, press the STOP/CLEAR button and correct the problem or contact Breville Customer Service Centre for assistance.
- Wipe the microwave oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the microwave oven cavity to overheat and may cause the microwave oven to smoke or catch fire.
- Allow glass turntable to cool down to room temperature before washing or placing in cold water.
- The microwave oven should be cleaned regularly and any food splattering inside the cavity should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the microwave oven and possibly resulting in a hazardous situation.
- Do not attempt to operate the microwave oven by any method other than those described in this instruction book.

- When heating food in plastic or paper containers, keep an eye on the microwave oven due to the possibility of ignition.



WARNING

Liquids and other foods must not be heated in sealed containers since they are liable to explode.

- Oversized food or oversized metal utensils should not be inserted in a microwave oven as they may create fire or risk of electric shock.
- Do not store any materials, other than manufacturer's recommended accessories, in this microwave oven when not in use.
- Do not cover racks or any other part of the microwave oven with metal foil. This will cause overheating of the microwave oven.
- Do not clean with metal scouring pads. Pieces can burn off the pad and touch electrical parts involving a risk of electric shock.

PRECAUTIONS TO AVOID POSSIBLE EXPOSURE TO EXCESSIVE MICROWAVE ENERGY

- Do not attempt to operate this microwave oven with the door open since open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks.
- Do not put any foreign material between the door and door jamb of the microwave oven.
- Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.



WARNING

If the door or door seals are damaged, the microwave oven must not be operated. Immediately cease use and call Breville Customer Service Centre for examination, repair or adjustment. It is particularly important that the microwave oven door closes properly and that there is no damage to the:

(1) Door (bent), (2) Hinges and latches (broken or loosened), (3) Door seals and sealing surfaces.



WARNING

It is hazardous for anyone other than a qualified service technician to carry out any service or repair operation.

SUPERHEATED LIQUIDS

To reduce this risk of injury to persons:

- Do not overheat the liquid.
- Stir the liquid both before and halfway through heating it.
- Do not use straight-sided containers with narrow necks.
- After heating, allow the container to stand in the microwave oven for a short time before removing the container.
- Use extreme care when inserting a spoon or other utensil into the container.



CAUTION

Changes or modifications not expressly approved by the party responsible for compliance could void the user's authority to operate the product.



NOTE

This equipment generates, uses and can radiate radio frequency energy and, if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television reception, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna. Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the dealer or an experienced radio/TV technician for help.

GROUNDING INSTRUCTIONS



WARNING

Improper use of the grounding can result in a risk of electric shock.

- This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electric shock by providing an escape wire for the electric current. This appliance is equipped with a power cord having a grounding wire and grounding plug. The plug must be plugged into an outlet that is properly installed and grounded.

- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
- Do not use an extension cord. If the power cord is too short, have a qualified electrician or serviceman install an outlet near the appliance.



NOTE

Do not use an adapter plug with this appliance.


Microwave Oven Specifications

Specification	LMO425	LMO434
Power Consumption	230-240V/50Hz, 1440W	230-240V/50Hz, 1560W
Power Output	900W	1000W
Product Dimensions (mm)	L480*W382*H292.5	L510*W413.5*H304.5
Glass Turntable Diameter	285mm	315mm
Capacity	25 Litres	34 Litres

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS



 
COMPONENTS

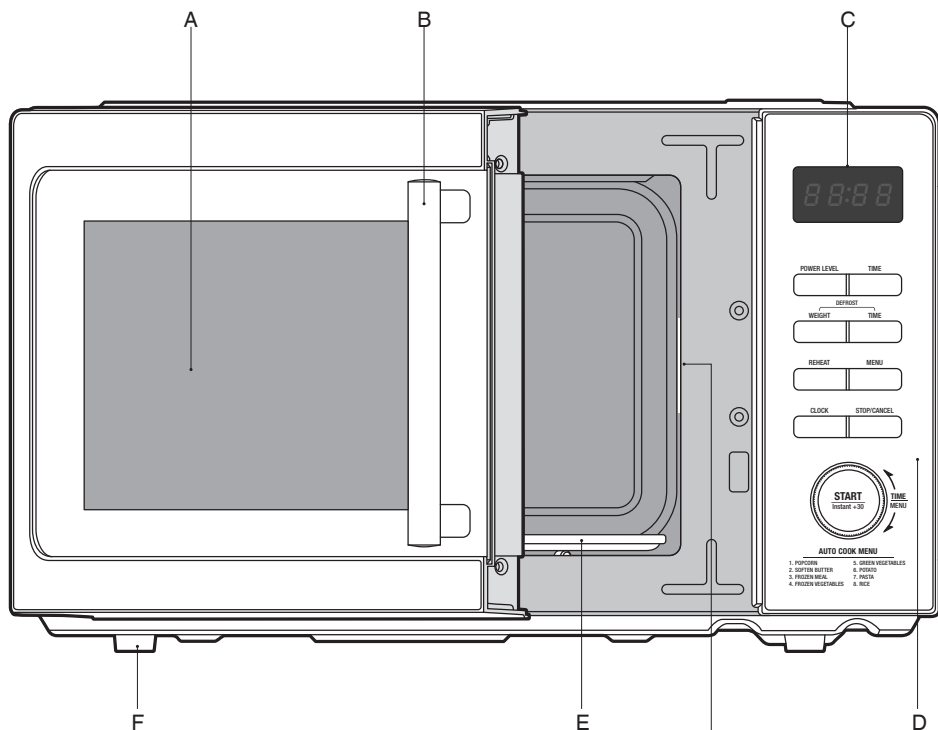

- A. Viewing window
- B. Door handle
- C. LED display
- D. Control panel
- E. Glass turntable
- F. Non-slip feet
- G. Microwave guide cover

Not Shown

 - Power cord and plug
- Turntable roller

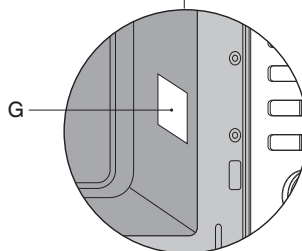


NOTE

Never remove the microwave guide cover.



 CONTROLS

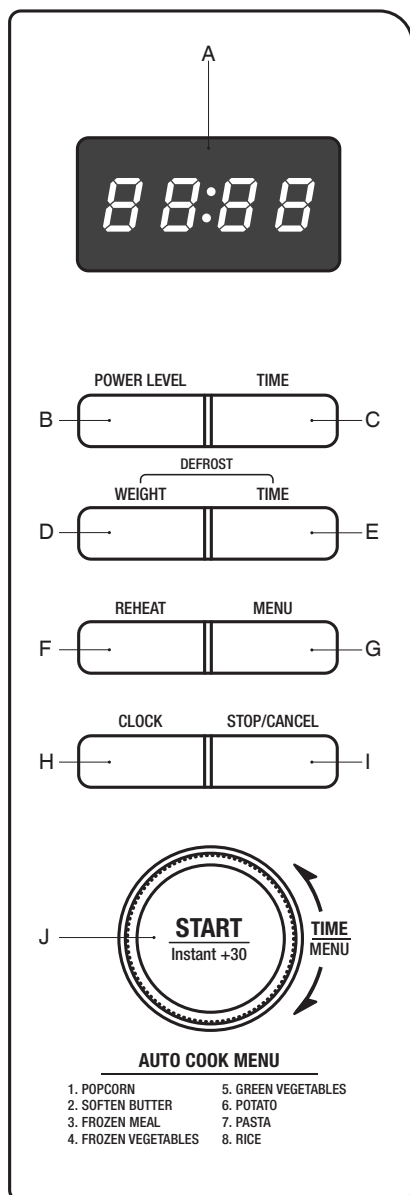

A. LED digital display screen

Displays cooking progress, functions, power and clock.

B. POWER LEVEL

Select power level from 10% to 100%.

C. TIME

Use to adjust cooking time.

D. WEIGHT DEFROST

Defrost based on weight. Time and power level will automatically adjust based on weight selected.

E. TIME DEFROST

Defrost based on time. Power level is automatically set.

F. REHEAT

Reheat time and power level will be automatically set based on weight.

G. MENU

Navigate between program options;

- (F1) Popcorn
- (F2) Soften Butter
- (F3) Frozen Meal
- (F4) Frozen Vegetables
- (F5) Green Vegetables
- (F6) Potato
- (F7) Pasta
- (F8) Rice

H. CLOCK

Use to adjust clock time.

I. STOP/CANCEL

When in operation, press once to stop, and twice to cancel program.

J. START/+30 SEC (Push Dial)

- Press for +30 SEC Instant Start. Each additional press will add 30 seconds to the cooking time.
- Press to confirm selection and begin cooking.
- Turn to switch between programs, adjust the time and set power levels.



FUNCTIONS

BEFORE FIRST USE

- Before first use, remove all promotional stickers and packaging material.
 - Carefully unpack the microwave oven and keep all packaging material until all the parts of the microwave oven have been found and the appliance has been assembled (if applicable).
 - To remove any dust that may have accumulated during packing, wipe the interior and exterior of the microwave oven with a soft, damp cloth then dry thoroughly.
2. Check the microwave oven for any damage, such as a misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door. If there is any damage, do not operate the microwave oven and contact a Breville service centre.
 3. Plug the power cord into a 230V or 240V power outlet and switch on the power outlet. The microwave LED display will illuminate indicating it is ready.



NOTE

- Do not remove the feet from the bottom of the microwave oven.
- Blocking the air intake and/or outlet openings can damage the microwave oven.
- Place the microwave oven as far away from radios and televisions as possible.
- The operation of a microwave oven may cause interference to your radio or television reception.
- The microwave must not be placed in a cabinet.



WARNING

- Do not install the microwave oven over a range cooktop or other heat producing appliances.
- If installed near or over a heat source, the microwave oven could be damaged, and the warranty would be void.
- Do not immerse the microwave oven, power cord or plug in water or any other liquid.

INSTALLATION

A minimum clearance of 20cm on each side and 30cm above the microwave is required between the microwave oven and any adjacent walls.

1. Select a level surface that provides enough open space for the air intake and/or outlet vents.

ASSEMBLING THE GLASS TURNTABLE

1. Insert the turntable roller into position in the microwave oven cavity base.
2. Place the glass turntable on top of the turntable roller, matching the indents of the turntable roller in the centre.

SAFETY CHILD LOCK

- The Safety Child Lock can be activated to prevent unsupervised operation of the microwave oven by children.
 - When activated, the microwave oven cannot be operated and the Safety Child Lock icon will illuminate on the display.
1. To set the Safety Child Lock, press and hold the STOP/CANCEL button for 3 seconds until the Safety Child Lock icon illuminates on the display.
 2. To cancel the Safety Child Lock, press and hold the STOP/CANCEL button for 3 seconds until the Safety Child Lock icon is no longer displayed on the screen.

MUTE

When mute is activated, all microwave sounds will be turned off.

1. To activate mute, press and hold the CLOCK and STOP/CANCEL buttons simultaneously for 3 seconds.
2. To deactivate mute and restore microwave sounds, press and hold CLOCK and STOP/CANCEL buttons simultaneously for 3 seconds.

SETTING THE CLOCK

When the microwave is switched on, the default time displayed on the LED will be 1:00. Time will be displayed in a 24 hour format.

EXAMPLE: To set the clock time to 8:30.

1. Press the CLOCK button once and the hours digits will flash.
2. Turn the START/+30 SEC dial until '8' flashes on the LED display. Press the CLOCK button to set the hour. The minutes digits will begin to flash.



3. Turn the START/+30 SEC dial until '8:30' is displayed. Press the CLOCK button to confirm selection.



+30 SEC INSTANT START

1. Push the START/+30 SEC dial once, to start cooking for 30 seconds at 100% power. Each additional press will increase the cooking time in 30 second increments.
2. Press the STOP/CANCEL button once to pause or twice to cancel.



NOTE

The +30 SEC dial can also be pressed during operation to increase cooking time.

SET POWER LEVEL

1. Press the POWER LEVEL button to select from 10-100% power (represented as P10-P100).
2. Press the POWER LEVEL button repeatedly or turn the START/+30 SEC dial to cycle through the power level options.
3. Push the START/+30 SEC dial to confirm selection.
4. Turn the dial to adjust the cooking time. Press the START/+30 SEC dial again to begin cooking.
5. Press the STOP/CANCEL button once to pause or twice to cancel.

COOKING POWER LEVEL	DISPLAY
---------------------	---------

100%	P100
90%	P90
80%	P80
70%	P70
60%	P60
50%	P50
40%	P40
30%	P30
20%	P20
10%	P10

SET COOKING TIME

- The cooking time will increase in 10 second increments up to 5 minutes, 30 seconds up to 10 minutes, then 1 minute increments up to 60 minutes.
 - The default cooking power is set to 100% and the default cooking time is 3:00 minutes.
1. Press the TIME button, then turn the START/+30 SEC dial clockwise to increase cooking time, or anti-clockwise to decrease.
 2. Press the START/+30 SEC dial to start.
 3. Press the STOP/CANCEL button once to pause or twice to cancel.

WEIGHT DEFROST

- When using WEIGHT DEFROST, the time and defrosting power level are adjusted automatically once the weight is selected.
 - Weight options range between 200g, 500g, 1000g and 1500g.
1. Place food to be defrosted inside the microwave cavity.
 2. Press the WEIGHT DEFROST button. To select from weight options, turn the START/+30 SEC dial or press WEIGHT DEFROST repeatedly.
 3. Push the START/+30 SEC dial to start.
 4. During defrosting, the microwave will sound 3 beeps indicating the need to turn the food over. Once the food has been turned, close the microwave door and push the START/+30 SEC dial to resume defrosting.
 5. Press the STOP/CANCEL button once to pause or twice to cancel.

TIME DEFROST

- Time defrost is ideal for when the weight of the frozen item is unknown.
 - The maximum defrosting time that can be set is 60 minutes.
1. Place food to be defrosted in a microwave safe dish, inside the microwave cavity.
 2. Press the TIME DEFROST button once.
 3. Turn the START/+30 SEC dial to set the defrosting time.
 4. Push the START/+30 SEC dial to start.

TIPS ON DEFROSTING

- Less energy is required for defrosting compared to cooking as the microwave causes the ice formed in the food to melt, rather than heat.
- Before defrosting meat in the microwave oven, remove the freezer bag or wrapping to prevent meat sitting in 'drip', which will otherwise boil as the meat defrosts causing meat to go grey and begin to stew.
- To remove frozen meat from freezer wrappings, defrost for a few minutes so the wrap is easy to remove.
- Remove meat from Styrofoam trays as they are not microwave-safe.
- Place meat onto a microwave safe rack and a drip tray to catch juices.
- Check the meat throughout the defrosting time. As outer portions of meat thaw, remove them. If the edges of meat feel warm, stop microwaving and allow meat to stand for a few minutes or until edges are cold again.
- After defrosting the meat, it must be cooked right away. Don't leave it to stand for any length of time at room temperature or in the fridge.

REHEAT

- Cooking time and power level will automatically adjust based on selected weight.
 - Weight options include 200g, 400g, 600g, 800g and 1000g.
1. Place food to be reheated inside the microwave cavity.
 2. Press the REHEAT button to access weight options.
 3. Turn the START/+30 SEC dial or press REHEAT repeatedly to scroll through weight options.
 4. Push the START/+30 SEC dial to commence cooking.
 5. Press the STOP/CANCEL button once to pause or twice to cancel.

AUTO COOK MENU

- This microwave oven comes pre-programmed with 8 Auto Cook menus.
 - When using any of the Auto Cook menus, only the quantity or weight of the item needs to be selected as the power level and cooking time is automatically adjusted.
 - When using the Potato function, the screen will display the number of potato portions instead of food weight when adjusting the quantity.
 - The microwave will sound 3 beeps during the operation of Frozen Meal and Potato functions prompting the user to stir or turn the food. Once the food has been stirred or turned, close the door and push the START/+30 SEC dial to resume cooking.
1. Press the MENU button to view the Auto Cook menu options. Turn the START/+30 SEC dial or press the MENU button repeatedly to scroll between menu options displayed as F1-F8.
 2. Push the START/+30 SEC dial to select the auto menu function.
 3. The screen will then display either the weight or quantity option for the chosen auto menu function. Turn the START/+30 SEC dial clockwise or anti-clockwise to scroll through the options.
 4. Push the START/+30 SEC dial to commence cooking.
 5. Press the STOP/CANCEL button once to pause or twice to cancel.

EXAMPLE: To cook 150g of frozen vegetables.

1. Put the frozen vegetables into a microwave safe bowl with vented lid and place it in the microwave cavity.
2. Press the MENU button, then turn the START/+30 SEC dial clockwise until F4 (Frozen Vegetables) is displayed. Press the START/+30 SEC dial to confirm selection.
3. Turn the START/+30 SEC dial clockwise until 150g is displayed.
4. Push the START/+30 SEC dial to commence cooking.



NOTE

The cooking result may depend on factors such as the shape and size of food, personal preferences such as the doneness of food, and placement of food within the microwave cavity.

AUTO COOK MENU FUNCTIONS

Menu	Display	Weight/Portion	Tips
Popcorn	F1	50g, 100g	<ul style="list-style-type: none">• The POPCORN auto cook menu is designed for store bought 'microwave' popcorn only.
Soften Butter	F2	100g, 250g, 500g	<ul style="list-style-type: none">• The SOFTEN BUTTER auto cook timing is based on cold butter from the fridge.
Frozen Meal	F3	300g, 400g, 500g	<ul style="list-style-type: none">• FROZEN MEAL is designed for meals that have been cooked then frozen and store bought frozen meals that have not been thawed.
Frozen Vegetables	F4	150g, 300g, 450g	<ul style="list-style-type: none">• FROZEN VEGETABLES is designed for ingredients that have not been thawed.
Green Vegetables	F5	150g, 300g, 450g	<ul style="list-style-type: none">• GREEN VEGETABLES is designed for fresh green vegetables.• Place the prepared vegetables with 2-4 tbsp. water into a microwave safe container with vented lid.
Potato	F6	2, 3 & 4 portions	<ul style="list-style-type: none">• Pierce potatoes 3-4 times with a fork before cooking. Use similar sized potatoes.• The potato function is based on 160-200g potatoes.
Pasta	F7	50g, 100g, 200g, 300g	<ul style="list-style-type: none">• Pasta is to be cooked with no lid when using the PASTA function, to prevent overflow of liquid.• Use a pasta to water ratio of 1:6 (e.g. 100g pasta with 600ml water).
Rice	F8	100g, 200g, 300g, 400g, 500g	<ul style="list-style-type: none">• Use the rice to water weight ratio of 1:2 (e.g. 100g: 200ml, 200g: 400ml).• Rice cooking results are optimised if rice is rinsed before cooking.• Rice is to be cooked with no lid when using the RICE function, to prevent overflow of liquid.• Rice cooking results are best if rice is fluffed and covered at completion for a further 5 minutes.

SOME IMPORTANT TIPS FOR MICROWAVE COOKING

- Arrange foods with varying size ends, such as chicken drumsticks and broccoli with the thicker or tougher part positioned to the outside of the dish. This ensures the parts that require more cooking will receive more energy, so the food will cook evenly.
- Covering the dish during cooking holds in the heat and steam to speed up the cooking time. Use a microwave-safe lid that has been vented, to allow the release of excess steam.
- Choose cooking dishes that are shallow as they allow the food to cook faster.
- Use round shaped microwave dishes. Round shapes cook more evenly than square or rectangular dishes which absorb most of the energy in the corners causing food to overcook and toughen.
- Stir foods from the outside to centre of the dish once or twice during cooking to equalise heat and speed microwaving.
- Turn medium to large food items over once during microwaving. This enables even exposure to microwaves
- Microwave utensils, containers, plates, dishes, etc. used in the microwave oven should always be microwave safe. Check if they are microwave-safe on the underside of the utensil or contact the manufacturer if unsure.
- Metal containers and utensils should not be used in the microwave oven.



CARE & CLEANING

CLEANING YOUR MICROWAVE OVEN

1. Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
 2. To clean the inside of the microwave oven, wipe with a damp cloth. Mild detergent may be used if the cavity gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
 3. The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the microwave oven cavity, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or spatters. Do not use an abrasive cleaner.
 - Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave the microwave oven door open to prevent it from accidentally turning on.
 - If steam accumulates inside or around the outside of the microwave oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
 - Remove odours from your microwave oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on highest power level for 5 minutes. Wipe the microwave oven cavity thoroughly and dry with a soft cloth.
 - When it becomes necessary to replace the microwave oven light, please consult your Breville Service Centre to have it replaced.

STORING YOUR MICROWAVE OVEN

- When storing the microwave oven, press the STOP/ CANCEL button, switch off at the power outlet then unplug the power cord.
- Ensure the microwave oven is completely cool, clean and dry.
- Do not place heavy objects on top.
- Store the microwave oven upright.
- Please do not dispose of this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by your local council municipalities.



TROUBLESHOOTING

Possible Problem	Possible Cause	What to Do
Microwave oven will not start	<ul style="list-style-type: none">• Power cord not plugged in properly or switched on• Fuse blown or circuit breaker problem• Trouble with outlet	<ul style="list-style-type: none">• Unplug, put the plug in again and switch on at the power outlet• Have a professional check the outlet is not faulty
Microwave oven does not heat	<ul style="list-style-type: none">• Door is not closed properly	<ul style="list-style-type: none">• Ensure the door is properly shut• Check to make sure there are no obstructions or that the door is not damaged in any way
Microwave oven interfering with television reception	<ul style="list-style-type: none">• Radio and TV reception may be interfered with during operation. This is similar to the interference that is sometimes cause by vacuums, blenders etc	<ul style="list-style-type: none">• Interference should stop once microwave is switched off
Dim microwave oven light	<ul style="list-style-type: none">• When operating on low power levels, the microwave oven light may be dimmer	<ul style="list-style-type: none">• This occurrence is normal
Steam accumulating and/or hot air coming out from vents	<ul style="list-style-type: none">• During operation, steam may be produced. Most will exit through the vents, however some may accumulate around the microwave oven door	<ul style="list-style-type: none">• Once microwave cooking is complete, steam condensation maybe removed by wiping over the affected area with a dry cloth
The light bulb does not work	<ul style="list-style-type: none">• The life of the bulb is at its end	<ul style="list-style-type: none">• Contact Breville Customer Service
Sparks when cooking	<ul style="list-style-type: none">• Utensil with metal trim has been left inside microwave during cooking	<ul style="list-style-type: none">• Remove any cooking utensil with metal trim
Glass turntable is noisy during operation	<ul style="list-style-type: none">• Turntable roller or glass turntable is not assembled properly or needs to be cleaned	<ul style="list-style-type: none">• Make sure the turntable roller or glass turntable is assembled properly• Clean if necessary

GENERAL TROUBLESHOOTING TIPS

- Check to ensure that the microwave oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the clock is set.
- Check to ensure that the door is securely closed engaging the door safety lock system, otherwise the microwave will not operate.



NOTE

If none of the above rectify the situation, contact your Breville Customer Service Centre.

Do not try to adjust or repair the microwave oven yourself.



NOTES

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville Logo and Easy Wave are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.

Copyright Breville Pty. Ltd. 2025.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.

LMO425 & LMO434 ANZ - D25