

the ToastPro™ 4 Slice

Instruction Book - Suits all LTA642 Models



Breville®



CONTENTS

- 2** Limited Product Warranty
- 2** Breville® Recommends Safety First
- 8** Components
- 9** Functions
- 11** Care & Cleaning

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.



LIMITED PRODUCT WARRANTY

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for QR149 contact details).



QR149

IMPORTANT SAFEGUARDS READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating the toaster for the first time and save for future reference.
- Always ensure the toaster is properly assembled before use. Follow the instructions provided in this instruction book.
- Remove and safely discard any packaging material and promotional labels before using the toaster for the first time.

- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this toaster (where applicable).
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water and other substances.
- Do not operate toaster on a sink drain board.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch a heated oven.
- Keep the toaster clear of walls and other heat sensitive materials such as cloths and curtains. Provide adequate space above and on all sides around the appliance for air circulation.
- The toaster is not intended to be operated by means of an external timer or separate remote control system.
- Bread may burn, therefore this toaster must not be used near or below curtains or other combustible material and it must be supervised at all times when in use.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the bread slice opening. Ensure the bread is not too thick or long that it will jam or wedge in the toasting slot.
- Never cover the toaster when it is plugged into the power outlet or while hot.
- Do not place cold toast directly on top of the toasting slots to warm toast as this may prevent correct air circulation and damage the toaster.
- Do not move the toaster whilst in operation or when hot.
- The temperature of accessible surfaces may be high when the toaster is in operation and also for some time after use.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Do not place the toaster in enclosed areas.
- Do not leave unattended when in use as toast may jam or wedge in the toasting slot. Never attempt to extract toast or any other item that has jammed or wedged in the toaster with a knife or any other object as contact with live elements may not only damage the element but cause electrocution.

- Do not touch hot surfaces. Use side areas and oven mitts for lifting and carrying the toaster.
- Always turn the power off at the power outlet and then remove the plug from the power outlet before attempting to move the toaster, when the toaster is not in use and before cleaning or storing.
- Do not operate the toaster without the removable crumb trays in place.
- The crumb trays should be regularly cleaned. Do not allow breadcrumbs to accumulate in the bottom of the toaster. Failure to clean the crumb trays regularly may result in a fire hazard. To clean any additional crumbs, turn the toaster upside down over a sink and shake crumbs free.
- Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.
- Do not place the toaster in direct sunlight. Colour fading and discolouration may occur when the toaster is consistently exposed to UV light.
- Keep the toaster clean. Follow the cleaning instructions provided in this book.
- This appliance can be used by

children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.

-  The symbol on the product or on its packaging indicates that this product may not be treated as household waste. Instead it should be handed over to the applicable collection point for the recycling of electrical and electronic equipment. By ensuring this product is disposed of correctly, you will help prevent potential negative consequences for the environment and human health, which could otherwise be caused by inappropriate waste handling of this product. For more detailed information about the recycling of this product, please contact your local council office or your household waste disposal service.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 220V-240V power outlet.
- The appliance must be used on a properly grounded outlet. If you are not sure, please consult a qualified electrician.
- Do not, under any circumstances, modify the power plug or use a power plug adapter.
- Do not place this appliance on or near a heat source, such as hot plate, oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or steam sensitive materials and provide adequate space above and on all sides for air circulation
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause Injury.**
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Children should be supervised to ensure that they do not play with the appliance.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.
- To protect against electric shock, do not immerse the power cord, power plug or appliance in water or any other liquid or allow moisture to come in contact with the parts, unless it is recommended in the cleaning instructions.

- Any maintenance other than cleaning should be performed at an authorised Breville Service Centre.
- It is recommended to regularly inspect the appliance. To avoid a hazard, do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See a qualified electrician for professional advice.
- During electrical storms, the appliance should be disconnected from the power source at the wall socket to prevent any electrical surges that may arise during the storm and which may inadvertently cause damage to the appliance and its electronic componentry.

NOTE

This Breville 4 slice toaster is electronically controlled and will not operate until the toaster is plugged into a 220V-240V power outlet, switched on and the lever latched down.



This symbol indicates, temperature of accessible surfaces may be high when the appliance is operating and for some time after use.

WARNING

- Never operate the toaster on its side.
- Never add any food substance to the bread, muffins or crumpets as this can lead to electrocution or fire.
- This toaster is for toasting bread, crumpets and muffins only. Placing other items in the toaster can lead to electrocution or a fire.



WARNING

Do not carry or move the toaster by holding the top metal cover between toasting slots as sharp edges may cause injury.

POWER MANAGEMENT FUNCTION


The appliance has a power management function. The appliance switches to off mode immediately once it is plugged in or automatically if there is no further operation. The off mode power consumption is less than 0.3W. Under this mode, the appliance consumes low power if it remains plugged into a switched-on power outlet.

To save energy, turn the appliance to off mode, switch off at the power outlet and unplug at the power outlet if the appliance is not in use.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**



COMPONENTS

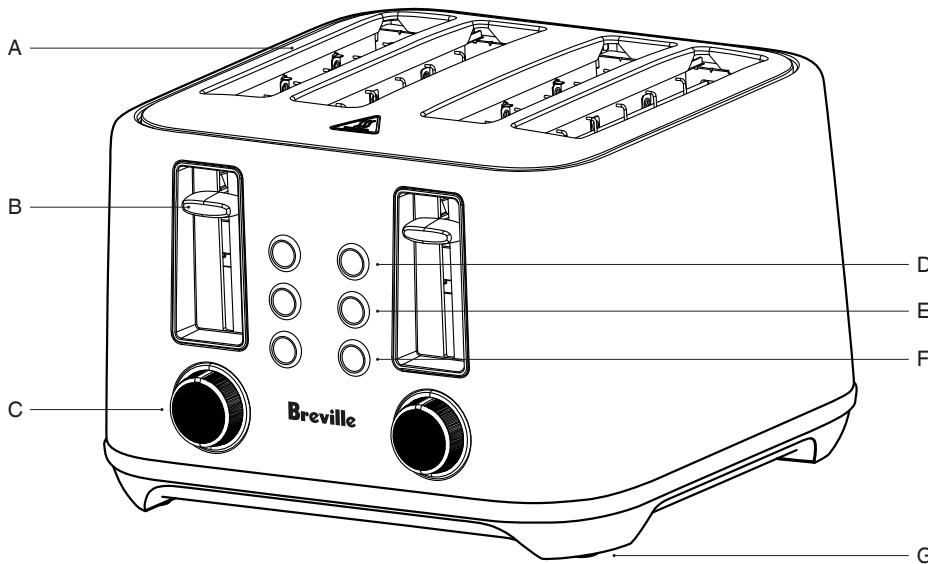

- A. Self-centring, extra wide and deep toasting slots
- B. Carriage control lever with LIFT & LOOK™/HIGH LIFT
- C. Browning control dial
- D. A BIT MORE® button
- E. FROZEN/FRUIT BREAD button
- F. CANCEL button
- G. Non-slip feet

Not Shown

- Power cord storage
- Slide out crumb trays
- Power cord and plug



FUNCTIONS

BEFORE FIRST USE

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Place the toaster on a dry, level heat resistant surface and unwrap the power cord from the base of the toaster.
2. Insert the power plug into a 220–240 volt power outlet and then turn the power on at the power outlet.



NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

OPERATING YOUR TOASTER

1. Place bread, crumpets, bagels, English muffins etc. into each of the toasting slots. Ensure the items are not too large or thick to fit the slots. If toasting 1 slice only, it is recommended to lower the browning setting to prevent burning.
2. Turn the browning control dial to select the desired browning setting from '1' lightest to '6' darkest.



NOTE

When using the toaster for the first time, we suggest toasting the bread on setting 3 or 4. Varying types of bread and personal preference may require a different browning setting, for example, raisin toast and white light-textured breads may require a lower setting, whilst heavier textured rye breads may require a darker setting.

3. To start the toasting cycle, press down the lever until it locks into place.



NOTE

If the toaster is not plugged in and switched on at the power outlet, the lever will not lock into position.



WARNING

Do not leave unattended when in use as toast may jam or wedge in the toasting slot. Never attempt to extract toast, crumpets or muffins or any other item that has jammed or wedged in the toaster with a knife or any other object, as contact with live elements can cause electrocution and may also damage the elements.

LIFT & LOOK™ FEATURE

This feature can be used to check on the progress of the toasting cycle without interrupting it. Simply raise the carriage control lever to check on the browning progress of the toast and lower it down again if you wish to continue to toast.

HIGH LIFT FEATURE

Once the toasting cycle has completed, to remove smaller items such as crumpets and muffins, lift the carriage control lever to the HIGH LIFT position, approximately 1cm above the starting position. In the unlikely event that the bread, crumpet or muffins become jammed, switch the power off at the power outlet, then remove the power plug from the power outlet and use the high lift lever to carefully ease the bread out of the toaster, ensuring that you do not damage the self-centring slots or the elements.

A BIT MORE® SETTING

For additional toasting time or reheating, use this feature after the toasting cycle has completed. Once the toast has popped up, lower the lever back down and then press the A BIT MORE® button.



NOTE

The A BIT MORE® setting will bypass the normal toasting cycle and toast for approximately 30 seconds when using the toast setting or approximately 15 seconds with the FRUIT BREAD setting.

FROZEN/FRUIT BREAD SETTING

Frozen Bread

1. Place the frozen bread into the toasting slots.
2. Select the browning setting you would normally select if the bread was fresh.
3. Press down the high lift lever until it locks into place.
4. Press the FROZEN/FRUIT BREAD button once and the button will illuminate white.
5. Once the toasting cycle is complete the toasting slot will move to the raised position. Remove the toast.

Fruit Bread

1. Place the fruit bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control dial from setting '1' (lightest) to '6' (darkest).
3. Press down the high lift lever until it locks into place.
4. Press the FROZEN/FRUIT BREAD button twice and the button will illuminate blue.
5. Once the toasting cycle is complete the toasting slot will move to the raised position. Remove the toast



NOTE

The FROZEN BREAD and A BIT MORE® functions cannot operate at the same time.

CANCEL BUTTON

Toasting can be stopped at any time by pressing the CANCEL button. This will cancel the operation and the toasting slot will move to the raised position.



CARE & CLEANING

1. Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before cleaning.
2. The crumb trays will need to be cleaned regularly to avoid breadcrumbs, dried fruits, crusts etc. accumulating in the bottom of the toaster.
3. Slide the crumb trays out from under the toaster carriage by pulling outwards away from the toaster.
4. Discard the crumbs and wipe trays over with a soft, damp cloth and dry thoroughly.
5. To remove any additional crumbs that have accumulated in the toasting carriages, turn the toaster upside down over a sink or bin and shake crumbs free.
6. Ensure crumb trays are dried thoroughly. Place crumb trays back into position by sliding the tray back and push in until completely locked into place.
7. Wipe the outside of the toaster with a slightly dampened soft cloth and then dry it with a soft dry cloth to dry completely.



NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Switch the toaster off at the power outlet and remove the power plug from the power outlet. Allow the toaster to cool completely before storing.

Follow the directions for cleaning and wrap the power cord in the cord wrap under the toaster.

Store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.



WARNING

Do not immerse the toaster or power cord in water or any other liquid.



WARNING

Do not use the toaster without the slide-out crumb trays in position. Do not allow crumbs to build up in the crumb trays. Failure to clean the crumb trays regularly may result in a fire hazard.



NOTE

Exposure to cooking oils and cleaning chemicals may cause colour fading and discolouration to the toaster. If the toaster is exposed to oils or chemicals, turn off and unplug the appliance and use a damp cloth to clean the exterior surface of the toaster. Dry thoroughly before use.

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville Logo, ToastPro, LIFT & LOOK, and A BIT MORE are trademarks of Breville Pty Ltd ("Breville") and Breville's products are distributed in Australia and New Zealand under license.
Copyright Breville Pty. Ltd. 2025.

Due to continued product improvement, the products illustrated/photographed in this booklet may vary slightly from the actual product.