the Tea Maker[™] Compact

Instruction Book - BTM700







Contents

- 2 Breville[®] Recommends Safety First
- 6 Components
- 8 Functions
- 10 Tips
- 11 Care & Cleaning
- 13 Troubleshooting
- 14 Warranty

BREVILLE[®] RECOMMENDS SAFETY FIRST

At Breville[®] we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Before using for the first time please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns please contact your local electricity company.
- Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning the use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.

- This appliance has been designed specifically for the purpose of heating and boiling quality drinking water and tea only. Under no circumstances should this product be used to heat or boil any other liquids or foodstuffs.
- Do not place the appliance near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water and other substances.
- Do not operate the appliance on a sink drain board.
- Do not place the appliance on or near a hot gas burner, electric element or where it could touch a heated oven.
- Keep the appliance clear of walls, curtains and other heat or steam sensitive materials. Minimum 20cm distance.
- Always ensure the appliance is properly assembled before use. Follow the instructions provided in this book.
- The appliance must be use only with the power base supplied.
- This appliance is not intended to be operated by means of an external timer or separate remote control system.

- Do not touch hot surfaces. Use the handle for lifting and carrying the appliance.
- Do not place anything on top of the lid.
- Turn the power off at the power outlet and remove the plug from the power outlet before attempting to move the appliance, when the appliance is not in use and before cleaning and storing.
- Use caution when pouring water from the glass jug, as boiling water and steam will scald. Do not pour water too quickly.
- To protect against electric shock, do not immerse the glass jug base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.
- Do not wash jug exterior under running water.
- Do not open the lid during operation.
- Do not overfill the glass jug past the maximum water level mark. If the glass jug is overfilled, boiling water may be ejected.
- Keep the appliance clean. Follow the cleaning instructions provided in this book.
- Do not spill water onto the connector.

WARNING

- Do not operate the appliance on an inclined surface. Do not move the appliance while it is switched on.
- The heating element surface is subjected to residual heat after use.
- Do not remove the outer lid during and after operation. This may result in boiling water splashing from the glass jug. Pour out all the hot water from the glass jug before opening the lid to refill.
- To prevent damage to the appliance do not use chemicals, alkaline cleaning agents, steel wool or abrasive cleaners to clean the inside or outside of the kettle. Use a mild cleaning agent with a soft damp cloth.

WARNING

 Never immerse the glass jug, power base, power cord or power plug in water or allow moisture to come in contact with these parts.





WARNING

• Do not wash jug exterior under running water.



• Misuse may cause injury.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Unwind the power cord fully before use.
- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- Connect only to a 230V or 240V power outlet.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are 8 years or above and are under supervision. Keep the appliance and its cord out of reach of children aged less than 8 years.

- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville Service Centre for examination and/or repair.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- The installation of a residual current device safety switch is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.

- For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.
- Any maintenance, other than cleaning, should be performed at an authorised Breville Service Centre.
- The use of attachments not sold or recommended by Breville may cause fire, electric shock or injury.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS



- A. Jug Lid
- B. Scale Filter
- C. Tea Basket Lid
- D. Tea Basket
- E. Handle
- F. Jug Post

- G. Glass Jug 1000ml water max. 800ml tea max.
- H. Immersed Temperature Sensor
- I. Tea Scoop
- J. Power Base
- K. Cord Storage Concealed under power base.



L. STRENGTH button

Preset brew times recommended for mild, medium and strong brews of each tea type.

M. Tea strength indicator

N. SELECT/TEMP button

Select the tea type/brew temperature recommended for green, white, oolong, herbal and black teas.

- O. Temperature/tea type indicator
- P. KEEP WARM button Keeps brewed tea or heated water warm for up to 60 minutes.

Q. START/CANCEL button Starts and stops the heating cycle.



BEFORE FIRST USE

In order to remove any dust or protective residues from the manufacturing process, it is recommended to run a boiling cycle then discard the water.

- Remove and safely discard any packing material, promotional labels and tape from the Tea Maker[™] Compact.
- 2. Remove the jug lid then remove the tea basket from the magnetic jug post within the glass jug. Wash the jug lid, tea basket, basket lid and tea scoop in warm soapy water with a soft sponge; rise and dry thoroughly.



Never immerse the base of the glass jug, the power base, power cord or power plug in water or allow moisture to come into contact with these parts.

- 3. Place the power base on a flat, dry surface.
- Without the tea basket in place, fill the glass jug to the WATER MAX marking (1000ml) and place on the power base. Securely fit the jug lid onto the glass jug.

<u>v</u>

WARNING

Never fill the glass jug with chilled water. Allow the Tea Maker™ Compact to cool before refilling.



WARNING

Filling past the MAX line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the MIN line will result in the Tea Maker™ Compact switching off before the water has boiled or reached the selected temperature.

- 5. Unwind the power cord completely and insert the power plug into a grounded wall outlet. Use the SELECT/TEMP button to select BLACK / 100°, then select the START/CANCEL button. The light will change from white to red, indicating that the heating cycle is in progress.
- 6. Once the water has reached the selected temperature, the tea maker will beep once.
- 7. Discard the water. The Tea Maker™ Compact is now ready for use.

BREWING TEA

- Fill the glass jug with the desired amount of water. Ensure that you fill past the MIN mark and equal to or below the MAX mark. Note the MAX mark when brewing tea is 800ml.
- Place the tea basket on a flat, dry surface. Remove the basket lid by lifting it from the sides.



 Use the provided tea scoop to fill the tea basket with tea leaves. As a general guide, use 1 scoop of tea per cup / 250ml of water; however, this will depend on the tea instructions and your personal preference.

WATER TO TEA SCOOP RATIO

500mL	2 scoops
750mL	3 scoops

- 4. Replace the basket lid and ensure it is securely clipped into place.
- 5. Attach the tea basket to the jug post inside the glass jug.



6. Replace the jug lid securely onto the glass jug, ensuring the filter aligns with the jug spout.

SELECTING THE TEA TYPE

 The tea type determines the brew temperature. The Tea Maker™ Compact has 5 preset tea types recommend for optimal brewing of Green, White, Oolong, Herbal and Black teas.

TEA TYPE		Green	White	Oolong	Herbal	Black
Preset Br Temp	ew	80°C	85°C	90°C	95°C	100°C
	Mild	2	3	3	4	3
Strength (mins)	Medium	3	4	4	5	4
()	Strong	4	5	5	6	5



This product is not calibrated for commercial or scientific use. Temperatures may vary -+3°C, which is within range for optimal brewing for each tea variety.

- Press the SELECT / TEMP button until the desired tea/temperature is illuminated. The desired brew strength determines the brew times. The correct brew time depends on the tea type and your personal preference of strength. The Tea Maker[™] Compact allows you to choose from mild, medium and strong tea brews.
- 3. Press the STRENGTH button to select the desired strength / steeping time. Refer to the

TEA TYPE table above for steeping times. Selecting the kettle setting will boil water to the desired temperature but will not operate the tea basket.

- 4. Press the START / CANCEL button to start heating.
- 5. Once the selected brew temperature is reached, the tea basket will automatically lower into the heated water. It will stay in this position until the brew time has lapsed.
- 6. At the end of the tea brewing cycle, the tea basket will automatically rise to the top of the glass jug to prevent over-brewing. The tea alert will sound 3 times, to indicate your tea is ready.



The tea basket is hot to touch after the tea is brewed. Ensure that the tea basket handle has cooled before handling.

KEEP WARM

If selected prior to heating, keep warm will last for 60 minutes after tea is brewed. When the glass jug is removed from the power base, the keep warm function will cancel.

To reactivate for another 60 minutes place the glass jug with the remaining tea back on the power base and press KEEP WARM, the light will illuminate when this is selected.

BOILING WATER

To boil water, remove the tea basket and fill the glass jug with water. Replace the jug lid and place the glass jug on the power base. Select the desired temperature by pressing the SELECT / TEMP button then press the STRENGTH button to select KETTLE.



TEA TYPES

There are four main types of tea from the tea plant camellia sinensis. The picking and processing methods determine the type of tea finally produced.

Black Tea

Black tea is the most common type of tea worldwide. It is made by fermenting the harvested leaves for a couple of hours before heating or drying. This oxidation darkens the leaves and increases the amount of caffeine. Of all the teas, black tea has the strongest colour and flavour.

White Tea

White tea is the rarest and the most exclusive tea. White tea consists of the whitish buds of the tea plant which are steamed then left to dry naturally. This tea is low in caffeine and has a slightly sweet flavour.

Green Tea

Green tea makes up approximately ten percent of the world's tea. The leaves are picked, rolled and dried before they can go brown. Green tea has a distinctive aroma and has a slight astringent taste.

Oolong Tea

Oolong Tea is semi fermented, which means leaves are processed immediately after picking. They only have a short period of oxidation which turns the leaves from green to red/brown. Its leaves have a floral, fruity quality and hence have a delicate fruity taste. It is recommended not to drink Oolong tea with milk, sugar or lemon.

Herbal Infusions or Tisanes

Herbal infused teas are not produced from the tea plant, but from flowers, leaves, roots

or seeds. Common herbal beverages are chamomile, peppermint, fennel, rose hip, and lemon verbena.

Herbal infusions that do not contain tea will generally not become bitter with extended brews. These can often be brewed with boiling water 3 times without jeopardising the taste.

Blends

Tea producers make blends by combining different types of teas, often in order to achieve flavour consistency from one season to the next. Common black tea blends include English Breakfast, Earl Grey, Irish Breakfast, and Russian Caravan.

TEA STORAGE

- Teas stored inside a vacuum sealed bag can be stored for up to two years, depending on the quality and grade of tea. Once opened, tea should be stored in an airtight container and kept in a dry and dark place.
- Once opened, black teas will last longer than green and oolong teas but all tea needs to be stored in ideal conditions.
- You can tell when tea is past its best if it has lost its aroma and will create either a bitter or dull tasting cup.

TIPS FOR OPTIMAL TEA BREWING

- Water quality affects taste. For best results, use filtered water.
- Finer tea particles and leaves will infuse more quickly than whole leaves. As a result, finer tea particles often release too much tannin too quickly, creating a harsher taste. Adjust the steeping time until desired strength is achieved.
- Use roughly one teaspoon of tea per cup/250ml of water.



CLEANING THE GLASS JUG

- After each use, empty the glass jug. Do not allow brewed tea to stand overnight. Allow the glass jug to fully cool before cleaning.
- · Wipe the interior of the glass jug with a soft damp sponge or rinse with warm water.
- Wipe the exterior of the glass jug with a soft damp cloth to clean.





VARNING

Never immerse or wash exterior of glass jug under running water.





Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the glass jug as these may scratch the surface.

• To remove the build-up of tannin; the astringent chemical constituent of tea, remove the tea basket, fill the glass jug with water up to the MAX mark, bring water to the boil and allow to cool for one minute. Add the contents of the Breville® Tea Maker Cleaner (available at Breville[®] web page) and allow to stand for 5 minutes. Empty tea maker, refill with fresh water and bring water to the boil. Repeat this step again then rinse the inside of the glass jug thoroughly. Dry thoroughly with a soft, lint-free cloth before using.



Through regular use over time, scale build-up can affect the performance and the life of the Tea Maker™ Compact. Lime and phosphate are common forms of scale that can damage your Breville® Tea Maker™ Compact. Lime scale, a harmless mineral, comes in the appearance of white-coloured or rusty looking build up on the inner walls and inner base of the glass jug. Phosphate scale can't be seen; however it can cause the water to appear cloudy when heated. To prevent scale from damaging your Tea Maker[™] Compact, ensure to descale the glass jug regularly. Use the Breville® Descaler (available at Breville[®] web page) and follow the instructions.



Allow all parts of the Tea Maker™ Compact to cool completely before disassembling and cleaning.



WARNING

Never immerse the base of the glass jug, jug lid, power base, power cord or power plug in water or allow moisture to come in contact with these parts.

CLEANING THE BASKET

- Wash the basket lid and tea basket in warm, soapy water with a soft sponge, then rinse and dry thoroughly.
- A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains on the basket. Apply the cleaner to the sponge, not directly onto the basket surface, before cleaning.
- Let all surfaces dry thoroughly before using.

CLEANING THE POWER BASE

- Wipe the power base with a soft-damp sponge.
- Let all surfaces dry thoroughly prior to inserting the power plug into the wall outlet.

STORAGE

- Ensure the Tea Maker[™] Compact is switched off, cleaned and completely dry before storing.
- Ensure that the tea basket is correctly assembled.
- Ensure that the jug lid is securely in place on the glass jug.
- Wrap the power cord around the power cord storage under the power base.
- Store the Tea Maker[™] Compact upright on the power base. Do not store anything on top.



PROBLEM	WHAT TO DO				
The Tea Maker™ Compact	Check the power plug is securely inserted into the outlet.				
does not switch on	• Insert the power plug into an independent outlet.				
	 Insert the power plug into a different outlet. 				
	• Reset the circuit breaker if necessary.				
	• For additional safety the Tea Maker™ Compact is fitted with a thermal cut out. In the event of severe overheating, the Tea Maker™ Compact will automatically shut down to prevent further damage				
The Tea Maker™ Compact does not work	• Check the glass jug is securely positioned on the power base.				
I cannot select a certain function	• Certain features cannot be selected or changed during the heating or brewing cycle. LED lights surrounding the buttons will indicate the availability of the functions.				
After boiling water, bubbles appear around the temperature sensor	- This is normal for the functionality of the Tea Maker $\ensuremath{^{\mbox{\tiny TM}}}$ Compact.				
My tea tastes too	 Ensure the correct strength was selected prior to brewing. 				
weak or too strong	• Follow the cleaning instructions in this booklet.				
The tea basket	The tea basket will not move during the heat up cycle.				
is not moving	 The tea basket will only start moving once the selected temperature has been reached. The tea basket will remain lowered until the steeping time has passed. 				
	• Remove the plug from the wall outlet, wait 10 seconds then reinsert the plug.				
The Tea Maker™ Compact power base does not illuminate and functions cannot be selected	 Remove the power plug from the wall outlet, then reinsert. Remove and replace the glass jug from the power base. All buttons should now illuminate and the Tea Maker[™] Compact is ready for use. 				



2 YEAR WARRANTY

Breville provides product warranty for domestic use in specified territories for 2 year from date of purchase by faulty workmanship and materials. During this warranty period, Breville will provide repairs and replacement for any defective product (based on Breville's Warranty Policy).

Also, all legal warranty rights under Korea's legislation will be protected and will not be impaired by our warranty. For full terms and conditions on the warranty, as well as instructions on how to make a claim, please visit **www.breville.com/kr**





Tea Maker™ Compact

설명서 - BTM700







- 2 Breville[®]은 안전을

 최우선으로 합니다
- 6 제품 구조
- 8 **기능**
- 10 **팁**
- 11 관리 및 청소
- 13 문제 해결
- 14 **보증**

BREVILLE®은 안전을 최우선으로 합니다

Breville[®]은 안전을 매우 중요하게 생각합니다. 우리는 소중한 고객의 안전을 최우선으로 생각하여 제품을 설계하고 제조합니다. 아울러 전기 제품을 사용할 때는 각별한 주의를 기울이고 다음의 예방 조치를 준수해 주시기 바랍니다.

중요 안전 지침

사용하기 전에 모든 지침을 읽고 나중에 참조할 수 있도록 보관하시기 바랍니다

- •처음 사용하기 전에 전기 공급이 제품 밑면의 정격 라벨에 표시된 것과 동일한지
 - 확인해 주시기 바랍니다.
 - 문제가 있는 경우 지역 전력
 - 회사에 문의하시기 바랍니다.
- 신체적, 감각적, 정신적 능력이 떨어지거나 경험과 지식이 부족한 사람도 안전한 방법으로 제품을 사용하는 방법에 관해 보호자의 감독을 받거나 지침이 주어지고 관련된 위험을 이해하는 경우 제품을 사용할 수 있습니다.
- •어린이가 제품을 가지고 놀아서는 안 됩니다.
- 제품을 처음 사용하기 전에 모든 포장재와 판촉 라벨을 제거하고 안전하게 폐기하시기 바랍니다.
- 어린이의 질식 위험을 방지하기 위해 본 제품의 전원 플러그에 장착된 보호 커버를 제거하고 안전하게 폐기하시기 바랍니다.
- 본 제품은 고품질의 음용수와 차를 가열하고 끓일 목적으로만 특별히 설계되었습니다. 어떠한 경우에도 이 제품을
 - 다른 액체나 식품을
 - 가열하거나 끓이는 데
 - 사용하시면 안 됩니다.

- •작동 중 제품을 조리대나 테이블 가장자리 근처에 두시면 안 됩니다. 표면이 평평하고 깨끗하며 물과 기타 물질이 없는지 확인하시기 바랍니다.
- •제품을 싱크대 식기 건조판에 놓고 작동하시면 안 됩니다.
- •고압 가스 버너나 전열기 위 또는 근처, 가열된 오븐에 닿을 수 있는 곳에 제품을 놓으시면 안 됩니다.
- •제품을 벽, 커튼 및 기타 열 또는 증기에 민감한 소재에서 멀리 둡니다. 최소 20cm 거리를 유지하시기 바랍니다.
- 사용하기 전에 항상 제품이 올바르게 조립되었는지 확인합니다. 본 책자에 명시된 지침을 따르시기 바랍니다.
- 본 제품은 제공된 전원 받침대로만 사용해야 합니다.
- 본 제품은 외부 타이머나 별도의 원격 제어 시스템으로 작동하도록 제작되지 않았습니다.
- 뜨거운 표면을 만지시면 안 됩니다. 손잡이를 사용하여 제품을 들어올리고 옮기시기 바랍니다.
- •뚜껑 위에 아무것도 올려놓으시면 안 됩니다.
- 제품을 이동하기 전, 제품을 사용하지 않을 때, 청소 및 보관하기 전에 전원 콘센트의 전원을 끄고 전원 콘센트에서 플러그를 뽑아 둡니다.

- 유리 용기의 물을 부을 때는 끓는 물과 증기에 데일 수 있으므로 주의합니다. 물을 너무 빨리 부으시면 안 됩니다.
- 감전을 방지하기 위해 유리 용기 베이스, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 수분에 닿지 않게 하시기 바랍니다.
- •용기 외부를 흐르는 물에 씻으시면 안 됩니다.
- •작동 중에는 뚜껑을 여시면 안 됩니다.
- 최대 수위 표시를 초과하여 유리 용기를 넘치게 채우시면 안 됩니다. 유리 용기에 물을 너무 많이 채우면 끓는 물이 튀어나올 수 있습니다.
- 제품을 깨끗하게 유지합니다. 본 설명서에 명시된 청소 지침을 따르시기 바랍니다.
- 커넥터에 물이 닿지 않게 하십시오.

\Lambda 경고

- •경사진 곳에서 제품을 작동하시면 안 됩니다. 전원이 켜져 있는 동안 제품을 움직이면 안 됩니다.
- 발열체 표면에는 사용 후 잔열이 있을 수 있습니다.
- •작동 중 및 작동 후에 외부 뚜껑을 분리하시면 안 됩니다. 유리 용기에서 끓는 물이 튀어 나올 수 있습니다.

다시 채우기 위해 뚜껑을 열기 전에 유리 용기에서 온수를 전부 따라 냅니다.

• 제품의 손상을 방지하려면 주전자의 내부 또는 외부를 청소할 때 화학 약품, 알칼리성 세척제, 철 수세미 또는 연마성 세제를 사용하시면 안 됩니다. 부드럽고 젖은 천에 순한 세척제를 사용하시기 바랍니다.

\land 경고

•유리 용기, 전원 받침대, 전원 코드, 전원 플러그를 물에 절대 담그지 마시고, 해당 부품이 물기에 닿지 않게 하십시오.



\land 경고

•용기 외부를 흐르는 물에 씻으시면 안 됩니다.



•잘못 사용하면 부상을 입을 수 있습니다.

모든 전기 제품에 대한 중요 안전 지침

- •사용하기 전에 전원 코드를 완전히 풉니다.
- 전원 코드가 조리대나 테이블 가장자리에 걸리거나 뜨거운 표면에 닿거나 꼬이지 않도록 주의하시기 바랍니다.
- 230V 또는 240V 전원 콘센트에만 연결하시기 바랍니다.
- 어린이가 제품을 가지고 놀아서는 안 됩니다. 8세 미만의 어린이가 보호자의 감독 없이 청소 및 사용자 유지 보수를 해서는 안 됩니다. 제품과 코드를 8세 미만 어린이의 손이 닿지 않는 곳에 보관하시기 바랍니다.

가정용 이 지침을 보관하시기 바랍니다

•본 제품은 가정용입니다. 본 제품을 원래 용도 이외의 목적으로 사용하시면 안 됩니다. 움직이는 차량이나 선박에서나 야외에서 사용하시면 안 됩니다. • 전기 제품을 사용할 때는 추가적인 안전 보호를 위해 누전 차단기(안전 스위치)를 설치하는 것을 권장합니다. 제품에 전기를 공급하는 전기 회로에 정격 잔류 작동 전류가 30mA 이하인 안전 스위치를 설치하는 것을 권장합니다. 전문적인 조언은 전기 기술자에게

문의하시기 바랍니다.

•제품을 정기적으로 검사하는

예방하기 위해 전원 코드, 전원

플러그, 제품이 어떤 식으로든

손상된 경우 제품을 사용하시면

안 됩니다. 검사 및/또는 수리가

Breville[®] 서비스 센터에 제품 전체를 맡기시기 바랍니다.

것을 권장합니다. 위험을

필요한 경우, 가까운 공인

- 안전상의 이유로 Breville[®] 제품을 다른 제품과 분리된 전용 회로의 자체 전기 콘센트에 직접 연결하는 것을 권장합니다. 전기 회로가 다른 제품으로 인해 과부하되면 제품이 올바르게 작동하지 않을 수도 있습니다. 멀티탭이나 연장 코드와 함께 사용하는 것은 권장하지 않습니다.
- 모든 유지 보수(청소 제외)는 공인 Breville[®] 서비스 센터에서 수행해야 합니다.
- Breville[®]에서 판매하거나 권장하지 않는 부속품을 사용하면 화재, 감전 또는 부상을 초래할 수 있습니다.



- A. 용기 뚜껑
- B. 스케일 필터
- C. 티 바스켓 뚜껑
- D. 티 바스켓
- E. 손잡이
- F. 용기 기둥

- G. 유리 용기 최대 1000ml의 물 최대 800ml의 차
- H. 수중 온도 센서
- I. 티스쿱
- J. 전원 받침대
- K. 코드 보관함 전원 받침대 아래에 숨겨져 있습니다.



- L. 농도(STRENGTH) 버튼 각 차 종류를 순하게(Mild), 중간(Medium), 진하게(Strong) 우려내는 데 권장되는 시간을 사전 설정합니다.
- M. 차 농도 표시기
- N. 선택/온도(SELECT/TEMP) 버튼 녹차(Green), 백차(White), 우롱차(Oolong), 허브차(Herbal), 홍차(Black)에 권장되는 차 종류/우려내기 온도를 선택합니다.
- 0. 온도/차 종류 표시기
- P. 보온 유지(KEEP WARM) 버튼 우려낸 차나 뜨거운 물을 최대 60분간 따뜻하게 유지합니다.
- Q. 시작/취소(START/CANCEL) 버튼 가열 사이클을 시작 및 중지합니다.



처음 사용하기 전에

제조 과정에서 나오는 먼지나 보호 잔여물을 제거하기 위해서는 끓이기 사이클을 실행한 다음 물을 버리는 것을 권장합니다.

- 1. Tea Maker[™] Compact에서 포장재, 판촉 라벨 및 테이프를 제거하고 안전하게 폐기합니다.
- 용기 뚜껑을 제거한 다음 유리 용기 안의 자석 용기 기둥에서 티 바스켓을 분리합니다. 용기 뚜껑, 티 바스켓, 바스켓 뚜껑, 티 스쿱을 따뜻한 비눗물에 부드러운 스펀지로 씻은 다음 헹구고 완전히 말려 주시기 바랍니다.

경고

절대 유리 용기 밑부분, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 물기에 닿지 않게 하십시오.

- 전원 받침대를 평평하고 건조한 표면에 놓습니다.
- 4. 티 바스켓이 없는 상태에서 상태에서 유리 용기를 물 최대(WATER MAX) 표시(1000ml)까지 채우고 전원 받침대에 올려놓습니다. 용기 뚜껑을 유리 용기에 단단히 고정합니다.

\land 경고

유리 용기에 차가운 물을 절대 채우시면 안 됩니다. 다시 채우기 전에 Tea Maker™ Compact를 식혀 줍니다.



최대(MAX) 라인을 초과하여 채우면 온수나 끓는 물이 넘쳐 심한 화상이나 부상을 입을 수 있습니다. 최소(MIN) 라인 아래로 채우면 물이 끓거나 선택한 온도에 도달하기 전에 Tea Maker™ Compact가 꺼집니다.

- 5. 전원 코드를 완전히 풀고 전원 플러그를 접지된 벽면 콘센트에 꽂습니다. 선택/ 온도(SELECT/TEMP) 버튼을 사용하여 홍차(BLACK)/100°를 선택한 다음 시작/ 취소(START/CANCEL) 버튼을 누릅니다. 표시등이 흰색에서 빨간색으로 바뀌면서 가열 사이클이 진행 중임을 나타냅니다.
- 6. 물이 선택한 온도에 도달하면 Tea Maker™ 에서 신호음이 한 번 울립니다.
- 7. 물을 버립니다. 이제 Tea Maker[™] Compact를 사용할 준비가 되었습니다.

차 우려내기

- 1. 유리 용기에 원하는 양의 물을 채웁니다. 최소(MIN) 표시 위로 그리고 최대(MAX) 표시 이하로 채워야 합니다. 차를 우려낼 때 최대(MAX) 표시는 800ml임에 유의하시기 바랍니다.
- 티 바스켓을 평평하고 건조한 표면에 놓습니다. 측면에서 들어 올려 바스켓 뚜껑을 분리합니다.



3. 제공된 티 스쿱을 사용하여 티 바스켓에 찻잎을 채웁니다. 일반적인 기준으로 컵/물 250 ml당 차 한 스쿱을 사용합니다. 단, 이것은 차 설명과 개인 취향에 달려 있습니다.

물 대 티 스쿱 비율

500mL	2스쿱
750mL	3스쿱

- 바스켓 뚜껑을 원위치시키고 제자리에 단단히 고정합니다.
- 5. 유리 용기 안의 용기 기둥에 티 바스켓을 부착합니다.



 용기 뚜껑을 유리 용기에 단단히 고정하여 필터가 용기 주둥이와 정렬되도록 합니다.

차 종류 선택

1. 과도하게 끓는 것을 Tea Maker™ Compact에는 녹차, 백차, 우롱차, 허브차, 홍차를 최적으로 우려내는 데 권장되는 다섯 가지 사전 설정된 차 종류가 있습니다.

차 종류		녹차	백차	우롱차	허브차	홍차
사전 설정 우려내기		80°C	85°C	90°C	95°C	100°C
	순하게	2	3	3	4	3
농도(분)	중간	3	4	4	5	4
	진하게	4	5	5	6	5



이 제품은 상업적 또는 과학적 용도로 보정되지 않았습니다. 온도는 -+3°C 오차로 달라질 수 있으며, 이는 각 차 종류에 대한 최적의 우려내기 범위 내에 있습니다.

2. 원하는 차/온도에 불이 들어올 때까지 선택/온도(SELECT/TEMP) 버튼을 누릅니다. 원하는 우려내기 강도에 따라 우려내기 시간이 결정됩니다. 알맞은 우려내기 시간은 차 종류와 개인이 선호하는 농도에 따라 다릅니다. Tea Maker™ Compact를 사용하면 차를 순하게(Mild), 중간(Medium), 진하게(Strong), 세 가지 농도로 우려낼 수 있습니다.

- 농도(STRENGTH) 버튼을 눌러 원하는 강도/침출 시간을 선택합니다. 침출 시간은 위의 차 종류 표를 참조합니다. 주전자 설정을 선택하면 물이 원하는 온도로 끓지만 티 바스켓은 작동하지 않습니다.
- 4. 시작/취소(START/CANCEL) 버튼을 눌러 가열을 시작합니다.
- 5. 선택한 우려내기 온도에 도달하면 티 바스켓이 자동으로 가열된 물 속으로 내려갑니다. 우려내기 시간이 경과할 때까지 해당 위치에 있습니다.
- 우려내기 사이클이 끝나면 티 바스켓이 자동으로 유리 용기 상부로 올라가 과도하게 끓는 것을 방지합니다. 차가 준비되면 차 경고음이 세 번 울립니다.

\land 경고

차를 우려낸 후에는 티 바스켓은 만지기에 뜨겁습니다. 다루기 전에 티 바스켓 손잡이가 식었는지 확인합니다.

보온 유지

가열하기 전에 이 기능을 선택하면 차를 우려낸 후 60분간 보온 유지됩니다. 전원 받침대에서 유리 용기를 제거하면 보온 유지 기능이 취소됩니다.

다시 60분간 활성화하려면 남은 티백이 담긴 유리 용기를 전원 받침대에 올려놓고 보온 유지(KEEP WARM)를 누릅니다. 이 버튼을 누르면 표시등이 켜집니다.

물 끓이기

물을 끓이려면 티 바스켓을 꺼내고 유리 용기에 물을 채웁니다. 용기 뚜껑을 원위치시키고 유리 용기를 전원 받침대에 올려놓습니다. 선택/온도(SELECT/TEMP) 버튼을 눌러 원하는 온도를 선택한 다음 농도(STRENGTH) 버튼을 눌러 주전자(KETTLE)를 선택합니다.



차 종류

차나무(camellia sinensis)에서 나오는 네 가지 기본 차 종류가 있습니다. 찻잎 따기 및 가공 방법에 따라 최종 생산되는 차의 종류가 결정됩니다.

홍차

홍차는 전 세계적으로 가장 흔한 차 종류입니다. 수확한 잎을 두 시간 정도 발효시킨 후 가열하거나 건조하여 만듭니다. 이 산화는 잎을 어둡게 하고 카페인 양을 증가시킵니다. 모든 차 중에서 홍차의 색과 풍미가 가장 강합니다.

백차

백차는 가장 희귀하고 가장 고급스러운 차입니다. 백차는 차나무의 희끄무레한 새싹을 찐 다음 자연 건조시켜 만듭니다. 이 차는 카페인이 적고 약간 달콤한 풍미가 있습니다.

녹차

녹차는 전 세계에서 생산되는 차의 약 10%를 차지합니다. 잎을 따서 말고 갈색으로 변하기 전에 말립니다. 녹차는 독특한 향기가 있고 약간 떫은 맛을 냅니다.

우롱차

우롱차는 반발효되며 이는 잎을 따서 바로 가공한다는 의미입니다. 잎이 녹색에서 적색/ 갈색으로 바뀌는 짧은 산화 기간만 있습니다. 잎은 꽃향과 과일향이 나며 은은한 과일 맛이 있습니다. 우롱차는 우유, 설탕 또는 레몬과 함께 마시지 않는 것을 추천합니다.

허브차 또는 약탕

허브차는 차나무로 생산하지 않고 꽃, 잎, 뿌리 또는 씨앗으로 생산합니다. 흔한 허브 음료는 카모마일, 페퍼민트, 회향, 장미 열매 및 방취목입니다.

차에 포함되지 않는 허브차는 일반적으로 장시간 우려내도 쓴맛이 나지 않습니다. 이들은 흔히 맛에 영향을 주지 않고 끓는 물로 3번 우려낼 수 있습니다.

블렌드

차 생산자는 흔히 한 시즌에서 다음 시즌까지 풍미의 일관성을 달성하기 위해 여러 종류의 차를 결합하여 블렌드를 만듭니다. 흔한 홍차 블렌드에는 잉글리시 브렉퍼스트, 얼 그레이, 아이리시 브렉퍼스트 및 러시안 캐러밴이 포함됩니다.

차 보관

- 진공 밀봉 백에 보관된 차는 차의 품질과 등급에 따라 최대 2년까지 보관할 수 있습니다. 개봉한 차는 밀폐 용기에 담아 건조하고 어두운 곳에 보관해야 합니다.
- 개봉한 홍차는 녹차와 우롱차보다 더 오래가지만 모든 차는 이상적인 조건에서 보관해야 합니다.
- 차가 향을 잃고 쓴맛이 나거나 맛을 잃는다면 유통기한이 지났다고 볼 수 있습니다.

최적의 차 우려내기를 위한 팁

- 수질은 맛에 영향을 줍니다. 최상의 결과를 얻으려면 여과된 물을 사용합니다.
- 미세한 차 입자와 찻잎은 전체 잎보다 더 빨리 우러납니다. 따라서, 미세한 차 입자는 종종 너무 많은 타닌을 너무 빨리 내어 더 떫은 맛을 만듭니다. 원하는 강도에 도달할 때까지 침출 시간을 조정합니다.
- 컵/물 250ml당 대략 한 티스푼의 차를 사용합니다.

관리 및 청소

유리 용기 청소

- 매 사용 후에는 유리 용기를 비웁니다. 우려낸 차를 밤새 두시면 안 됩니다. 세척하기 전에 유리 용기를 완전히 식힙니다.
- 부드럽고 젖은 스펀지로 유리 용기 내부를 닦거나 따뜻한 물로 헹굽니다.
- 부드럽고 젖은 천으로 유리 용기 외부를 닦아 청소합니다.





유리 용기의 외부를 절대 흐르는 물에 담그거나 씻으시면 안 됩니다.





표면이 긁힐 수 있으므로 유리 용기의 내부 또는 외부를 청소할 때 화학 약품, 철 수세미 또는 연마성 세제를 사용하시면 안 됩니다.

• 차의 떫은 맛을 내는 화학 성분인 타닌의 축적을 제거하려면 티 바스켓을 제거하고 유리 용기에 물을 최대(MAX) 표시까지 채우고 물을 끓여서 1분간식힙니다. Breville[®] Tea Maker[™] 클리너(Breville[®] 웹 페이지에서 구매 가능)의 내용물을 넣고 5분간 그대로 둡니다. Tea Maker™를 비우고 신선한 물을 다시 채운 다음 끓입니다. 이 단계를 다시 반복한 다음 유리 용기 내부를 완전히 헹굽니다. 사용하기 전에 부드럽고 보풀이 없는 천으로 완전히 말립니다.



정기적으로 장기간 사용하면 스케일 축적이 Tea Maker[™] Compact의 성능과 수명에 영향을 줄 수 있습니다. 석회와 인산염은 Breville[®] Tea Maker[™] Compact를 손상시킬 수 있는 흔한 형태의 스케일입니다. 무해한 광물인 석회 스케일은 유리 용기의 내벽과 내부 바닥에 흰색 또는 녹슨 모양의 축적물로 나타납니다. 인산염 스케일은 보이지 않습니다. 그러나 가열되면 물이 탁하게 보이도록 만들 수 있습니다. 스케일로 인해 Tea Maker[™] Compact가 손상되는 것을 방지하려면 유리 용기의 스케일을 정기적으로 제거합니다. Breville® 디스케일러(Breville® 웹 페이지에서 구매 가능)를 사용하고 지침을 따르시기 바랍니다.

◎ 참고

분해하여 청소하기 전에 Tea Maker™ Compact의 모든 부품을 완전히 식힙니다.



유리 용기 밑부분, 용기 뚜껑, 전원 받침대, 전원 코드, 전원 플러그를 절대 물에 담그지 마시고, 해당 부품이 물기에 닿지 않게 하십시오.

바스켓 청소

- 바스켓 뚜껑과 티 바스켓을 따뜻한 비눗물에 부드러운 스펀지로 씻은 다음 헹구고 완전히 말려 줍니다.
- 바스켓에 얼룩이 생기는 것을 방지하기 위해 비연마성 액체 세제나 순한 스프레이 용액을 사용할 수 있습니다. 청소하기 전에 바스켓 표면이 아니라 스펀지에 세제를 바릅니다.
- 사용하기 전에 모든 표면을 완전히 건조시킵니다.

전원 받침대 청소

- 부드럽고 젖은 스펀지로 전원 받침대를 닦습니다.
- 전원 플러그를 벽면 콘센트에 꽂기 전에 모든 표면을 완전히 건조시킵니다.

보관

- 보관하기 전에 Tea Maker[™] Compact의 전원을 끄고 청소하고 완전히 말립니다.
- 티 바스켓이 올바르게 조립되었는지 확인합니다.
- 용기 뚜껑이 유리 용기의 제자리에 단단히 고정되었는지 확인합니다.
- 전원 받침대 아래의 전원 코드 보관함 주위에 전원 코드를 감습니다.
- Tea Maker[™] Compact를 전원 받침대 위에 똑바로 세워서 보관합니다. 위에 아무것도 올려놓으시면 안 됩니다.



문제	해야 할 일
Tea Maker™ Compact가 켜지지 않습니다	 전원 플러그가 콘센트에 제대로 꽂혀 있는지 확인합니다. 전원 플러그를 독립된 콘센트에 꽂습니다. 전원 플러그를 다른 콘센트에 꽂습니다. 필요한 경우 회로 차단기를 재설정합니다. 추가적인 안전을 위해 Tea Maker[™] Compact에는 열 차단 장치가 장착되어 있습니다. 심하게 과열되면 Tea Maker[™] Compact가 자동으로 꺼져 추가 손상을 방지합니다.
Tea Maker™ Compact가 작동하지 않습니다	• 유리 용기가 전원 받침대 위에 확실하게 올려져 있는지 확인합니다.
특정 기능을 선택할 수 없습니다	 가열 또는 우려내기 사이클 중에는 특정 기능을 선택하거나 변경할 수 없습니다. 버튼 주변의 LED 표시등은 해당 기능의 사용 가능 여부를 나타냅니다.
물을 끓인 후 온도 센서 주변에 기포가 나타납니다	• Tea Maker™ Compact의 기능으로, 정상적인 현상입니다.
차 맛이 너무 약하거나 너무 강합니다	 우려내기 전에 올바른 강도를 선택했는지 확인합니다. 본 설명서에 명시된 청소 지침을 따릅니다.
티 바스켓이 움직이지 않습니다	 가열 사이클 중에는 티 바스켓이 움직이지 않습니다. 선택한 온도에 도달한 후에야 티 바스켓이 움직이기 시작합니다. 티 바스켓은 침출 시간이 경과할 때까지 내려진 상태로 유지됩니다. 벽면 콘센트에서 플러그를 뽑고 10초간 기다린 다음 플러그를 다시 꽂습니다.
전원과 연결되는 Tea Maker™ Compact 받침대에 불이 켜지지 않으며 기능을 선택할 수 없습니다.	• 벽면 콘센트에서 전원 플러그를 뽑은 후 다시 꽂으십시오. 전원 받침대에서 유리 용기를 분리했다가 다시 장착합니다. 모든 버튼에 다시 불이 켜지면 Tea Maker™ Compact가 정상 작동합니다.



2년 품질 보증

Breville은 구입일로부터 2년 동안 대한민국 내에서 가정용으로 사용되는 제품의 잘못된 제조 공정 및 자재로 인한 결함에 대하여 보증 서비스를 제공합니다. 보증기간 동안 Breville 은 결함이 있는 제품에 대해 수리 또는 교체를 제공합니다(Breville의 보증 정책에 따름).

또한, 고객이 대한민국의 법률에 따라 제품의 하자에 관하여 행사할 수 있는 법적 권리는 보호되며 Breville의 보증정책으로 인하여 이러한 법적 권리가 훼손되는 것은 아닙니다.

Breville의 보증 서비스에 관한 자세한 내용과 고객센터에 대한 문의 방법을 살펴 보시려면 www.breville.com/kr을 방문해 주시기 바랍니다.



브레빌코리아 유한회사

서울특별시 강남구 테헤란로 518, 13층 125호 (대치동) 고객 서비스 센터: 080-822-1691



Master Every Moment™

Copyright Breville Pty. Ltd. 2022. 지속적인 제품 개선으로 인해, 본 책자에 담긴 제품 삽화 및 사진은 실제 제품과 약간 다를 수 있습니다.

BTM700_KOR - D22