

Breville

the 'Lift & Look'TM Pro

Instruction Book



BTA720 & BTA730

CONGRATULATIONS

on the purchase of your new
Breville product

CONTENTS

- 4** Breville recommends safety first
- 13** Know your Breville product
- 15** Operating your Breville product
- 20** Care, cleaning & storage of your Breville product

We at Breville are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition, we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operating for the first time and save for future reference.
- Remove and safely discard any packaging materials and promotional labels before using the toaster for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- Do not place the toaster near the edge of a bench or table during operation. Ensure the surface is level, clean and free of water.
- Always operate the toaster on a stable, heat resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.

- A fire may occur if the toaster is covered or touching flammable materials, including curtains, draperies, walls and the like, when in operation.
- Curtains and other flammable items can catch fire if they are near or above the toaster.
- While toasting, the bread may burn. Therefore do not use the toaster near or below combustible material, such as curtains.
- Do not allow hot surfaces of the toaster to come in contact with countertops or tables.
- Do not place the toaster on or near a hot gas or electric burner, or where it could touch any other source of heat.
- This appliances is not intended to be operated by means of an external timer or separate remote-control system.
- When operating the toaster, keep a minimum distance of 10cm of space from the surrounding sides & 20cm above.
- Breville does not recommend placing the toaster in enclosed areas.

- Do not use the toaster on a sink drain board.
- Do not move toaster while in operation.
- Avoid contact with moving parts.
- Ensure that bread to be toasted is the correct size for the toaster and does not protrude above the toasting slots. Ensure the bread is not too thick or long that it will jam or wedge the bread carriage.
- Do not place toast directly on top of toasting slots to warm toast as this may prevent correct air circulation and damage the appliance.
- Do not touch hot surfaces. Toaster surfaces are hot during and after operation. To prevent burns or personal injury, always use protective hot pads or insulated oven mitts, or use handles or knobs where available.
- Metal utensils such as a knife, should not be inserted into the toaster to remove jammed toast, bagels or any other items from the toaster. This can damage the heating elements as well as lead to electrocution.
- Do not attempt to dislodge food when the toaster is plugged in.
- Oversized foods, metal foil packages,

or utensils must not be inserted into the toaster as they may cause a fire or risk of electric shock.

- Do not use the toaster without the slide out crumb tray in place. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard. To turn the toaster off, remove the power plug from the power outlet.
- Always remove the power plug from the power outlet if the toaster is not in use, before attempting to move, before cleaning, and when storing. Allow to cool before putting on or taking off parts.
- Do not use harsh abrasive, caustic cleaners or oven cleaners when cleaning the toaster.
- Do not clean with metal scouring pads. Pieces can break off and touch electrical parts, creating a shock hazard.
- Strictly follow the care and cleaning instructions described in this book.
- The use of attachments not sold or recommended by Breville may cause fire, electric shock or injury.

FOR ALL ELECTRICAL APPLIANCES

- Fully unwind cord before use.
- To protect against electric shock, do not immerse cord, plug or appliance in water or any other liquid.
- Do not let the cord hang over the edge of a bench or table, touch hot surfaces, or become knotted.
- Do not leave the appliance unattended when in use.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance.
- Cleaning and user maintenance shall not be carried out by children unless they are older than 8 and supervised.
- Keep the appliance and its cord out of reach of children less than 8 years.
- This appliance is not intended for use by persons (including children) with reduced physical,

sensory or mental capabilities, or lack of experience or knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.

- Children should be supervised to ensure they do not play with the appliance.
- This appliance is recommended for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors.
- It is recommended to regularly inspect the appliance. Do not use the appliance if the power cord, power plug, or appliance becomes damaged in anyway. Immediately cease use and call Breville Consumer Service for examination, repair or adjustment.
- This appliance is equipped with a power cord having a grounding wire with a grounding plug. The appliance must be grounded using a 3-hole properly grounded outlet. In the event of an electrical short circuit, grounding reduces the risk of electrical shock.

- If the appliance is of the grounded type, the extension cord should be a grounding 3-wire cord.
- If the power outlet is a standard 2-prong outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong power outlet.
- Do not, under any circumstances, cut or remove the third (ground) prong from the power cord or use an adapter.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.

NOTE

This toaster is electronically controlled and will not operate until the toaster is plugged into a 220-240 volt power point and switched on.

BREVILLE ASSIST™ PLUG

Your Breville appliance comes with a unique Assist™ Plug, conveniently designed with a finger hole in the power plug for easy and safe removal from the wall outlet. For safety reasons it is recommended you plug your Breville appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electric circuit is overloaded with other appliances, your appliance may not function properly. Use in conjunction with a power strip or extension cord is not recommended.

SHORT CORD INSTRUCTIONS

Your Breville appliance is fitted with a short power supply cord as a safety precaution to prevent personal injury or property damage resulting from pulling, tripping or becoming entangled with a longer cord. Do not allow children to use or be near this appliance without close adult supervision. Longer detachable power supply cords or extension cords are not recommended but may be used if care is exercised. If an extension cord is used, (1) the marked electrical rating of the cord set or extension cord should

be at least as great as the electrical rating of the appliance, (2) the cord should be arranged so that it will not drape over the countertop or tabletop where it can be pulled on by children or tripped over unintentionally and (3) the extension cord must include a 3-prong grounding plug.

 **WARNING**

Never operate the toaster on its side.

Never add any food substance to the bread, bagel or any other item prior to toasting (such as butter, jelly or marmalade). This may cause a fire as well as lead to electrocution.

This toaster is for toasting bread, bagels, English muffins and toaster pastries only. Placing other food items in the toaster can cause a fire as well as lead to electrocution.

**FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS**

KNOW

your Breville product

KNOW YOUR BREVILLE PRODUCT



- A. A BIT MORE™ button**
If your toast comes up too light, one press adds a little extra toasting time.
- B. Crumpet/Fruit Bread button**
Press Crumpet/Fruit Bread button to toggle between these two modes. Crumpet setting activates additional heat to the middle heating elements to toast the insides of your crumpet without burning the outside.
- C. FROZEN button**
Activates additional toasting time required to toast frozen bread.
- D. CANCEL button**
Cancels the toasting cycle. Also use this button to adjust the volume of the toast ready alert.

- E. Toasting slots**
- F. LED toasting progress indicator**
- G. Variable browning control slide**
- H. Full stainless steel body**
- I. Slide out crumb tray**
- J. Concealed cord storage**
- K. LIFT & LOOK™ / high lift lever**
Use the lever during the toasting cycle to raise and lower the carriage so you can check the toasting progress without interrupting the toasting cycle. High lift feature makes it easier to remove small items such as English muffins.

NOT SHOWN

Breville Assist™ Plug

OPERATING

your Breville product

OPERATING

NOTE

This toaster is electronically controlled and will not operate until the toaster is plugged into a 220-240 volt power outlet.

Before first use, remove any packaging material or promotional labels attached to your toaster.

1. Insert the power plug into a 220-240V power outlet. The LED toasting progress indicator will illuminate from left to right, then align to the selected browning setting (indicated by the position of the browning control slide). The toaster will revert to stand-by mode after a few minutes if a button is not pressed or the browning control slide is not adjusted.

NOTE

When using the toaster for the first time, we suggest toasting on the maximum setting without bread. The toaster may emit a thin smoke or distinct odour on initial use. This is normal and not detrimental to the performance of the toaster.

2. Place bread, bagels, English muffins etc into each of the toasting slots. Ensure items for toasting are not too large or too thick to fit in the toasting slots.
3. There are 12 browning settings ranging from '1' (lightest) to '5' (darkest). Select the desired browning setting by adjusting the browning control slide on the front of the toaster. The LED toasting progress indicator will illuminate and align to the selected browning setting (as indicated by the position of the browning control slide).

NOTE

When toasting bread for the first time, it is suggested to toast on browning setting '3' (7 LED's illuminated). Various types of bread and personal preference may require a different browning setting. For example, raisin toast and white light-textured breads may require a lighter setting, while heavier textured rye breads may require a darker setting.

4. To start the toasting process, press down the lever until it locks into place. The LED toasting progress indicator (above the selected browning setting) will flash and start to gradually count down.

NOTE

Toasting can be stopped at any time by pressing the CANCEL button. This will cancel the operation and the carriage will move to the raised position.

5. Once the toasting cycle is complete the toast ready alert will sound (refer to TOAST READY ALERT, page 13, to adjust the volume). Remove the toast. The LED toasting progress indicator will re-illuminate to the previously selected browning setting for a few minutes before entering stand-by mode.

NOTE

To re-activate the toaster from stand-by mode, press any button or move the browning control slide. The LED toasting progress indicator will re-illuminate.



WARNING

Do not leave the toaster unattended when in use as toast may jam.

In the unlikely event that bread, bagels, English muffins or toaster pastries become jammed in the toasting slots, all the buttons and the LED toasting progress indicator will flash and the elements will turn off. Remove the power plug from the power outlet and allow the toaster to cool completely before carefully easing the bread out of the slots. Take care not to damage the heating elements. Do not use metal utensils.

A BIT MORE™ BUTTON

If your toast comes up too light, one press of this button adds a little extra toasting time. This feature can be selected before, during or after the toasting cycle and can be used with the CRUMPET/FRUIT BREAD and FROZEN functions.

To use this feature during the toasting cycle:

Press the A BIT MORE™ button. The button surround will illuminate white when selected. The toasting time will automatically increase but will not illuminate more of the LED toasting progress indicator. The A BIT MORE™ function can be cancelled by pressing the A BIT MORE™ button again and the original toasting cycle will continue.

To use this feature before or after the toasting cycle:

Press the A BIT MORE™ button. The button surround will illuminate white when selected. Press down the lever until it locks into place. The LED toasting progress indicator will automatically align with the lowest browning setting then flash and count down for the additional browning time.

CRUMPET/FRUIT BREAD BUTTON

The crumpet feature activates additional heat to the middle heating elements to perfectly toast the insides of your crumpet without burning the outside.

To toast crumpets:

1. Place the crumpet into the toasting slots with the inside of the crumpet facing inwards as per the crumpet markings above the middle heating elements of the toaster.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. There are 12 browning settings ranging from '1' (lightest) to '5' (darkest).
3. To select the CRUMPET setting, press the CRUMPET button and the button surround will illuminate white. To start the toasting process, press down the lever until it locks into place.

NOTE

It is normal for the outside heating elements to appear off or on a lower power during the Crumpet setting. This ensures the inside of your crumpet toasts without burning the outside.

To toast fruit bread:

1. Place the fruit bread into the toasting slots.
2. To select the FRUIT BREAD setting, press the CRUMPET/FRUIT BREAD button twice and the button will illuminate blue.
3. Select the desired setting by adjusting the BROWNING CONTROL slide on the front of the toaster.
4. The browning settings range from '1' (lightest) to '5' (darkest).
5. To start the toasting process, press down the LIFT & LOOK lever until it locks into place.
6. Once the toasting cycle has finished and the carriage has risen and locked into the raised position, the toast ready alert will sound. Remove the fruit bread. The CRUMPET/FRUIT BREAD button surround will remain illuminated in blue and should be pressed once to cancel if a subsequent toasting function other than fruit bread is required. The CRUMPET/FRUIT BREAD button surround will cease to illuminate after 30 seconds or when the appliance is switched off at the power point.

4. After the cycle has finished, press the CRUMPET button to deselect the setting if toasting other types of bread.

FROZEN BUTTON

This feature activates additional toasting time required to toast frozen bread.

To toast frozen bread:

1. Place the bread into the toasting slots.
2. Select the desired browning setting by adjusting the browning control slide on the front of the toaster. There are 12 browning settings ranging from '1' (lightest) to '5' (darkest).
3. To select the FROZEN setting, press the FROZEN button and the button surround will illuminate white. To start the toasting process, press down the lever until it locks into place. The toasting time will automatically increase.
4. After the cycle has finished, press the FROZEN button to deselect the setting.

LIFT & LOOK™ LEVER

This feature raises and lowers the carriage so you can check the toasting progress without interrupting and/or cancelling the toasting cycle. During the toasting cycle, simply lift the lever to view the toasting progress. Lower the lever to continue the cycle or press the CANCEL button to stop the cycle at any time.

HIGH LIFT LEVER

The lever can be lifted approximately 1cm above the starting position. This raises the carriage making it easier to remove smaller items such as English muffins.

TOAST READY ALERT

A toast ready alert will sound when the toasting cycle has finished and the carriage has risen and locked into the raised position. The default volume setting for the toast ready alert is 'High' but can be adjusted to 'Low' or 'Mute'.

Adjusting the volume of the Toast Ready Alert

Press and hold down the CANCEL button for 2 seconds until the A BIT MORE™, CRUMPET and FROZEN buttons illuminate. While these buttons are illuminated, adjust the volume as follows:

Mute:

Press the FROZEN button. The button surround light will flash three times.

Low:

Press the CRUMPET button. The toaster will beep three times with low volume.

High:

Press the A BIT MORE™ button. The toaster will beep three times with high volume.

CARE, CLEANING & STORAGE

of your Breville product

CARE AND CLEANING

1. Remove the power plug from the power outlet and allow the toaster to cool completely before cleaning.
2. To clean any crumbs from the toaster, remove the crumb tray, located on the left side of the toaster, opposite to the lever. Empty and replace the crumb tray before using the toaster again. Replace the crumb tray by sliding it inwards until it locks into position.
3. To remove any additional crumbs, turn the toaster upside down over a trash bin and shake crumbs free.
4. Wipe the outside of the toaster with a slightly dampened soft cloth then polish with a soft dry cloth to dry completely.

NOTE

Do not clean with metal scouring pads. Pieces can break off the pad and touch electrical parts creating an electric shock hazard.

STORAGE

Remove the power plug from the power outlet and allow the toaster to cool completely before storing. Follow the directions for cleaning and store in an upright position on a flat surface on a bench top or in an accessible cupboard. Do not store anything on top of the toaster.



WARNING

Do not use the toaster without the crumb tray in position. Do not allow crumbs to build up in the crumb tray. Failure to clean the crumb tray regularly may result in a fire hazard and damage the toaster.

Breville

Breville Customer Service Centre

Australian Customers

Mail: PO Box 22
Botany NSW 2019
AUSTRALIA

Phone: 1300 139 798

Fax: (02) 9384 9601

Email: Customer Service:
askus@breville.com.au

New Zealand Customers

Mail: Private Bag 94411
Botany Manukau 2163
Auckland NEW ZEALAND

Phone: 0800 273 845

Fax: 0800 288 513

Email: Customer Service:
askus@breville.com.au

www.breville.com.au

Breville is a registered trademark of Breville Pty. Ltd. A.B.N. 98 000 092 928.
Copyright Breville Pty. Ltd. 2013.

Due to continued product improvement, the products illustrated/photographed
in this brochure may vary slightly from the actual product.

BTA720 & BTA730 Issue - A13