

the Silhouette Flatbed™ Compact

Instruction Book - LMO420



Breville®



Contents

2	Breville Recommends Safety First
12	Components
14	Functions
20	Tips
21	Care & Cleaning
22	Troubleshooting

BREVILLE RECOMMENDS SAFETY FIRST

At Breville we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the Breville Microwave for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover that is fitted to the power plug of the Breville Microwave.
- Do not place the microwave oven near the edge of a bench or table during operation. Ensure all surfaces are level, clean and free of water or any other substances.

- Do not place the microwave oven on or near a hot gas or electric burner, or where it could touch a heated microwave oven.
- When using the microwave oven, provide adequate air space above and on all sides for air circulation (see page 14 TIPS ON SETTING UP YOUR MICROWAVE).
- Always operate the microwave oven on a heat-resistant surface. Do not use on a cloth-covered surface, near curtains or other flammable materials.
- Do not use the microwave oven on a metal surface, for example, a sink drain board.
- Always ensure the microwave oven is properly assembled before connecting to the power outlet and operating.
- The microwave oven is not intended to be operated by means of an external timer or separate remote control system.
- Never use the microwave oven without food or water in the microwave oven cavity. Operating the microwave oven when empty could cause damage to the appliance.
- Do not leave the microwave oven unattended when in use.
- Do not touch hot surfaces. Allow the microwave oven to cool before moving or cleaning any parts.
- Do not place or store anything on top of the microwave oven.
- Always ensure the microwave oven is turned off at the power outlet and the cord is unplugged from the power outlet before attempting to move the appliance, when not

in use, if left unattended and before disassembling, cleaning or storing.

- Keep the appliance clean. Follow the cleaning instructions provided in this book (page 21).
- Always turn the microwave oven off by pressing the STOP/CANCEL button, switch off at the power outlet and unplug at the power outlet when it is not in use.
- Before cleaning, always press the STOP/CANCEL button, switch off at the power outlet and unplug at the power outlet.

IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES

- Fully unwind the power cord before use.
- Connect only to a 230V or 240V power outlet.

- Do not let the power cord hang over the edge of a bench or table, touch hot surfaces or become knotted.
- To protect against electric shock do not immerse the power cord, power plug or appliance in water or any other liquid.
- The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- Before use always check with your doctor if you have a pacemaker. Modern pacemakers are protected against interference, but some older ones may be adversely affected when in close proximity to a microwave oven.

- Children should be supervised to ensure that they do not play with the appliance.
- It is recommended to regularly inspect the appliance. To avoid a hazard do not use the appliance if the power cord, power plug or appliance becomes damaged in any way. Return the entire appliance to the nearest authorised Breville service centre for examination and/or repair.
- Any maintenance other than cleaning should be performed at an authorised Breville service centre.
- This appliance is for household use only. Do not use this appliance for anything other than its intended use. Do not use in moving vehicles or boats. Do not use outdoors. **Misuse may cause injury.**
- The installation of a residual current device (safety switch) is recommended to provide additional safety protection when using electrical appliances. It is advisable that a safety switch with a rated residual operating current not exceeding 30mA be installed in the electrical circuit supplying the appliance. See your electrician for professional advice.
- Always turn the appliance to the OFF position, switch off at the power outlet and unplug at the power outlet when the appliance is not in use.
- Before cleaning, always turn the appliance to the OFF position, switch off at the power outlet, unplug at the power outlet and remove the power cord, if detachable, from the appliance and allow all parts to cool.

- Do not place this appliance on or near a heat source, such as hot plate, microwave oven or heaters.
- Position the appliance at a minimum distance of 20cm away from walls, curtains and other heat or stream sensitive materials and provide adequate space above and on all sides for air circulation.

WARNING

- Surfaces may be hot during and after use.

WARNING

- Do not attempt to operate the microwave oven with the door open since the open-door operation can result in harmful exposure to microwave energy. It is important not to defeat or tamper with the safety interlocks

WARNING

- Do not place any object between the microwave oven front face and the door or allow soil or cleaner residue to accumulate on sealing surfaces.

WARNING

- Do not put any foreign material between the door and door jam of the microwave oven as this could cause excessive leakage of microwave energy.

WARNING

- If the door or door seals are damaged, the microwave oven must not be operated until it has been repaired by a Breville Service Centre. It is particularly important that the oven door closes properly and that there is no damage to the:
- (1) Door (bent), (2) hinges and latches (broken or loosened), (3) door seals and sealing surfaces.

WARNING

- Liquids and other foods must not be heated in sealed containers since they are liable to explode.

WARNING

- Only allow children to use the microwave oven without supervision when adequate instructions have been given so that the child is able to use the microwave oven in a safe way and understands the hazards of improper use.

WARNING

- It is hazardous for anyone other than a Breville Service Centre to carry out any service or repair operation that involves the removal of the cover which gives protection against exposure to microwave energy.

WARNING

- When heating food in microwave-safe or paper containers, keep an eye on the microwave oven due to the possibility of ignition.

The appliance should not be cleaned with a steam cleaner.

Microwave Oven specifications

Specification	LMO420 BLKANZ
Power consumption	230-240V/50Hz, 1200W
Output	800W
Outside dimensions (mm)	271mm(H)×457mm(W)362mm(D)
Oven Cavity dimension (mm)	180mm(H)×315mm(W)×329mm(D)
Oven Capacity	20 Litres
Net Weight approx (kg)	Approx. 9.5kg

SPECIAL SAFETY INSTRUCTIONS FOR YOUR MICROWAVE OVEN

- Wipe the microwave oven cavity with a soft, damp cloth after each use. Leaving food residue, grease or fat in the cavity could cause the microwave oven cavity to overheat and may cause the microwave oven to smoke or catch fire.
- The microwave oven should be cleaned regularly and any food splattering inside the cavity should be removed. Failure to maintain the microwave oven in a clean condition could lead to deterioration of the surface, adversely affecting the life of the microwave oven and possibly resulting in a hazardous situation.
- If the door seals or any of the microwave oven is damaged, the microwave oven must not be operated until it has been inspected and/or repaired at an authorised Breville service centre.
- The microwave oven is intended for heating food and beverages. Drying of food or clothing and heating of warming pads, slippers, sponges, damp cloth and similar may lead to risk of injury, ignition or fire.
- Ensure all food containers and/or plates are suitable for use in the microwave oven. This should be done prior to preparing food for heating or cooking in the microwave oven. Monitor foods and liquids heating or cooking in the microwave oven at all times due to the possibility of containers igniting.

- Liquids or other foods must not be heated in sealed containers since they are liable to explode.
- Some containers and/or plates may appear suitable for use in the microwave oven but may be coated in a glaze that will absorb the microwave energy, overheat and cause the container to crack. The glaze may also prevent the food from heating/cooking.
- Food and/or liquids should not be heated or cooked directly on the flatbed base plate. Food and/or liquids must be placed into a suitable microwave proof container before placing onto the flatbed base plate
- Food and/or liquids should not be heated or cooked in plastic or paper containers or bags, unless specified as suitable for use by the manufacturer, due to the possibility of containers exploding or igniting.
- Metal clips or twist ties should be removed from the packaging as these could cause sparking and/or fire.
- Do not use recycled paper or kitchen paper towelling when cooking. Recycled paper may contain small metal or other impurities which could cause sparking and/or fire.
- Do not use metal containers or utensils in the microwave oven as these could cause sparking and/or fire.
- Only use utensils that are suitable for use in microwave ovens.
- Food grade foil should not be used in the microwave oven as this could cause sparking and/or fire.
- Ensure that lids and caps covering containers are removed prior to placing liquids and/or foods into the microwave oven.

- Feeding bottles and baby food jars should have lids and caps removed before warming or heating in the microwave oven. To avoid burns or scalding after heating, the contents should be stirred or shaken and the temperature checked before serving.
- Always ensure the temperature of food or drink which has been heated or cooked in the microwave oven has been tested before eating, drinking or serving to others, especially children, disabled or elderly people.
- The heating of liquids and beverages in the microwave oven can result in delayed eruptive boiling. Care must be taken when handling any containers containing hot liquids or beverages.
- Do not heat popcorn in the microwave oven unless it has been commercially packaged for microwave use. There may be a number of un-popped kernels that may overcook and burn when popping popcorn. Do not use oil unless recommended by the manufacturer. Do not pop popcorn longer than the manufacturer's instructions (popping time should not exceed 3 minutes). Longer cooking could cause scorching or fire.
- Do not cook any food surrounded by a membrane (such as potatoes, chicken liver, egg yolks, oysters, etc) without first piercing the membrane several times with a fork or similar utensils.

- Fresh eggs in the shell and whole hard-boiled eggs should not be cooked or heated in the microwave oven as they may explode during cooking, at the end of cooking or after removing from the microwave oven.
- Do not heat oil or fat for shallow or deep frying in the microwave oven. Doing so may cause the microwave oven and/or the oil to overheat and/or ignite.
- If any smoke is observed, switch off and unplug the microwave oven at the power outlet. Keep the door closed to stifle any flames.
- Do not attempt to operate the microwave oven by any method other than those described in this instruction book. Do not disconnect the microwave oven from the power supply by pulling on the cord to unplug from the power outlet.
- When storing the microwave oven loosely wind the cord. Do not wrap the cord around the microwave oven.
- Only use the temperature probe recommended or supplied together with this microwave oven. This is only applicable if the appliance has the facility to use a temperature sensing probe.



CAUTION

- Surfaces may be hot during and after use. If the product is not maintained in a good state of cleanliness, its surface could be degraded and affect the life span of the product and lead to a dangerous situation.

FOR HOUSEHOLD USE ONLY
SAVE THESE INSTRUCTIONS



Components




A. Viewing window

B. LED display

C. Control panel, cooking functions & dial

D. Flatbed base plate

E. Push button door release

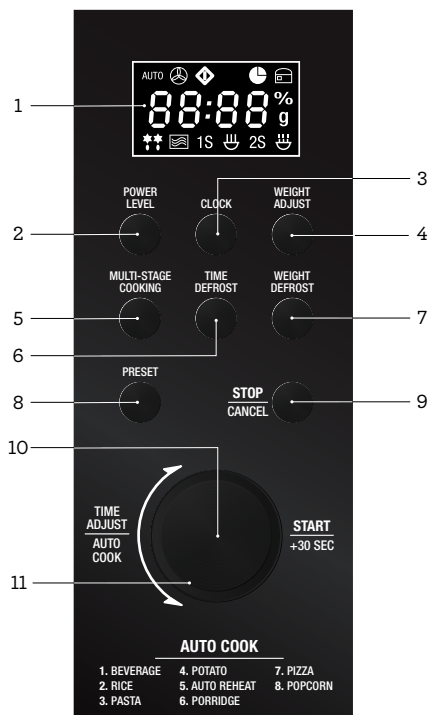

LED DIGITAL DISPLAY ICONS

AUTO	Auto Cook
	No Power - 0%
	Pause
	Clock
	Safety Child Lock
%	Power Level
g	Unit Weight
	Power - 10% - 70%
2S	Second Cooking Program
	Power - 80% - 100%
1S	Current Cooking Program
	Microwave/Start
	Defrost
88:88	Numbers (Running Time/Clock)

- LED digital display screen**
Displays selected cooking progress, power and digital clock.
- POWER LEVEL**
Press to select microwave power level percentage - 100%, 80%, 60%, 40%, 20% or 00%.
- DIGITAL CLOCK (24 HR)**
Press to set the current time.
- WEIGHT ADJUST**
Use to select the weight or amount of food.
- MULTI-STAGE COOKING**
Use to set up to two cooking stages using different power levels.
- TIME DEFROST**
Use to defrost by time. The defrosting power level is automatically set once the defrosting time is programmed.
- WEIGHT DEFROST**
Defrost by food category and weight; the defrosting time and power level will be automatically set.
- PRESET**
Pre-program a future start time.
- STOP/CANCEL**
Press once to pause cooking or twice to cancel cooking. It is also used for setting the Safety Child Lock.
- START/+30SEC (Push Dial)**
Push the dial in once for 30 second instant cooking at 100% power, and each additional push of the dial will add 30 seconds to the cooking time.
- TIME ADJUST/AUTO COOK (Turn Dial)**
Turn the dial clockwise to set cooking time. Turn the dial anti-clockwise to select from the Auto Cook menu.



Functions

INTRODUCTION TO MICROWAVE COOKING

- Microwaves are invisible waves of electromagnetic energy similar to radio waves. Instead of being converted to sound as in a radio or mobile phones, it is converted into a heat source which heats food from the inside.
- Microwaves cook because food molecules of water, fat and sugar react to the energy provided by the microwaves. That energy is absorbed by the food causing the molecules to vibrate quickly. This movement creates friction which causes the food to heat up and therefore cook.
- The energy in a microwave is distributed evenly throughout the cavity.
- Microwave cooking is considered the 'cool' cooking method as only the food gets hot and surrounding air stays cool.
- Microwaves are safe and can be economical.
- Microwave ovens don't need preheating therefore the kitchen stays cooler. Cooking is cleaner with less odours and washing up is reduced.
- Microwave ovens cook foods rapidly. Some foods are better cooked in a microwave oven as they retain more flavour, moisture, texture and goodness, such as plain fish fillets, soft fruit, vegetables and fat free cakes.
- In a microwave the heat is produced **INSIDE** the food. In all other conventional cooking methods, heat is applied from **OUTSIDE** through transference of heat by convection or radiation.
- Microwave energy penetrates the food to a depth of approximately 25mm. Small foods under 5cm in diameter such as eggs are penetrated to the centre, from all sides. In larger foods, energy creates heat in the outer layer; this then moves to the centre by conduction, as it does with conventional cooking.

BEFORE FIRST USE

- Before first use, remove all promotional stickers and packaging material before using the microwave oven for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this microwave oven.
- Carefully unpack the microwave oven and keep all packing material until all the parts of the microwave oven have been found and the appliance has been assembled.
- To remove any dust that may have accumulated during packing, wipe the interior and exterior of the microwave oven with a soft, damp cloth and dry thoroughly.



WARNING

Do not immerse any part of your microwave oven in water or any other liquid

TIPS ON SETTING UP YOUR MICROWAVE

- Select a level surface that provides enough open space for the air intake and/or outlet vents.
- A minimum clearance of 20cm on each side and 30cm above the microwave is required between the microwave oven and any adjacent walls.





NOTE

- Do not remove the feet from the bottom of the microwave oven.
- Blocking the air intake and/or outlet openings can damage the microwave oven.
- Do not install the microwave oven over a range cooktop or other heat-producing appliance.
- Place the microwave oven as far away from radios and televisions as possible.
- The operation of a microwave oven may cause interference to your radio or television reception.
- The microwave must not be placed in a cabinet.



WARNING

- Do not install the microwave oven over a range cooktop or other heat-producing appliance.
- If installed near or over a heat source, the microwave oven could be damaged and the warranty would be void.
- Check the microwave oven for any damage, such as misaligned or bent door, damaged door seals and sealing surface, broken or loose door hinges and latches and dents inside the cavity or on the door.
- If there is any damage, do not operate the microwave oven and contact a Breville service centre.
- Do not immerse the microwave oven, power cord or plug in water or any other liquid.

OPERATING THE MICROWAVE OVEN

1. Plug the power cord into a 230V or 240V power outlet and switch on the power outlet. The microwave LED display will illuminate indicating it is ready.

SETTING THE CLOCK

When the power is switched on, the LED will display 1:00. Press the CLOCK button once to set the digital clock in a 24 hour format.



NOTE

Before using PRESET, the clock must be programmed to the correct time.

EXAMPLE: To set the clock time to 8:30:

1. Press the CLOCK button once and the hours digits will flash.
2. Turn the TIME ADJUST/AUTO COOK dial until 8 flashes on the LED display. Press the CLOCK button to set this hour. The minutes digits will begin to flash.



3. Turn the TIME ADJUST/AUTO COOK dial until :30 is indicated. Press the CLOCK button to set.



NOTE

Press the CLOCK button once to check clock time during cooking.

+30 SEC INSTANT START

The microwave oven is equipped with a +30 second instant start.

1. Push the START/+30 SEC dial once to start cooking for 30 seconds at 100% microwave power. Each additional push of the dial will increase the cooking time by 30 seconds incrementally, to a maximum of 10 minutes. The microwave oven will start automatically after the START/+30 SEC dial is pushed.
2. Press the STOP/CANCEL button once to pause or twice to cancel.



IMPORTANT

+30 SEC will not operate if a cooking time has been programmed.

PROGRAM TIME COOKING

1. To set a cooking time, FIRST turn the TIME ADJUST/AUTO COOK dial clockwise to display the time. Continue turning clockwise to increase cooking time, or anti-clockwise to decrease.
 - The time increases in 10 second increments up to 5 minutes, 30 seconds up to 10 minutes, then 1-minute increments up to 30 minutes, then 5-minute increments up to 95 minutes. Cooking power is 100% high on this function.



NOTE

FIRST turning the dial anti-clockwise will activate the auto-cook settings, not the time.

If no action is taken after 20 seconds, the LED display will revert back to the CLOCK time set, and re-programming will be required.

2. Press the START/+30 SEC button to start.



NOTE

The +30 second instant start cannot be used to add additional cooking time when using this function.

3. Press the STOP/CANCEL button once to pause or twice to cancel.

AUTO COOK MENUS



NOTE

The Auto Cook menu selections can only be made by FIRST turning the TIME ADJUST/AUTO COOK dial anti-clockwise.

- This microwave oven comes pre-programmed with 8 Auto Cook menus.
 - When using any of the Auto Cook menus, only the quantity or weight of the item needs to be selected as the power level and cooking time is automatic.
 - For Beverage and Potato, the display will show the number of servings instead of food weight when pressing the WEIGHT ADJUST button.
 - If no action is taken after 20 seconds during programming, the LED display will revert back to the CLOCK time set, and re-programming will be required.
1. To select from the Auto Cook menu, rotate the TIME ADJUST/AUTO COOK dial anti-clockwise to the menu item desired. Press the WEIGHT ADJUST to scroll through the weight or quantity of the item to be cooked.
 2. Push the START/+30 SEC dial to start.
 3. Press the STOP/CANCEL button once to pause or twice to cancel.

EXAMPLE: To cook 150g of porridge.

1. Turn the TIME ADJUST/AUTO COOK dial anti-clockwise until 06 is displayed.
2. Press the WEIGHT ADJUST button repeatedly until 150g is indicated on the LED display.
3. Push the START/+30 SEC dial to start.



NOTE

The result of auto cooking depends on factors such as fluctuation of voltage, the shape and size of food, your personal preference as to the doneness of certain foods and even how well you happen to place food in the microwave oven.

AUTO COOK MENU GUIDE

Auto	Auto Menu	Weight/Portion	Default Time
1	Beverage	1 Portion/200ml	1.3
		2 Portions/400ml	2.4
		3 Portions/600ml	3.5
2	Rice	150g	18*
		300g	18
		450g	22
		600g	24
3	Pasta	100g	13
		200g	20
		300g	24
4	Potato	1 Portion/230g	5
		2 Portions/460g	8
		3 Portions/690g	12
5	Auto Reheat	200g	2
		300g	2.3
		400g	3
		500g	3.3
		600g	4
		700g	4.3
		800g	5.3
6	Porridge	50g	2
		100g	3.45
		150g	5
7	Pizza	150g	1
		300g	1.4
		450g	2.2
8	Popcorn	100g	2.4

*When cooking 150g of rice add an extra $\frac{1}{4}$ cup water.

PRESET COOKING

- The PRESET button allows you to pre-program a future cooking start time up to 24 hours across the various microwave functions; Auto Cook, Multi-Stage Cooking, Weight or Time Defrost.
- The microwave function of choice must be programmed prior to using the PRESET button.
- If no action is taken after 20 seconds during programming, the LED display will revert back to the CLOCK time set, and re-programming will be required.

Example: To preset the heating of 2 beverages at 5:00am, using the PRESET function.

- To preset the start time when using the AUTO COOK menu selection, Beverage, turn the TIME ADJUST/AUTO COOK dial anti-clockwise to display 1 (for Beverage), press the WEIGHT/ADJUST button and turn the TIME ADJUST/AUTO COOK dial to select 2 Beverages, then press the PRESET button to set the time you require the microwave oven to start.
 - The hour digits will flash on the display. Turn the TIME ADJUST/AUTO COOK dial to adjust the hours to display '5'. Press the PRESET button again to change to minutes. The minute digits will flash. Turn the TIME ADJUST/AUTO COOK dial to adjust the minutes to display '00'. The preset button is now set to heat 2 beverages at 5:00am.
 - Push the START/+30 SEC dial to start. The clock icon on the display will flash to indicate that the preset has been set. The microwave will start at the time set.
- To check the programmed start time, press the PRESET button.
 - To cancel Preset at any time, press the PRESET button and when the programmed start time is displayed, press the STOP/CANCEL button. The clock icon will stop flashing.



NOTE

- The PRESET button can only be set, to begin within 24 hours of setting the preset button – you cannot program to set on a specific date.
- Once the preset function has been set - the microwave cannot be used for any other function, until the preset function has been completed or cancelled.



WARNING

When using PRESET, use caution when choosing food or liquid to cook at a later time to ensure it adheres to food safety criteria which will allow for it to stand uncooked over that set period of time.

MULTI STAGE COOKING

- This microwave oven can be programmed for up to 2 automatic cooking sequences. This is handy if you want to reduce the power level during cooking.
- If no action is taken after 20 seconds during programming, the LED display will revert back to the CLOCK time set, and re-programming will be required.

EXAMPLE: To cook lasagne at 100% power for 5 minutes and then 60% for the last 8 minutes

1. Press the POWER LEVEL button once to display 100.
2. Turn the TIME ADJUST/AUTO COOK dial to set the time for 5 minutes.
3. Press the MULTI-STAGE COOKING button.
4. Press the POWER LEVEL button until 60% is displayed.
5. Turn the TIME ADJUST/AUTO COOK dial to set the time for 8 minutes.
6. Push the START/+30 SEC dial to start.
7. Press the STOP/CANCEL button once to pause or twice to cancel.



NOTE

Time Defrost, Weight Defrost, +30 Sec and Auto Cook cannot be programmed when using the Multi-Stage cooking program.

POWER LEVEL ADJUST

You can adjust the cooking Power Level on the microwave oven.

1. Press the POWER LEVEL button repeatedly to scroll through the different power levels.
2. Push the START/+30 SEC dial to start.
3. Press the STOP/CANCEL button once to pause or twice to cancel.

Press	POWER LEVEL Cooking power	Display
1 Time	100%	100
2 times	80%	80
3 times	60%	60
4 times	40%	40
5 times	20%	20
6 times	0%	00

DEFROST FUNCTIONS

- This microwave oven is handy for defrosting frozen foods, such as meat, poultry, or seafood. There are two defrost options to select from.
- When using either of the defrosting programs, the system will pause and sound beeps to remind the user to turn food over.
- If no action is taken after 20 seconds during programming, the LED display will revert back to the CLOCK time set, and re-programming will be required.

WEIGHT DEFROST

When using Weight Defrost, the time and defrosting power level are adjusted automatically once the weight is programmed.

The weight of the frozen food varies between 100g and 1800g.

1. Press the WEIGHT ADJUST button to scroll through the weight options.
2. Push the START/+30 SEC dial to start.
3. The microwave will pause, and a beep will sound indicating the need to turn the food over. Once the food has been turned, push the START/+30 SEC dial to resume defrosting.
4. Press the STOP/CANCEL button once to pause or twice to cancel.

TIME DEFROST

- The microwave oven can quickly defrost food based on the time you program.
 - The maximum defrosting time you can set is 95 minutes.
1. Press the TIME DEFROST button once.
 2. Turn the TIME ADJUST/AUTO COOK dial to set the defrosting time.
 3. Push the START/+30 SEC dial to start.
 4. The microwave will pause, and a beep will sound indicating the need to turn the food over. Once the food has been turned, push the START/+30 SEC dial to resume defrosting.
 5. Press the STOP/CANCEL button once to pause or twice to cancel.

TIPS ON DEFROSTING

- The energy required for defrosting is much lower than for cooking as the microwave causes the ice formed in the food to melt, rather than heat.
- Before defrosting meat in the microwave oven, remove the freezer bag or wrapping to prevent meat sitting in 'drip', which will otherwise boil as the meat defrosts causing meat to go grey and begin to stew.
- To remove frozen meat from freezer wrappings, defrost for a few minutes so the wrap is easy to remove.
- Remove meat from Styrofoam trays as they are not microwave-safe.
- Place meat onto a microwave safe rack and a drip tray to catch juices.
- Check the meat throughout the defrosting time. As outer portions of meat thaw, remove them. If the edges of meat feel warm, stop microwaving and allow meat to stand for a few minutes or until edges are cold again.
- After defrosting the meat, it must be cooked right away. Don't leave it to stand for any length of time at room temperature or in the fridge.

SAFETY CHILD LOCK

- The Safety Child Lock can be activated to prevent unsupervised operation of the microwave oven by children.
 - When activated, the microwave oven cannot be operated and the SAFETY CHILD LOCK icon will illuminate on the display.
1. To set the SAFETY CHILD LOCK, press and hold the STOP/CANCEL button for 3 seconds until a beep sounds and the SAFETY CHILD LOCK icon will illuminate on the display.
 2. To cancel the SAFETY CHILD LOCK, press and hold the STOP/CANCEL button for 3 seconds until the SAFETY CHILD LOCK icon is no longer displayed on the screen.



Tips

SOME IMPORTANT TIPS FOR MICROWAVING COOKING

- To help equalize energy in the food so that it cooks evenly follow these helpful tips.
- Arrange foods with varying size ends, such as chicken drumsticks and broccoli with the thicker or tougher part positioned to the outside of the dish. This ensures the parts that require more cooking will receive more energy, so the food will cook evenly.
- Covering the dish during cooking holds in the heat and steam to speed up the cooking time. Use a microwave-safe lid that has been vented, to allow the release excess steam.
- Choose cooking dishes that are shallow dishes enable the food to cook faster.
- Use round shaped microwave dishes. Round shapes cook more evenly than square or rectangular dishes which absorb most of the energy in the corners causing food to overcook and toughen.
- Stir foods from the outside to centre of the dish once or twice during cooking to equalize heat and speed microwaving.
- Turn medium to large food items over once during microwaving. This enables even exposure to micro waves.
- Elevating some types of food such as cakes, roast vegetables and dough products can be advantageous. It allows more energy to penetrate the food from all sides, base and top. Use a microwave-safe plastic or ceramic rack. Do not elevate any special browning dishes, jugs of sauce or custard, small quantities of food or mugs of beverages. Internal temperatures of foods continue to rise so that they continue cooking even after they have been removed from the microwave oven.
- It is better to underheat food slightly as it will continue to cook once removed from the microwave.
- MICROWAVE UTENSILS, containers, plates, dishes, etc. used in the microwave oven should always be microwave-safe. Check if they are microwave-safe on the underside of the utensil or contact the manufacturer.
- Metal containers and utensils should not be used in the microwave oven.



Care, Cleaning & Storage

- Switch off the microwave oven at the power outlet and remove the plug from the power outlet before cleaning.
- Keep the inside of the microwave oven clean.
- When food splatters or spilled liquids adhere to the microwave oven internal walls, wipe with a damp cloth. Mild detergent may be used if the cavity gets very dirty. Avoid the use of spray and other harsh cleaners as they may stain, streak or dull the door surface.
- The outside surfaces should be cleaned with a damp cloth. To prevent damage to the operating parts inside the microwave oven cavity, water should not be allowed to seep into the ventilation openings.
- Wipe the door and window on both sides of the door seals and adjacent parts frequently with a damp cloth to remove any spills or splatters. Do not use an abrasive cleaner.
- Do not allow the control panel to become wet. Clean with a soft, damp cloth. When cleaning the control panel, leave the microwave oven door open to prevent it from accidentally turning on.
- If steam accumulates inside or around the outside of the oven door, wipe with a soft dry cloth. This may occur when cooking foods high in moisture or if the microwave oven is operated under high humidity conditions, this is normal.
- Remove odours from your microwave oven by combining a cup of water with the juice of one lemon in a deep microwave-safe bowl, microwave on highest power level for 5 minutes. Wipe the microwave oven cavity thoroughly and dry with a soft cloth.
- When it becomes necessary to replace the oven light, please consult your Breville service centre to have it replaced.
- If storing the microwave oven, press the STOP/CANCEL button, switch off at the power outlet then unplug the power cord. Ensure the microwave oven is completely cool, clean and dry. Do not place heavy objects on top. Store the microwave oven upright.
- Please do not dispose of this appliance with domestic rubbish; it should be taken to the appropriate disposal centre provided by your local council municipalities.

BEFORE YOU CALL FOR SERVICE

- Check to ensure that the microwave oven is plugged in securely. If it is not, remove the plug from the power outlet, wait 10 seconds and plug it in again securely.
- Check for a blown circuit fuse or a tripped main circuit breaker. If these seem to be operating properly, test the power outlet with another appliance.
- Check to ensure that the control panel is programmed correctly and the timer is set.
- Check to ensure that the door is securely closed engaging the door safety lock system. Otherwise, the microwave energy will not flow into the microwave oven.



NOTE

If none of the above rectify the situation, then contact your Breville service centre. Do NOT try to adjust or repair the microwave oven yourself.



Troubleshooting

PROBLEM	POSSIBLE REASON	EASY SOLUTION
Microwave oven will not start	<ul style="list-style-type: none">• Power cord not plugged in properly or switched on• Fuse blown or circuit breaker problem• Trouble with outlet	<ul style="list-style-type: none">• Ensure door is shut properly• Check to make sure there are no obstructions or that the door is not damaged in any way
Microwave oven does not heat	<ul style="list-style-type: none">• Door not closed properly	<ul style="list-style-type: none">• Ensure door is shut properly• Check to make sure there is no obstructions or that the door is not damaged in any way
Microwave oven interfering with television reception	<ul style="list-style-type: none">• Radio and TV reception may be interfered with during operation. This is similar to the interference that is sometimes cause by vacuums, blenders etc.	<ul style="list-style-type: none">• Interference should stop once microwave is switched off
Dim microwave oven light	<ul style="list-style-type: none">• When operating on low power levels, the microwave oven light may be dimmer.	<ul style="list-style-type: none">• This occurrence is normal
Steam accumulating and/or hot air coming out from vents	<ul style="list-style-type: none">• During operation, steam may be produced. Most will exit through the vents, however some may accumulate around the microwave oven door.	<ul style="list-style-type: none">• Once microwave cooking is complete, steam condensation maybe removed by wiping over the affected area with a dry cloth



Notes

Breville Customer Service Centre

Australian Customers

Phone: 1300 139 798

Web: www.breville.com

New Zealand Customers

Phone: 0800 273 845

Web: www.breville.com

Breville®

Master Every Moment™

Breville, the Breville logo, Master Every Moment and Silhouette Flatbed are trademarks of Breville Pty. Ltd.
A.B.N. 98 000 092 928. Copyright Breville Pty. Ltd. 2021. All other brand names may be trademarks of their respective owners.

Due to continued product improvement, the products illustrated/photographed in this booklet
may vary slightly from the actual product.

LMO420 ANZ G21