

the Oracle™ Jet

Instruction Book - BES985



Breville®



Contents

- 2 Limited product warranty
- 2 Breville® recommends safety first
- 7 Components
- 8 Accessories
- 9 Features
- 10 Assembly
- 11 Guide and settings
- 12 Care and cleaning
- 15 Troubleshooting



Limited Product Warranty

Breville's warranty for this product covers the repair or replacement if it's found to be defective due to faulty materials, workmanship, or function within the warranty period. All legal warranty rights under applicable national legislation will be respected and will not be impaired by our warranty. For details on length of warranty, to obtain a printed copy or to read full terms and conditions please



QR149

scan the QR code or visit www.breville.com. Alternatively, call the Breville Service Centre (see back cover for contact details).

BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture appliances with your safety foremost in mind. We also ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

IMPORTANT SAFEGUARDS

Read all instructions before use and save for future reference.

- Remove and discard any packaging materials safely before use.
- Ensure the product is properly assembled before use and fully unwind the power cord before operating.
- Before using for the first time, please ensure that your electricity supply is the same as shown on the rating label on the underside of the appliance. If you have any concerns, please contact your local electricity company.
- The installation of a residual current safety

- switch is recommended to provide additional safety when using all electrical appliances. Safety switches with a rated operating current not more than 30mA are recommended. Consult an electrician for professional advice.
- Regularly inspect the power cord, plug and appliance for any damage. If found to be damaged in any way, immediately cease use of the appliance, and return the entire appliance to the nearest authorised Breville Service Centre for examination, replacement, or repair.
 - Do not let the power cord hang over the edge of a counter or table. Do not let the power cord touch hot surfaces or become knotted.
 - Do not touch hot surfaces. Always ensure the appliance has been allowed to cool; if the appliance is to be: left unattended, cleaned, moved, assembled, or stored, always switch off the espresso machine by pressing the POWER button to OFF. Switch off and unplug from the power outlet.
 - Children must not play with the appliance. Do not leave the appliance unattended when in use. Do not move the appliance whilst in operation.
 - The appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Cleaning and user maintenance shall not be made by children. Keep the appliance and its cord out of reach of children.
 - To eliminate a choking hazard for young children, discard the protective cover fitted to the power plug safely.
 - Position the appliance on a stable, heat and water resistant, level, dry surface away from the counter edge, and do not operate on or near a heat source such as a hot plate, oven, or gas hob.
 - Do not operate the appliance in an enclosed space, or inside a cupboard.

- Do not use attachments other than those provided with the appliances. The use of attachments not sold or recommended by Breville may cause fire, electric shock, or injury.
- This appliance is for household use only. Do not use the appliance for anything other than its intended purpose. Do not use in moving vehicles or boats. Do not use outdoors. Misuse may cause injury.
- Improper use of the appliance, incorrectly operated or unprofessionally repaired will void any warranty claim. No warranty for any damages can be accepted.
- The appliance is not intended to be operated by means of an external timer or separate remote-control system.
- Use caution when operating machine as metal surfaces are liable to get hot during use. Heating element is subject to residual heat after use.
- Do not open the programming port, this is exclusively for authorised service personnel only.
- Do not operate the grinder without the hopper lid in position. Keep fingers, hands, hair, clothing, and utensils away from the hopper during operation.
- Ensure the portafilter is firmly inserted and secured into the group head before starting an extraction. Never remove the portafilter during the extraction process. Failure to follow this instruction may lead to scalding by hot steam or hot coffee.
- Do not fill water tank with hot water or milk.
- The front top fill is not for milk. Do not pour milk in the front top fill.
- Do not use the appliance without water in the water tank.
- Use caution after milk texturing, as the 'Auto Purge' function may purge hot steam when steam wand is lowered.
- Wipe the outer surface with a soft dry cloth. Keep the appliance and accessories clean.
- Servicing other than cleaning should only be performed by an authorised service representative or at an authorised Breville Service Centre.

- Any alcohol based cocktail drinks are intended for use solely by the responsible adults of legal drinking age in their respective country and /or state and/ or province. Please use the recipes wisely and responsibly.
- Improper use of the machine such as brewing coffee in the portafilter without one of the provided filter baskets, may cause injury and/or damage to surfaces surrounding the machine.

NOTICE TO CUSTOMERS REGARDING MEMORY STORAGE

Please note that in order to better serve our customers, internal memory storage has been embedded into your appliance. This memory storage consists of a small chip to collect certain information about your appliance including the frequency of use of the appliance and the manner in which your appliance is being used. In the event your appliance is returned for service, the information collected from the chip enables us to quickly and efficiently service your appliance. The information collected also serves as a valuable resource in developing future appliances to better serve the needs of our consumers. The chip does not collect any information regarding the individuals who use the

product or the household where the product is used.

If you have any questions regarding the memory storage chip please contact us at privacy@breville.com

WARNING FOR BUTTON BATTERY



Button battery inside this product



Keep out of reach of children

The battery inside the product shall not be replaced or removed by the user at any time.

- The battery is hazardous and is to be kept away from children (whether the battery is new or used).
- Swallowing battery may lead to serious injury in as little as 2 hours or death, due to chemical burns and potential perforation of the oesophagus.
- If you suspect your child has swallowed or inserted a button battery, immediately seek medical attention, or call the 119 emergency number for fast, expert advice.
- Tell others about the risks

associated with button batteries and how to keep their children safe.

- Dispose of used button batteries immediately and safely. Flat batteries can still be dangerous.



WARNING

To avoid the risk of injury, do not open the brew chamber during the brew process.



To protect against, fire, electric shock; do not immerse the power cord, power plug or appliance in water or any other liquid.



The symbol shown indicates that this appliance should not be disposed of in normal household waste.

It should be taken to a local authority waste collection centre designated for this purpose or to a dealer providing this service. For more information, please contact your local council office.




NOTE

To prevent damage to the appliance, do not use alkaline cleaning agents. Use a clean soft cloth instead.

FOR HOUSEHOLD USE ONLY SAVE THESE INSTRUCTIONS




Components

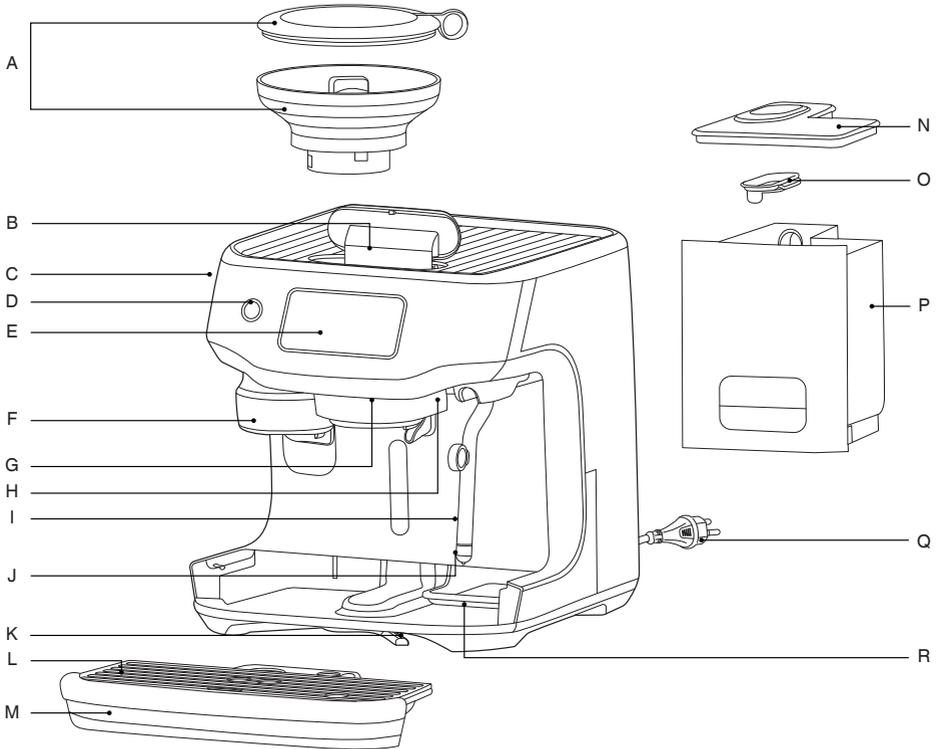

- | | |
|-------------------------------|-----------------------------|
| A. 340g bean hopper | J. Milk temperature sensor |
| B. Front top water fill | K. Front lever 3rd wheel |
| C. Grind size adjustment dial | L. Drip tray grill |
| D. Power button | M. Drip tray |
| E. 5 inch HD touch screen | N. Water tank lid |
| F. Grind and tamp outlet | O. Water tank mesh lid |
| G. Heated 58mm group head | P. Water tank |
| H. Dedicated hot water outlet | Q. Power cord with storage |
| I. Auto MilIQ™ steam wand | R. Hidden tool storage tray |



Accessories

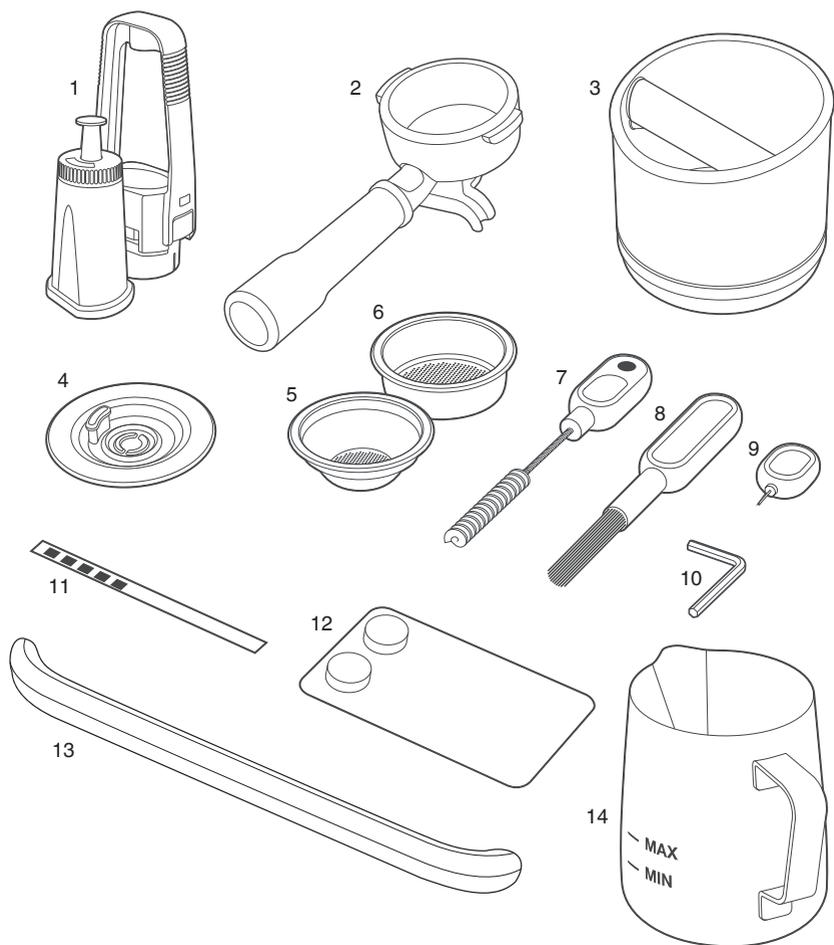

1. Water filter and filter holder
2. 58 mm Stainless Steel Portafilter
3. Knock Box™ 10
4. Cleaning disc
5. Single wall 1 cup filter basket
6. Single wall 2 cup filter basket*
7. Grind outlet brush and tamp removal magnet
8. Cleaning brush
9. Cleaning tool for steam wand tip

10. Hex Key
11. Water hardness strip
12. Cleaning tablets
13. Drip tray guard (included with machines in colour only)
14. Stainless steel milk jug

* Single wall 2 Cup filter basket comes installed in the portafilter.



Features

THERMOJET HEATING SYSTEM

The state-of-the-art heating system is our fastest and most efficient heating system. Ready to go in seconds.

THERMOJET HEATED GROUP HEAD

Ensuring a stable and optimised extraction that meets professional level specifications. The heated group head can be customised in +/- 1 degree celsius increments to suit your taste.

AUTO GRIND DOSE & TAMP

Fully-integrated hardened 40mm precision conical burr grinder automatically grinds, doses and tamps 22 grams of coffee straight into the 58mm professional style portafilter.

AUTO MILQ

Silky smooth microfoam with settings for dairy, soy, almond and oat. Adjustable temperatures (45°C to 75°C) and 8 texture levels.

BARISTA GUIDANCE

By automatically detecting an over or under extracted espresso shot, Barista Guidance helps you adjust the grind size to achieve a more ideal pour.

5 INCH HD TOUCH SCREEN

A dynamic screen that is 4 times richer and 20 times more powerful than before. You can swipe, select and enjoy in high definition.

COLD COFFEE

Cold Brew

Brewing at lower temperatures reduces acidic flavour notes that heat retains. This creates a smooth and mellow flavour profile that can be enjoyed on its own or form the base for your cold brew experiments!

Cold Espresso

Extract at lower temperature produces a full flavoured crema topped espresso without the heavy tones. The cold espresso feature keeps the classic flavour while being softer and lighter in body.

AUTO QUEUE

Auto queue is a feature that allows to sequence the next function during selected milk based drinks:

- Brew coffee first and queue milk texturing.
- Texture milk first and queue coffee brewing.

PID TEMPERATURE CONTROL

Electronic temperature control delivers precise water temperature for optimum espresso flavour.

DEDICATED HOT WATERSPOUT

Dedicated hot water outlet for making long blacks, teas, and pre-heating cups.

DOUBLE TAP

Double tap on the grind, brew or steam icons to automatically purge the system ready for your brew.



Assembly

BEFORE FIRST USE

Machine Preparation

Remove and discard all labels and packaging materials attached to your espresso machine.

Ensure you have removed all parts and accessories from the box before discarding the packaging.

Remove the water tank located at the back of the machine unlocking the latch and pulling the water tank from the latch handle.

Clean parts and accessories (water tank, portafilter, filter baskets, milk jug) using warm water and a gentle dish washing liquid. Rinse well then dry thoroughly.




NOTE


Machines with colour, drip tray protection guard is included. **DO NOT DISCARD.**

INSTALLING THE WATER FILTER


- Remove the water filter and water filter holder from the plastic bag.
- Soak the filter in cold water for 5 minutes.
- Rinse the filter holder with cold water.

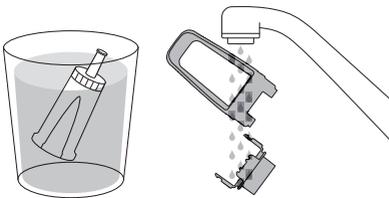

- Set a reminder for replacement. We recommend to replace filter every 3 months.

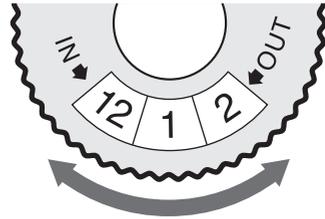

- Insert the filter into the two parts of the filter holder.
- To install the assembled filter holder into the water tank, align the base of the filter holder with the adapter inside the water tank. Push down to lock into place.

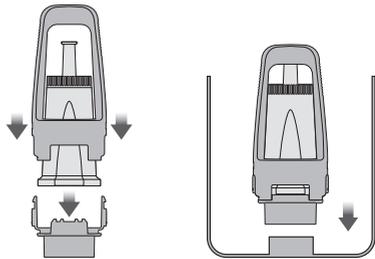

NOTE

Replacing the water filter every three months will reduce the need to descale the machine. Filters can be purchased at www.breville.com/kr



NOTE

Input the water hardness test strip result to the machine. If result is 4 or 5 bars when tested, we strongly recommend to change to an alternate water source. Filtered water will extend both the life of your built-in filter and descale intervals as well as provide superior taste. Ensure to test the water hardness of the alternative water source you've chosen and input into the machine accordingly. Avoid using overly filtered water, like RO water unless some mineral content is being added back to the final water. Never use distilled water, or water with no or low mineral content as this will affect the taste of coffee.



Guide and Settings

GUIDES

Startup Tutorial - Take you through the startup tutorial on how to make a coffee with the machine.

QR code links - Provides QR code links to areas such as Support, Machine Registration and Maintenance Products.

Understanding your Oracle Jet - Describes the key components of your coffee machine.

SETTINGS

Drink Settings

Barista Guidance - Switch on for grind size recommendations during your extractions.

Brew control settings - Switch between time or volumetric based brew output.

Temperature settings - Adjust the brew temperature.

Maintenance

Clean steam wand - Guides you through cleaning the steam wand to remove any blockage for better steaming performance.

Clean group head - Cleans the group head of oils and residue. Will require an Espresso cleaning tablet or powder.

Descale - Descaling prevents excess mineral and scale build-up. Will require descaling powder or solution.

Change water filter - To ensure machine has clean water to use.

Water hardness test - Configures the water hardness your machine is using. You will need an unused test strip.

Machine Settings

Theme - Switch between light or dark mode.

Sound - Adjusts the volume of the interface.

Screen brightness - Adjusts the brightness of the screen.

Light brightness - Adjust the brightness of the LED lights.

Units - Switch between imperial and metric units.

Country and Language - Select your region and preferred language on screen.

Time and Date - Set the time and date on the machine.

Wi-Fi - Connect to Wi-Fi to receive the latest software updates.

Demo mode - Looping video to showcase key features of the machine.

About the machine - Shows the serial number and firmware version of the machine.

Reset factory settings - Use this function to reset all programmable values back to the factory settings and delete all custom drinks.



WARNING

Do not unplug the machine while it is performing this function.



Care & Cleaning

HD TOUCH SCREEN DISPLAY

Excess dirt and grime can get in the crevices of your touch screen impairing its functionality. Keep the touch screen dry and clean to ensure optimal functionality. Use a screen cleaning wipe or a dry soft cloth.

CLEANING CYCLE

There will be a message prompt when a cleaning cycle is required. This is a backflushing cycle and is separate from descaling. There is also the option to start the cleaning cycle by choosing 'Clean Cycle' in 'Settings'. The cleaning cycle cleans the shower screen and back-flushes the group head to remove the build up of coffee and oils.

Follow the instruction on the screen.

DESCALING

There will be a message prompt when a descale cycle is required.


Even with the provided water filter, it is recommended to descale if there is scale buildup in the water tank.

There is also the option to start the descale cycle by choosing 'Descale Cycle' in the 'Settings'.

Follow the instruction on the screen.

CLEANING THE STEAM WAND

- The steam wand should always be cleaned after texturing milk. Wipe the steam wand with a damp cloth.
- If any of the holes in the tip of the steam wand become blocked, it may reduce frothing performance.
- Go to 'Settings' > 'Steam wand cleaning' and follow the guide on the screen.

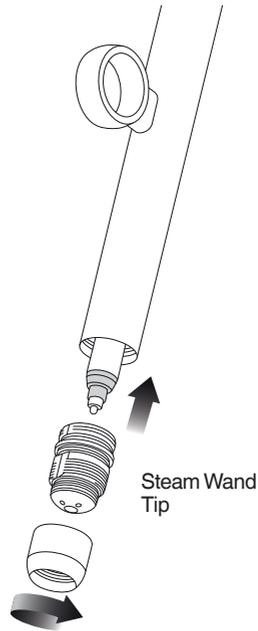

NOTES

- Ensure the steam wand tip is tightly fastened after cleaning.
- If the portafilter is inserted in the group head, make sure to let the machine cool down and then remove the portafilter, before turning the machine back on.

CLEANING THE FILTER BASKET AND PORTAFILTER

- The filter basket and portafilter should be rinsed under hot water after each coffee making session to remove all residual coffee oils.
- If the holes in the filter basket become blocked, dissolve a cleaning tablet in hot water and soak filter basket and portafilter in solution for approx. 20 minutes. Rinse thoroughly.

CLEAR WATER BACKFLUSH

- After each coffee making session we recommend doing a clear water backflush before you turn off the machine. Empty drip tray. Insert the cleaning disc into the filter basket then insert the portafilter into the group head. Touch the brew icon button and allow pressure to build for 20 seconds, then tap the glass image to stop & release pressure.

CLEANING THE SHOWER SCREEN

- The group head interior and shower screen should be wiped with a damp cloth to remove any ground coffee particles.
- Periodically purge the machine. Place an empty filter basket and portafilter into the group head. Tap the brew icon on the screen and run a short flow of water to rinse out any residual coffee.

CLEANING THE DRIP TRAY & STORAGE TRAY

- The drip tray should be removed, emptied and cleaned at regular intervals, particularly when the drip tray is full.
- Remove the grill from the drip tray. Lift the coffee grind separator and dispose of any coffee grounds. Wash all parts in warm soapy water with a soft cloth. Rinse and dry thoroughly.
- The storage tray (located behind the drip tray) can be removed and cleaned with a soft, damp cloth. Do not use abrasive cleansers, pads or cloths which can scratch the surface.

CLEANING THE OUTER HOUSING

The outer housing can be cleaned with a soft, damp cloth. Polish with a soft, dry cloth. Do not use abrasive cleansers, pads or cloths which can scratch the surface.




NOTE

All parts should be cleaned by hand using warm water and a gentle dish washing liquid. Do not use abrasive cleansers, pads or cloths which can scratch the surface. Do not clean any of the parts or accessories in the dishwasher.

CLEANING CONICAL BURRS

Regular cleaning helps the burrs achieve consistent grinding results which is especially important when grinding for espresso.

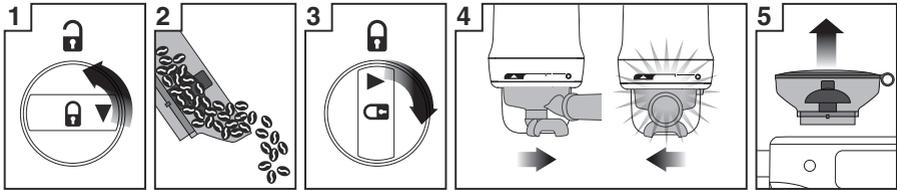


1 Unlock hopper

2 Remove beans

3 Replace & lock hopper

4 Run grinder until empty

5 Unlock & remove hopper

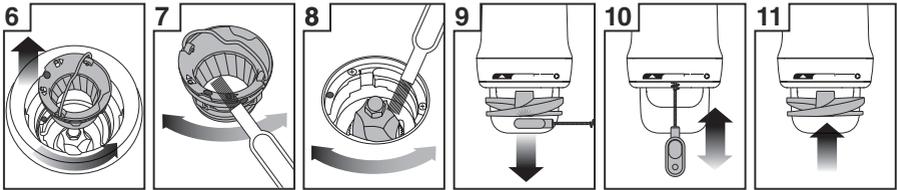

6 Remove upper burr


7 Clean upper burr with burr brush

8 Clean lower burr with burr brush

9 Remove tamping fan with tamp removal magnet

10 Clean grind outlet with grind outlet brush

11 Replace tamping fan by hand

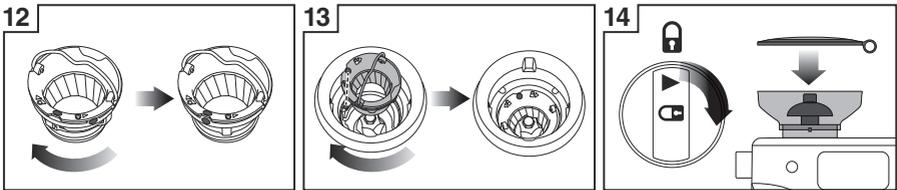

12 Align the two dots on the upper burr until it clicks firmly back in place

13 Align the dots on the upper burr with the grinder and lock firmly back in place

14 Replace and lock the hopper, and then replace the lid



NOTE

This machine is designed only for whole roasted coffee beans. Avoid grinding unroasted green and under-roasted coffee beans. These are dense and not brittle enough to run through a burr grinder. This will damage or break burr grinders and even pose a safety risk.



TIP

It is recommend to use quality 100% Arabica beans with a 'Roasted On' date stamped on the bag, not a 'Best Before' or 'Use By' date. Coffee beans are best consumed between 5–20 days

after the 'Roasted On' date. Stale coffee may pour too quickly from the portafilter spouts and taste bitter and watery.



ADJUSTING TAMPING HEIGHT FROM THE GRIND COLLAR

For tamper height adjustment reach out to customer service centre for instructions. See back cover for contact details.



Troubleshooting

CONNECTING YOUR ORACLE JET

The Oracle Jet is a Wi-Fi-enabled machine that will support downloading the latest software version. If the machine is not connected to a Wi-Fi, the machine can still be operated in the same way as an espresso machine with no network connection.



NOTE

We are constantly working to improve the software that may lead to changes in functionality and setup steps. Please rely on the instructions in the latest version by upgrading the software to guide you through the setup process.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Grinder Motor starts but no ground coffee coming from grind outlet	<ul style="list-style-type: none"> No coffee beans in bean hopper. Grinder/bean hopper is blocked. Coffee bean may have become stuck in hopper. 	<ul style="list-style-type: none"> Fill bean hopper with fresh coffee beans. Remove bean hopper. Inspect bean hopper & grinding burrs for blockage. Replace parts and try again.
Grinder Motor starts but operates with a loud 'clicking' noise	<ul style="list-style-type: none"> Grinder is blocked with foreign item or chute is blocked. Moisture clogging grinder. 	<ul style="list-style-type: none"> Remove bean hopper, inspect burrs and remove any foreign objects. Clean the burrs and grind outlet. Leave burrs to dry thoroughly before re-assembling. It is possible to use a hair dryer to blow air into the burr area to quicken the drying process.
Grinder motor over heating		<ul style="list-style-type: none"> Switch off and unplug from the power outlet and rest the machine for 5 minutes.
Unable to lock bean hopper into position	<ul style="list-style-type: none"> Coffee beans obstructing bean hopper locking device. 	<ul style="list-style-type: none"> Remove bean hopper. Clear coffee beans from top of burrs. Re-lock bean hopper into position.
Portafilter overfills	<ul style="list-style-type: none"> Tamping fan was removed for cleaning and not replaced. 	<ul style="list-style-type: none"> Check that the tamping fan is properly assembled, in position, and mounted correctly to the drive shaft.
Grinder Emergency stop		<ul style="list-style-type: none"> Rotate the portafilter to the left to stop the auto grind, dose & tamp function. Unplug power cord from power outlet.
Grinder running continuously	<ul style="list-style-type: none"> No beans in hopper. Tamping fan has been removed. 	<ul style="list-style-type: none"> Fill hopper with beans. Rotate the portafilter to the left to stop the auto grind, dose & tamp function. Check that the tamping fan is in position and mounted correctly to the drive shaft.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Coffee is grinding very coarse, even at low grind settings and/or cannot put the burr back in place	<ul style="list-style-type: none"> Upper burr may not be aligned and not inserted properly. 	<ul style="list-style-type: none"> Move the grind dial to a coarse setting (i.e. 45), this will make it easier to twist it counter clockwise to remove the upper burr holder. Clean grinds from both the upper and lower burrs. Ensure the dots on the upper burr are aligned before aligning it back to the dot on the lower burr by twisting it clockwise. Move the grind dial back to the original setting.
Espresso runs out around the edge of the portafilter	<ul style="list-style-type: none"> Portafilter not inserted in the group head correctly. 	<ul style="list-style-type: none"> Ensure portafilter is rotated to the right until the handle is past the centre and is securely locked in place. Rotating past the centre will not damage the silicone seal.
and/or	<ul style="list-style-type: none"> There are coffee grounds around the filter basket rim. 	<ul style="list-style-type: none"> Clean excess coffee from the rim of the filter basket after grinding to ensure a proper seal in group head.
Portafilter comes out of the group head during an extraction	<ul style="list-style-type: none"> Filter basket rim is wet or underside of portafilter lugs are wet. Wet surfaces reduce the friction required to hold the portafilter in place whilst under pressure during an extraction. 	<ul style="list-style-type: none"> Always ensure filter basket and portafilter are dried thoroughly before filling with coffee, tamping and inserting into the group head.
Pumps continue to operate / Steam is very wet / Hot water outlet leaks	<ul style="list-style-type: none"> Using highly filtered, demineralised or distilled water which is affecting how the machine is designed to function. 	<ul style="list-style-type: none"> We recommend using cold, filtered water. We do not recommend using water with no/low mineral content such as highly filtered, demineralised or distilled water. If the problem persists, contact Breville Consumer Support.
Water does not flow from the group head	<ul style="list-style-type: none"> Water tank is empty. 	<ul style="list-style-type: none"> Fill tank. Prime the system by: <ol style="list-style-type: none"> 1) Touching the 'Brew' button to run water through the group head for 30 seconds. 2) Touching 'Hot Water' to run water through the hot water outlet for 30 seconds.
	<ul style="list-style-type: none"> Water tank not fully inserted & locked. 	<ul style="list-style-type: none"> Push water tank in fully and lock latch closed.
	<ul style="list-style-type: none"> Over heated water pump due to back-to-back extraction 	<ul style="list-style-type: none"> Switch off the machine and unplug from the power outlet and let the machine cool down.
	<ul style="list-style-type: none"> Water diffuser plate is not installed correctly. 	<ul style="list-style-type: none"> Unscrew shower screen and ensure the water diffuser plate is facing the correct direction.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
Water in the drip tray	<ul style="list-style-type: none"> • Auto purge feature. 	<ul style="list-style-type: none"> • The water flow in the drip tray on startup and after steaming, is the auto purge feature. This is normal to prepare and ready the water line of the espresso machine.
The machine is 'On' but won't operate		<ul style="list-style-type: none"> • Switch off the machine, unplug from the power outlet, then plug the machine to the power outlet and turn the machine back on. • If problem persists, call Breville Consumer Support.
Espresso only drips from the portafilter spouts, restricted flow	<ul style="list-style-type: none"> • Coffee is ground too finely. 	<ul style="list-style-type: none"> • Adjust the grind size to a higher number to make the grind size slightly coarser. • There may be a blockage due to scale build up. Run the descale process.
Espresso flows out too quickly	<ul style="list-style-type: none"> • The coffee is ground too coarsely. • Coffee beans are stale. 	<ul style="list-style-type: none"> • Adjust the grind size to a lower number to make the grind size slightly finer. • Use freshly roasted coffee beans with a 'Roasted On' date and consume between 5–20 days after that date.
No crema	<ul style="list-style-type: none"> • Coffee beans are stale. 	<ul style="list-style-type: none"> • Use freshly roasted coffee beans with a 'Roasted On' date and consume between 5–20 days after that date.
Not enough milk texture	<ul style="list-style-type: none"> • Steam wand is blocked. 	<ul style="list-style-type: none"> • Refer to 'Cleaning the Steam Wand'. • There may be a blockage due to scale build up. Run the descale process. <ul style="list-style-type: none"> • Different brands and types of milk and milk alternatives will texture differently. You may need to adjust the froth level accordingly.
Steam or hot water is not coming out, and there is no error notification even after completing the descale or steam wand cleaning cycle	<ul style="list-style-type: none"> • Potential valve issue. 	<ul style="list-style-type: none"> • After the machine has cooled down, unplug the machine from the power outlet and remove the portafilter. Then, plug it back in and check if hot water or steam is coming out. If the problem persists, contact Breville Customer Service Centre.
I cannot connect my machine to the Wi-Fi	<ul style="list-style-type: none"> • Wrong password entered for the SSID. • Check the router proximity, signal strength might be weak. 	<ul style="list-style-type: none"> • Unplug and plug the machine into the powerpoint. • Retry entering Wi-Fi credentials again. • Install the router closer to the appliance for stronger signal strength.
No Wi-Fi router available	<ul style="list-style-type: none"> • No device available to provide internet access. 	<ul style="list-style-type: none"> • Try using a mobile phone hot-spot. • For optimal performance, it is highly recommended to purchase a Wi-Fi router.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
No mobile phone hot-spot available	<ul style="list-style-type: none"> No device available to provide internet access. 	<ul style="list-style-type: none"> To skip the Wi-Fi selection, follow these steps: <ol style="list-style-type: none"> 1) Enter the “Select your network” mode. 2) Select “Other” if there is no internet. 3) Click the arrow button in the top right corner to skip the “Network” selection. 4) Click the arrow button in the top right corner to skip the “Password” entry. 5) A “Connecting” error is likely to occur. Select “Try again” and repeat above steps. After the second failed attempt, choose “Update later” to skip the Wi-Fi setup.
It is taking a long time to connect to the cloud and taking a long time to initialize	<ul style="list-style-type: none"> Router proximity issue. 	<ul style="list-style-type: none"> Unplug and plug the machine into the powerpoint. Reboot the router. Retry entering the Wi-Fi credentials again. If problem persists, call Breville Consumer Support.
It is taking a long time to download the software update	<ul style="list-style-type: none"> Wi-Fi signal strength is weak. 	<ul style="list-style-type: none"> Restart the coffee machine. Move the Wi-Fi router closer to the coffee machine.
Software is downloaded but not installing	<ul style="list-style-type: none"> Machine requires a reboot 	<ul style="list-style-type: none"> Unplug and plug the machine into the powerpoint. Perform a factory reset. If problem persists, call Breville Consumer Support.

PROBLEM	POSSIBLE CAUSE	WHAT TO DO
No Wi-Fi available	<ul style="list-style-type: none">• NO signal coverage, mobile phone or Wi-Fi router available.	<ul style="list-style-type: none">• Connect your coffee machine to your mobile phone hot spot.• Connect your coffee machine to your Wi-Fi router (if available). <p> NOTE: For optimal performance, it is highly recommended to have the machine connected to Wi-Fi for regular software updates.</p> <ul style="list-style-type: none">• It is possible to use the machine without Wi-Fi. If the software version persists on connecting to Wi-Fi, follow these steps on the connection screen:<ul style="list-style-type: none">- Enter the "Select your network".- Select Other if there is no internet.- Click the arrow button to skip the Network selection.- Click the arrow button to skip the Password entry.- A "Connecting" error is likely to occur. <p>Select Try again and repeat above steps. After the second failed attempt, click Update later to skip Wi-Fi setup.</p>

QR CODE LINKS



Extraction Guide

<https://scan.breville.com/bes985/extraction>



Clean Steam Wand

<https://scan.breville.com/bes985/cleansteamwand>



Tutorial

<https://scan.breville.com/bes985/tutorials>



Descale

<https://scan.breville.com/bes985/descale>



Texture Milk

<https://scan.breville.com/bes985/descale>

the Oracle™ Jet

설명서 - BES985



Breville®



목차

- 22 제한적 제품 보증
- 22 Breville®은 안전을 최우선으로 생각합니다
- 26 부품
- 27 액세서리
- 28 기능
- 29 조립
- 30 가이드 및 설정
- 31 관리 및 청소
- 34 문제 해결



제한적 제품 보증

이 제품에 대한 Breville의 보증은 보증 기간 이내에 잘못된 소재, 제조 공정 또는 기능으로 인해 결함이 있는 것으로 밝혀진 경우, 수리 또는 교체를 제공합니다.

해당 국가의 법률에 따른 모든 법적 보증 권리는 존중되며 당사의 보증은 이에 영향을 미치지 않습니다. 보증 기간에 대한 자세한 정보, 인쇄본 또는 전체 이용 약관을 확인하려면 QR



QR149

코드를 스캔하거나
www.breville.com을
 방문하시기 바랍니다.
 Breville 서비스 센터를 통한
 문의도 가능합니다
 (연락처는 뒷면 참조).

BREVILLE®은 안전을 최우선으로 생각합니다

Breville®은 안전을 매우 중요하게 생각합니다. 당사는 소중한 고객의 안전을 최우선으로 생각하여 제품을 설계하고 제조합니다. 아울러 제품을 사용할 때는 각별한 주의를 기울이고 다음의 예방 가이드를 준수해 주시기 바랍니다.

중요 안전 지침

사용하기 전에 모든 지침을 읽고 나중에 참조할 수 있도록 잘 보관해 두시기 바랍니다

- 사용하기 전에 포장재를 안전하게 제거하고 폐기하세요.
- 사용하기 전에 제품이 제대로 조립되었는지 확인하고 전원 코드를 완전히 풀고 작동시키세요.
- 처음 사용하기 전에 전기 공급이 제품 밑면에 있는 정격 라벨에 표시된 것과 동일한지 확인하세요. 우려사항이 있는 경우 해당 지역 전기회사에 문의하세요.
- 모든 전기 제품을 사용할 때 추가적인 안전을 위해 잔류 전류 안전 스위치를 설치하는 것이 좋습니다. 정격 작동 전류가 30mA 이하인 안전 스위치를 권장합니다. 전문적인

조언은 전기 기술자에게 문의하실 수 있습니다.

- 전원 코드, 플러그 및 기기에 손상이 있는지 정기적으로 검사합니다. 어떤 식으로든 손상된 것으로 발견되면 즉시 제품 사용을 중단하고 전체 제품을 가장 가까운 공인 Breville 서비스 센터로 보내 검사, 교체 또는 수리를 받으시기 바랍니다.
- 전원 코드를 카운터나 테이블 가장자리에 늘어뜨리지 마십시오. 전원 코드가 뜨거운 표면에 닿거나 뭉치지 않도록 주의하세요.
- 뜨거운 표면을 만지지 마십시오. 사용하지 않거나 청소, 이동, 조립 또는 보관하기 전에는 항상 에스프레소 머신의 전원 버튼을 OFF로 눌러 전원을 끄고 완전히 식힌 후에 진행해야 합니다. 스위치를 끄고 전원 콘센트에서 플러그를 뽑습니다.
- 어린이가 기기를 가지고 놀지 않도록 주의하십시오. 사용 중에는 기기를 방치하지 마십시오. 작동 중에는 제품을 이동시키지 마십시오.
- 본 기기는 신체적, 감각적 또는 정신적 능력이 약하거나 경험과 지식이 부족한 사람(어린이를 포함)이 안전을 책임지는 사람의 감독이나 지시 없이 사용하도록

설계되지 않았습니다. 청소 및 사용자 유지 관리 작업은 어린이가 수행해서는 안 됩니다. 제품과 코드를 어린이의 손이 닿지 않는 곳에 보관하십시오.

- 어린이의 질식 위험을 방지하려면 전원 플러그에 장착된 보호 덮개를 안전하게 폐기하십시오.
- 카운터 가장자리에서 멀리 떨어진 안정적이고 내열성이 있고 수평이며 건조한 표면에 기기를 놓고 핫플레이트, 오븐, 가스레인지와 같은 열원 위나 근처에서 작동하지 마십시오.
- 밀폐된 공간이나 찬장 내부에서 제품을 작동시키지 마십시오.
- 제품과 함께 제공된 것 이외의 부착물을 사용하지 마십시오. Breville에서 판매하거나 권장하지 않는 부착물을 사용하면 화재, 감전 또는 부상을 초래할 수 있습니다.
- 본 기기는 가정용입니다. 본래의 목적 이외의 다른 용도로 기기를 사용하지 마십시오. 움직이는 차량이나 보트에서는 사용하지 마십시오. 옥외에서 사용하지 마십시오. 잘못 사용하면 부상을 입을 수 있습니다.
- 제품을 부적절하게 사용하거나, 잘못 작동하거나, 비전문적으로 수리한 경우 보증 청구가 무효화됩니다. 어떠한 손해에 대해서도 보증을 받을 수 없습니다.

- 이 기기는 외부 타이머나 별도의 원격 제어 시스템을 통해 작동하도록 고안되지 않았습니다.
- 사용 중에는 금속 표면이 뜨거워질 수 있으므로 기계 작동 시 주의하십시오. 발열체는 사용 후에도 잔열이 있을 수 있습니다.
- 임의로 내부 분해를 진행하지 마세요. 공식 서비스 센터만 수리가 가능합니다.
- 호퍼 뚜껑이 제자리에 있지 않은 상태에서 그라인더를 작동하지 마십시오. 작동 중에는 호퍼에 손가락, 손, 머리카락, 옷, 도구가 닿지 않도록 주의하십시오.
- 추출을 시작하기 전에 포터필터가 그룹 헤드에 단단히 삽입되어 고정되었는지 확인합니다. 추출 과정 중에 포터필터를 절대로 제거하지 마십시오. 이 지침을 따르지 않을 경우 뜨거운 증기나 뜨거운 커피로 인해 화상을 입을 수 있습니다.
- 물탱크에 뜨거운 물이나 우유를 채우지 마십시오.
- 전면 상단 채우기는 우유용이 아닙니다. 전면 상단 채우기에 우유를 붓지 마십시오.
- 물탱크에 물이 없는 상태에서 제품을 사용하지 마십시오.
- 우유 거품을 만든 이후에는 자동 세척 기능으로 인하여 뜨거운 증기가 배출되오니 주의하십시오.

- 부드럽고 마른 천으로 외부 표면을 닦아내세요. 제품과 부속품을 깨끗하게 유지합니다.
- 청소 이외의 수리 서비스는 Breville 공식 서비스 센터에서 받아 보시는 것을 권장 드립니다.
- 알코올 기반 칵테일 음료는 해당 국가 및/또는 주 및/또는 지방에서 법적 음주 연령에 해당하는 책임 있는 성인만을 위한 것입니다. 레시피를 현명하고 책임감 있게 사용해 주시기 바랍니다.
- 제공된 필터 바스켓 없이 포터필터에서 커피를 내리는 등 머신을 부적절하게 사용하면 부상을 입거나 머신 주변 표면이 손상될 수 있습니다.

메모리 저장에 관한 고객 공지 사항

고객에게 더 나은 서비스를 제공하기 위해 내부 메모리 저장소가 귀하의 기기에 내장되어 있습니다. 이 메모리 저장소는 기기 사용 빈도, 기기 사용 방식 등 기기에 대한 특정 정보를 수집하는 작은 칩으로 구성되어 있습니다. 서비스를 위해 기기를 반납하는 경우 칩에서 수집한 정보를 통해 빠르고 효율적으로 기기를 서비스할 수 있습니다.

고객의 요구를 더욱 잘 반영하여 더욱 발전된 제품을 제공할 수 있도록 수집된 정보는 미래 가전 제품 개발을 위한 귀중한 자원으로

활용됩니다. 칩은 제품을 사용하는 개인이나 제품을 사용하는 가구에 관한 어떠한 정보도 수집하지 않습니다.

메모리 저장 칩에 관해 질문이 있는 경우 Privacy@breville.com으로 문의주시기 바랍니다.

단추형 배터리에 대한 경고



본 제품 내부의 단추형 배터리



어린이의 손이 닿지 않는 곳에 보관

제품 내부에 내장된 배터리는 사용자가 임의로 교체하거나 분리할 수 없습니다.

- 제품 내부에 내장된 배터리는 사용자가 임의로 교체하거나 분리할 수 없습니다.
- 배터리는 위험하므로 어린이의 손이 닿지 않는 곳에 보관해야 합니다(새 배터리이든 중고 배터리이든 관계 없음).
- 배터리를 삼킬 경우 화학적 화상과 식도 천공 가능성으로 인해 최소 2시간 내에 심각한 부상을 입거나 사망에 이를 수 있습니다.
- 자녀가 단추형 배터리를 삼켰다고 의심되는 경우 즉시

해당 제품은 가정용이며, 이 설명서를 보관하시기 바랍니다.

의사 진료를 받거나 응급의료 센터에 전화하여 신속하고 전문적인 조언을 받도록 합니다.

- 단추형 배터리와 관련된 위험과 자녀를 안전하게 보호하는 방법을 다른 사람들에게 알립니다.
- 사용한 단추형 배터리는 즉시 안전하게 폐기합니다. 방전된 배터리는 여전히 위험할 수 있습니다.

경고

부상 위험을 방지하려면 추출 과정에서 추출 챔버를 열지 마십시오.

 화재, 감전으로부터 보호하기 위해; 전원 코드, 전원 플러그 또는 제품을 물이나 기타 액체에 담그지 마십시오.

 표시된 기호는 제품을 일반 가정용 쓰레기와 함께 폐기할 수 없음을 나타냅니다. 지역 당국의


지정된 폐기물 수거 센터 또는 관련 서비스를 제공하는 업체를 통해 폐기하십시오. 자세한 정보는 지자체 담당 부서로 문의하시기 바랍니다.

메모

제품 손상을 방지하려면 알칼리성 세제를 사용하지 마십시오. 대신 깨끗하고 부드러운 천을 사용하세요.



부품

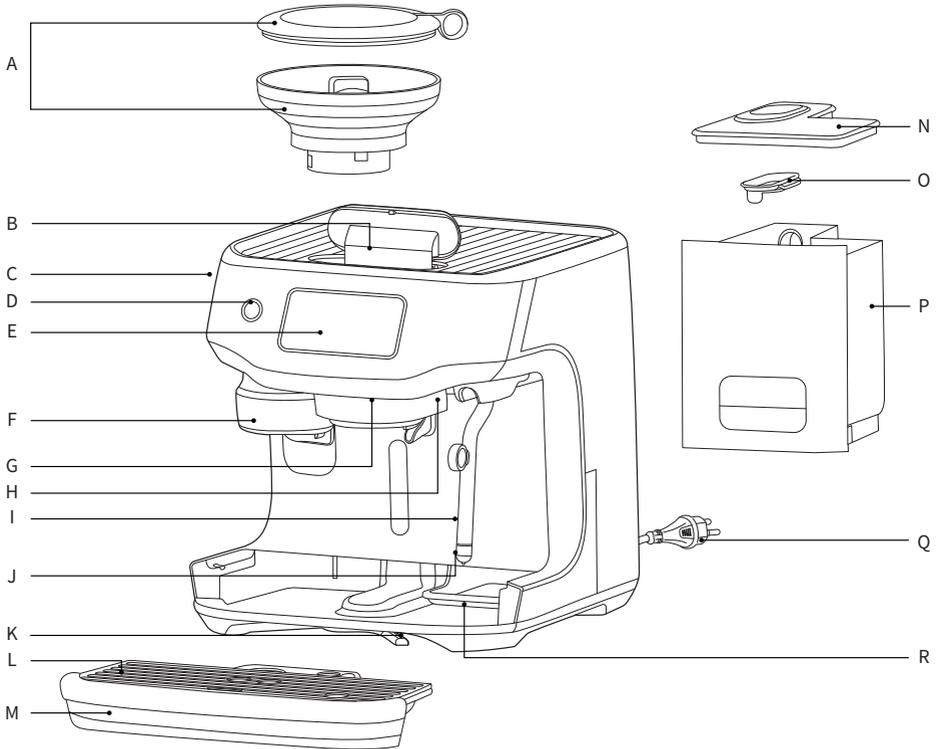


- A. 원두 호퍼 340g
- B. 전면 상단 물 인입구
- C. 분쇄도 조절 다이얼
- D. 전원 버튼
- E. 5인치 HD 터치스크린
- F. 분쇄 및 탬핑 추출구
- G. 가열식 58mm 그룹 헤드
- H. 온수 추출구
- I. Auto MilQ™ 스팀봉

- J. 우유 온도 센서
- K. 전면 레버 휠
- L. 물받이 그릴
- M. 물받이
- N. 물탱크 뚜껑
- O. 물탱크 주입용 뚜껑
- P. 물탱크
- Q. 보관 기능이 있는 전원 코드
- R. 도구 보관함



액세서리

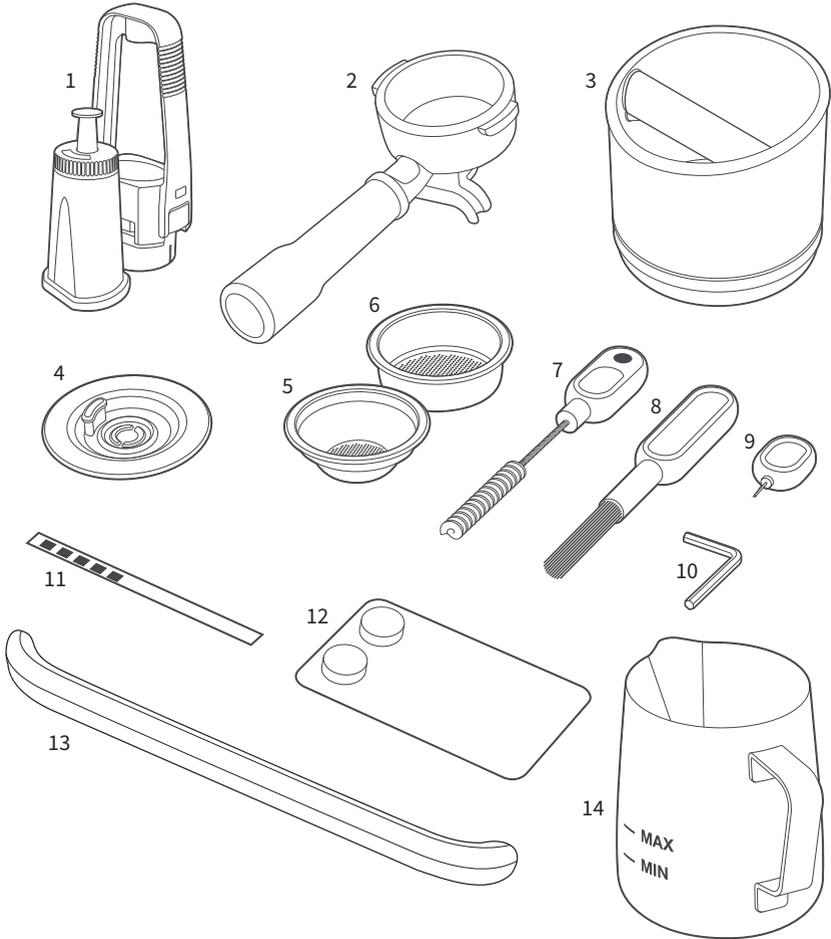

1. 정수 필터 및 필터 홀더
2. 58mm 스테인리스 스틸 포트필터
3. the Knock Box™ 10
4. 청소용 디스크
5. 싱글월 1컵 필터 바스켓
6. 싱글월 2컵 필터 바스켓 *
7. 그라인더 청소용 솔 및 탬프 제거용 자석
8. 청소용 솔
9. 스팀 봉 팁 청소 도구

10. 육각 렌치
11. 물 경도 스트립
12. 세척 용제
13. 물받이 가드(컬러 머신에만 포함)
14. 스테인레스 스틸 밀크저그

*포트필터에는 싱글월 2컵 필터 바스켓이 장착되어 제공됩니다.



기능

써모젯 가열 시스템

최첨단 가열 시스템은 가장 빠르고 효율적입니다. 단 몇 초 만에 추출 준비가 완료됩니다.

써모젯 가열식 그룹 헤드

전문가 수준의 사양을 충족하는 안정적이고 최적화된 추출을 보장합니다. 가열식 그룹 헤드는 취향에 맞게 섭씨 +/- 1도 단위로 맞춤 설정할 수 있습니다.

자동 분쇄, 도징, 탬핑

완벽한 통합형 경화 40mm 정밀 코니컬 버 그라인더는 22g의 커피를 58mm의 전문가용 포트필터로 분쇄, 도징, 탬핑합니다.

오토 밀크

일반 우유, 두유, 아몬드 우유, 귀리 우유에 맞게 설정된 부드러운 마이크로폼을 만들 수 있습니다. 온도 조절(45°C~75°C) 및 8가지 텍스처링 기능을 지원합니다.

바리스타 가이드نس

에스프레소 샷 추출이 과도 또는 과소 추출되는 것을 자동으로 감지하는 바리스타 가이드نس를 통해 분쇄 설정을 조정하여 더욱 이상적으로 추출할 수 있습니다.

5인치 HD 터치 스크린

이전보다 4배 더 풍부하고 20배 더 강력해진 다이내믹한 화면을 제공합니다. 스와이프하고 선택하고 고화질로 즐길 수 있습니다.

아이스 커피

콜드 브루

낮은 온도에서 추출하면 열에 의해 유지되는 산성 풍미가 줄어듭니다. 그 자체로 즐기거나 다양한 콜드브루 레시피를 완성할 수 있는 부드러운 풍미의 베이스가 만들어집니다.

콜드 에스프레소

낮은 온도에서 추출하면 진한 내음 없이 풍미가 풍부한 크레마 토핑 에스프레소가 완성됩니다. 콜드 에스프레소 기능은 클래식한 풍미를 유지하면서 부드럽고 가벼운 바디감을 선사합니다.

자동 대기열

자동 대기열은 우유 베이스 음료를 선택하는 동안 다음 기능을 순서대로 실행할 수 있는 기능입니다.

- 커피를 먼저 추출하고 우유 텍스처링을 대기열에 추가합니다.
- 우유를 먼저 텍스처링하고 커피 추출을 대기열에 추가합니다.

PID 온도 제어

전자식 온도 제어로 정확한 수온을 제공해서 에스프레소 풍미를 최적화합니다.

온수 전용 추출구

롱블랙과 차를 만들고, 잔을 예열할 때 사용하는 온수 전용 추출구가 있습니다.

더블 탭

분쇄, 추출 또는 스팀 아이콘을 두 번 탭하면 추출 준비를 위해 자동으로 세척이 시작됩니다.



조립

처음 사용하기 전에

에스프레소 머신 준비

에스프레소 머신에 부착된 모든 라벨 및 포장재를 제거하고 폐기하십시오.

포장을 폐기하기 전에 상자에서 모든 부품 및 액세서리를 꺼냈는지 확인하십시오.

머신 뒷면에 있는 물탱크를 분리하여 걸쇠를 풀고 걸쇠 손잡이에서 물탱크를 당겨 빼냅니다.

부품과 액세서리(물탱크, 포터필터, 필터 바스켓, 밀크저그)를 따뜻한 물과 순한 식기세척액으로 세척합니다. 잘 헹군 다음 완전히 말립니다.




참고


색상이 있는 제품의 경우, 드립 트레이 보호 커버가 포함됩니다. 버리지 마십시오.

정수 필터 설치


- 비닐 백에서 정수 필터와 정수 필터 홀더를 꺼냅니다.
- 정수 필터를 찬물에 5분 동안 담가 놓습니다.
- 필터 홀더를 찬물로 헹굽니다.

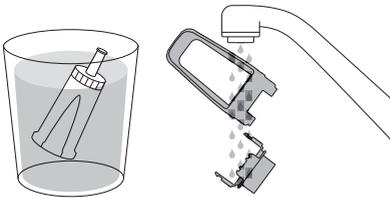

- 교체 알람을 설정합니다. 필터는 3개월마다 교체하는 것이 좋습니다.

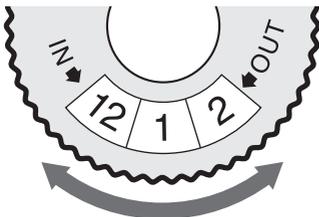

- 필터를 필터 홀더의 두 부분에 넣습니다.
- 조립된 필터 홀더를 물탱크에 설치하려면 필터 홀더의 베이스를 물탱크 내부의 어댑터에 맞춰 줍니다. 아래로 눌러 제자리에 고정합니다.

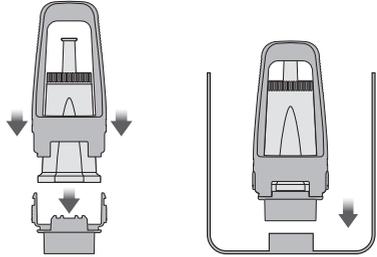

참고

3개월마다 정수 필터를 교체하면 에스프레소 머신의 디스케일링 빈도를 줄일 수 있습니다. 필터는 www.breville.com/kr 에서 구매하실 수 있습니다.



참고

물 경도 테스트 스트립 결과를 머신에 입력합니다. 테스트 결과 4~5bar가 나오면 다른 물로 교체할 것을 강력히 권장합니다. 여과된 물은 내장 필터 수명과 디스케일링 간격을 늘려 주고, 더 뛰어난 맛을 제공합니다. 선택한 대체 수원의 물 경도를 테스트하고 그 값을 머신에 입력합니다. 최종적으로 사용하는 정수에 일부 미네랄을 추가하지 않는 한, RO 정수와 같이 지나치게 여과된 물을 사용하지 마십시오. 증류수 또는 미네랄 함유가 낮거나 거의 없는 순수는 커피 맛에 영향을 미치므로 절대 사용하지 마십시오.



가이드 및 설정

가이드

시작 튜토리얼 - 머신으로 커피를 만드는 방법에 대한 시작 튜토리얼을 안내합니다.

QR 코드 링크 - 지원, 머신 등록, 제품 유지 보수 등의 영역으로 연결되는 QR 코드 링크를 제공합니다.

오라클 젯 이해 - 커피 머신의 주요 구성품에 대해 설명합니다.

설정

음료 설정

바리스타 가이드스 - 추출 중 분쇄 설정 권장 사항을 보려면 전원을 켭니다.

추출 제어 설정 - 시간 또는 용량 기반 추출 모드를 전환합니다.

온도 설정 - 추출 온도를 조절합니다.

유지 관리

스팀 봉 세척 - 스팀 성능 향상을 위해 막힌 부분을 제거하기 위한 스팀 봉 세척 방법을 안내합니다.

그룹 헤드 세척 - 그룹 헤드의 기름과 잔여물을 세척합니다. 에스프레소 청소용 세제 또는 파우더가 필요합니다.

디스케일링 - 디스케일링을 하면 과도한 미네랄과 석회질 축적을 방지할 수 있습니다. 디스케일링 파우더 또는 세제가 필요합니다.

정수 필터 교체 - 필터 교체를 통해 깨끗한 물을 사용할 수 있도록 합니다.

물 경도 테스트 - 머신에서 사용 중인 물 경도를 설정합니다. 사용하지 않은 물 경도 테스트 스트립이 필요합니다.

머신 설정

테마 - 밝게 또는 어둡게 모드를 전환합니다.

사운드 - 인터페이스의 볼륨을 조정합니다.

화면 밝기 - 화면의 밝기를 조정합니다.

조명 밝기 - LED 조명의 밝기를 조정합니다.

단위 - 야드·파운드법과 미터법 단위 중 선택할 수 있습니다.

국가 및 언어 - 화면에서 지역과 선호하는 언어를 선택합니다.

시간 및 날짜 - 머신에서 시간과 날짜를 설정합니다.

Wi-Fi - 최신 소프트웨어 업데이트를 받으려면 Wi-Fi에 연결합니다.

데모 모드 - 비디오를 반복하여 머신의 주요 기능을 보여줍니다.

머신 정보 - 머신의 일련번호와 펌웨어 버전을 표시합니다.

공장 초기화 설정 - 이 기능을 사용하여 프로그래밍 가능한 모든 값을 공장 설정으로 재설정하고 맞춤 설정한 음료를 모두 삭제합니다.



경고

이 기능을 수행하는 동안에는 머신에서 플러그를 뽑지 마십시오.



관리 및 청소

HD 터치스크린 화면

과도한 먼지와 때가 터치스크린의 틈새로 들어가 기능을 손상시킬 수 있습니다. 최적의 기능을 보장하려면 터치스크린을 건조하고 깨끗하게 유지하십시오. 화면 세척용 물티슈나 마른 부드러운 천을 사용합니다.

청소 사이클

청소 사이클이 필요한 경우 메시지가 표시됩니다. 이는 역류 세척 사이클이며 디스케일링과는 별개입니다. '설정'에서 '청소 사이클'을 선택해 청소 사이클을 시작하는 옵션도 있습니다. 청소 사이클에서는 샤워 스크린을 세척하고 그룹 헤드를 역류 세척하여 쌓인 커피와 기름을 제거합니다.

화면의 지침을 따라 주시기 바랍니다.

디스케일링

디스케일링 사이클이 필요한 경우 메시지가 표시됩니다.


제공된 정수 필터를 사용했다라도 물탱크에 석회질이 쌓이면 디스케일링하는 것이 좋습니다.

'설정'에서 '디스케일링 사이클'을 선택해 디스케일링 사이클을 시작하는 옵션도 있습니다.

화면의 지침을 따라 주시기 바랍니다.

스팀 봉 청소

- 우유를 텍스처링한 뒤에는 항상 스팀 봉을 청소해야 합니다. 젖은 천으로 스팀 봉을 닦아 줍니다.
- 스팀 봉 팁의 구멍 중 하나라도 막히면 거품 만들기 성능이 저하될 수 있습니다.
- '설정' > '스팀 봉 세척'으로 이동해서 화면의 안내를 따릅니다.

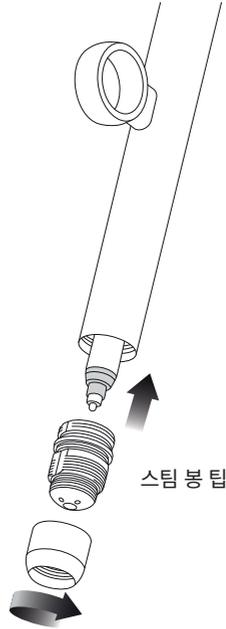

참고

- 청소 후 스팀 봉 팁이 단단히 조여졌는지 확인하십시오.
- 포터필터가 그룹 헤드에 삽입되어 있는 경우, 머신을 식히고 포터필터를 제거한 후 머신의 전원을 다시 켜세요.

필터 바스켓 및 포터필터 청소

- 필터 바스켓과 포터필터는 커피 추출 이후, 온수로 헹구어 남아있는 커피 오일을 모두 제거해야 합니다.
- 필터 바스켓의 구멍이 막히면 온수에 청소용 용제를 녹이고 필터 바스켓과 포터필터를 용액에 약 20분 동안 담가 둡니다. 완전히 헹궈 줍니다.

깨끗한 물로 역류 세척

- 커피 추출 이후 머신을 끄기 전에 깨끗한 물로 역류 세척하는 것이 좋습니다. 물받이 트레이를 비우고 물탱크를 물로 채우시기 바랍니다. 청소용 디스크를 필터 바스켓 안에 넣은 다음 포터필터를 그룹 헤드에 장착합니다. 추출 아이콘 버튼을 눌러 20초 동안 압력이 높아지도록 한 다음, 다시 추출 아이콘을 탭하여 압력을 중지하고 해제합니다.

샤워 스크린 청소

- 그룹 헤드 내부와 커피가 추출되는 샤워 스크린은 젖은 천으로 닦아서 분쇄된 커피 입자를 모두 제거해야 합니다.
- 제품을 주기적으로 세척합니다. 빈 필터 바스켓과 포터필터를 그룹 헤드에 놓습니다. 화면에서 추출 아이콘을 탭하고 물을 흘려 보내 커피 잔여물을 헹궈냅니다.

물받이 트레이 및 도구 보관함 청소

- 물받이 트레이가 가득 찬 경우를 비롯해, 물받이 트레이를 정기적으로 비우고 청소합니다.
- 물받이 트레이에서 물받이 그릴을 분리합니다. 커피 가루 분리기를 들어올려 커피 찌꺼기를 모두 버립니다. 모든 부품을 따뜻한 비눗물에 담가서 부드러운 천으로 씻어줍니다. 완전히 헹궈서 말립니다.
- 도구 보관함(물받이 트레이 뒤에 위치)은 분리해서 젖은 부드러운 천으로 청소합니다. 표면에 흠집을 낼 수 있는 연마성 세제, 패드, 천을 사용하지 마십시오.

제품 외부 청소


외부 하우징은 물에 적신 부드러운 천으로 청소할 수 있습니다. 부드럽고 마른 천으로 닦아 줍니다. 표면에 흠집을 낼 수 있는 연마성 세제, 패드, 천을 사용하지 마십시오.

참고

모든 부품은 온수와 순한 식기세척액을 사용해서 손으로 세척해야 합니다. 표면에 흠집을 낼 수 있는 연마성 세제, 패드, 천을 사용하지 마십시오. 어떤 부품이나 액세서리도 식기 세척기로 세척하지 마십시오.

코니컬 버 청소

정기적으로 버를 청소하면, 특히 에스프레소용 분쇄에 중요한 일관된 분쇄 결과를 얻는데 도움이 됩니다.

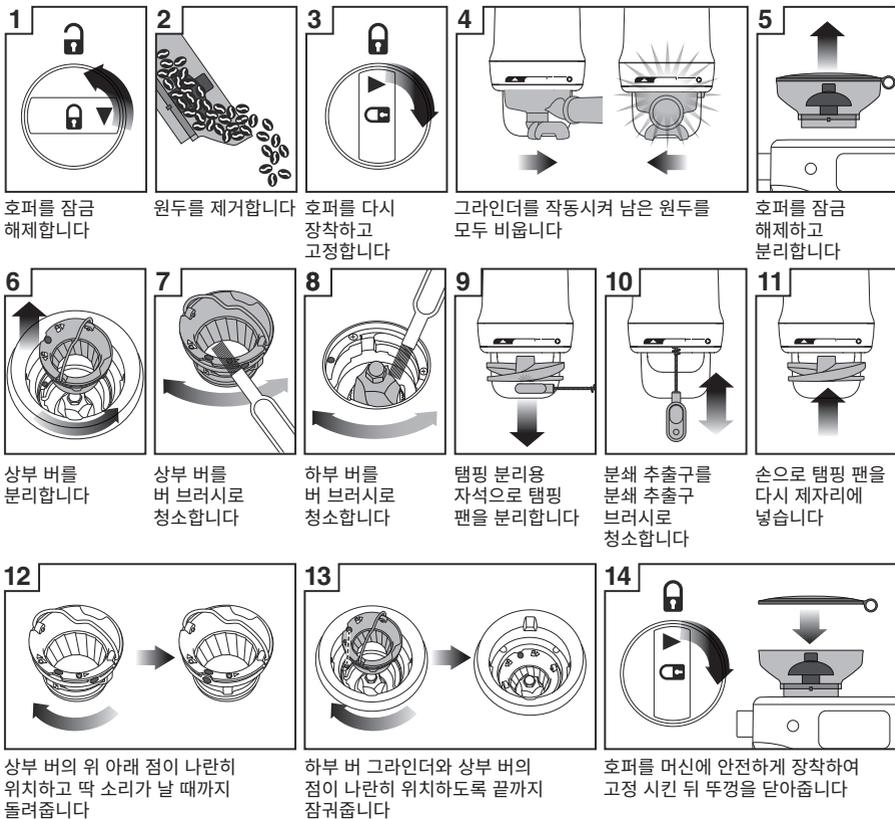

참고

이 머신은 로스팅 원두 전용으로 설계되었습니다. 로스팅되지 않은 생두와 덜 로스팅된 원두는 분쇄하지 마십시오. 이들은 밀도가 높고 버 그라인더를 통과할 수 있을 만큼 분쇄되지 않습니다. 이렇게 하면 버 그라인더가 손상되거나 파손될 수 있으며 안전상의 위험까지 초래할 수 있습니다.

팁

'유통기한'이나 '사용기한' 날짜가 아닌 '로스팅한 날짜'가 포장에 표시된 고품질 100% 아라비카 원두를 사용하는 것을 추천합니다. 커피 원두는 '로스팅한 날짜'로부터 5~20일 사이에

소비하는 것이 가장 좋습니다. 묵은 커피는 포터필터 추출구에서 너무 빨리 나오며 쓴맛이 나고 묽을 수 있습니다.

분쇄 칼라에서 Tamp 높이 조정

For tamper height adjustment reach out to customer service centre for instructions. See back cover for contact details.



문제 해결

오라클 젯 연결

오라클 젯은 Wi-Fi 지원 머신으로 최신 소프트웨어 버전 다운로드를 지원합니다. Wi-Fi에 연결되지 않은 경우에도 네트워크 연결 없이 에스프레소 머신과 동일한 방식으로 머신을 작동할 수 있습니다.



참고

당사는 기능 및 설정 단계 변경으로 이어질 수 있는 소프트웨어 개선을 위해 지속적으로 노력하고 있습니다. 소프트웨어를 업그레이드하여 최신 버전의 지침에 따라 설정 과정을 안내 받으시기 바랍니다.

문제	원인	해결방법
그라인더 모터는 작동하는데 분쇄 추출구에서 분쇄된 커피가 나오지 않습니다	<ul style="list-style-type: none"> 원두 호퍼에 커피 원두가 없습니다. 그라인더/원두 호퍼가 막혔습니다. 호퍼 안에서 원두가 걸렸을 수 있습니다. 	<ul style="list-style-type: none"> 원두 호퍼에 신선한 원두를 채웁니다. 원두 호퍼를 분리합니다. 원두 호퍼와 그라인딩 버가 막혔는지 확인합니다. 부품을 제자리에 위치시키고 다시 시도합니다.
그라인더 모터는 작동했는데 시끄러운 '딸깍거리는' 소음이 납니다	<ul style="list-style-type: none"> 그라인더가 이물질로 막혔거나 배출구가 막혔습니다. 그라인더에 습기가 찼습니다. 	<ul style="list-style-type: none"> 원두 호퍼를 제거하고 버를 검사한 다음 이물질을 제거합니다. 버 및 분쇄 배출구를 청소합니다. 버를 완전히 말리고 다시 조립합니다. 헤어 드라이어를 사용해서 버 영역을 건조시켜 건조 프로세스를 빠르게 할 수 있습니다.
그라인더 모터가 과열되었습니다		<ul style="list-style-type: none"> 전원을 끄고 전원 콘센트에서 플러그를 뽑은 후 5분간 머신을 작동하지 않습니다.
원두 호퍼를 제자리에 고정할 수 없습니다	<ul style="list-style-type: none"> 커피 원두가 원두 호퍼의 잠금 장치를 막고 있습니다. 	<ul style="list-style-type: none"> 원두 호퍼를 제거합니다. 버의 상단에서 커피 원두를 제거하시기 바랍니다. 원두 호퍼를 제자리에 다시 고정하시기 바랍니다.
포터필터가 과도하게 채워져 있습니다	<ul style="list-style-type: none"> 청소를 위해 탬핑 팬을 분리한 뒤 제자리에 다시 끼우지 않았습니다. 	<ul style="list-style-type: none"> 탬핑 팬이 올바르게 조립되어 있고 제자리에 있으며 드라이브 샤프트에 올바르게 장착되어 있는지 확인합니다.
그라인더 비상 정지		<ul style="list-style-type: none"> 포터필터를 왼쪽으로 돌려 자동 분쇄, 도징, 탬핑 기능을 중지합니다. 전원 콘센트에서 전원 코드를 뽑으시기 바랍니다.
그라인더가 계속 작동합니다	<ul style="list-style-type: none"> 호퍼에 원두가 없습니다. 탬핑 팬이 분리되었습니다. 	<ul style="list-style-type: none"> 호퍼에 원두를 채웁니다. 포터필터를 왼쪽으로 돌려 자동 분쇄, 도징, 탬핑 기능을 중지합니다. 탬핑 팬이 제자리에 있고 드라이브 샤프트에 올바르게 장착되어 있는지 확인합니다.

문제	원인	해결방법
<p>낮은 분쇄 설정에서도 커피가 매우 거칠게 분쇄되거나 버를 제자리에 놓을 수 없습니다</p>	<ul style="list-style-type: none"> 상부 버가 제대로 정렬 및 삽입되지 않은 경우가 많습니다. 	<ul style="list-style-type: none"> 분쇄 다이얼을 가장 굵은 분쇄도로 설정한 후 (예: 45) 시계 반대 방향으로 돌려서 상부 버 홀더를 쉽게 제거할 수 있습니다. 상부 및 하부 버의 커피 찌꺼기를 청소합니다. 상부 버의 점이 정렬되었는지 확인한 다음 시계 방향으로 돌려 하부 버의 점과 다시 정렬합니다. 분쇄 다이얼을 원래 설정으로 되돌립니다.
<p>포터필터 가장자리 주변에서 에스프레소가 흘러나옵니다</p>	<ul style="list-style-type: none"> 포터필터가 그룹 헤드에 올바르게 삽입되지 않았습니다. 	<ul style="list-style-type: none"> 포터필터가 단단히 고정될 때까지 중심을 지나 오른쪽으로 돌렸는지 확인합니다. 중심을 지나쳐 돌려도 실리콘 씬은 손상되지 않습니다.
<p>그리고/또는</p>	<ul style="list-style-type: none"> 필터 바스켓 테두리 주변에 커피 찌꺼기가 있습니다. 	<ul style="list-style-type: none"> 분쇄 후 필터 바스켓 테두리에 남은 커피를 제거해서 그룹 헤드가 제대로 밀봉되는 것을 확인하시기 바랍니다.
<p>추출하는 동안 포터필터가 그룹 헤드에서 나옵니다</p>	<ul style="list-style-type: none"> 필터 바스켓 테두리가 젖었거나 포터필터 아랫면이 젖어있습니다. 표면이 젖어 있으면 추출 중 압력을 받는 동안 포터필터를 제자리에 유지하는 데 필요한 마찰이 줄어듭니다. 	<ul style="list-style-type: none"> 커피를 채우고 탬핑해 그룹 헤드에 삽입하기 전에 필터 바스켓과 포터필터가 완전히 말라 있는지 항상 확인하시기 바랍니다.
<p>펌프가 계속 작동합니다/스티이 너무 축축합니다/온수 추출구에서 물이 샐니다</p>	<ul style="list-style-type: none"> 고도로 여과된 물, 탈염수 또는 증류수를 사용하고 있으며, 그 때문에 머신이 기능을 발휘하도록 설계된 방식에 영향을 미치고 있습니다. 	<ul style="list-style-type: none"> 차갑고 여과된 물을 사용하는 것이 좋습니다. 고도로 여과된 물, 탈염수나 증류수와 같이 미네랄 함량이 없거나 낮은 정수를 사용하는 것은 좋지 않습니다. 문제가 지속되면 브레빌 고객 지원 센터에 문의하시기 바랍니다.
<p>그룹 헤드에서 물이 흐르지 않습니다</p>	<ul style="list-style-type: none"> 물탱크가 비어 있습니다. 	<ul style="list-style-type: none"> 물탱크에 물을 채웁니다. 다음과 같이 시스템을 예열하여 준비시킵니다. <ol style="list-style-type: none"> '추출' 버튼을 눌러 그룹 헤드에 물이 30초 동안 흐르게 합니다. '온수' 버튼을 눌러 온수 추출구를 통해 물이 30초 동안 흐르게 합니다.
	<ul style="list-style-type: none"> 물탱크가 완전히 삽입되지 않고 고정되지 않았습니다. 	<ul style="list-style-type: none"> 물탱크를 완전히 밀어 넣고 잠금 걸쇠를 닫아 줍니다.
	<ul style="list-style-type: none"> 연속 추출로 인한 물 펌프가 과열되었습니다. 	<ul style="list-style-type: none"> 머신을 끄고 전원 콘센트에서 플러그를 뽑은 후 머신을 식힙니다.
	<ul style="list-style-type: none"> 내부 샤워 스크린이 정상적으로 설치되지 않았습니다. 	<ul style="list-style-type: none"> 샤워 스크린을 분리하고, 추출 그룹 헤더가 정확하게 결합되어 있는지 확인합니다.

문제	원인	해결방법
물받이에 물이 들어있습니다	<ul style="list-style-type: none"> • 자동 세척 기능이 있습니다. 	<ul style="list-style-type: none"> • 머신을 처음 작동할 때, 그리고 우유 스팀을 마쳤을 때 자동으로 세척을 진행하기 때문에 물받이로 물이 흐릅니다. 에스프레소 머신의 배관이 다음 추출을 준비하고 대기하는 정상적인 과정입니다
머신이 '켜짐' 상태이지만 작동하지 않습니다		<ul style="list-style-type: none"> • 전원을 끄고 플러그를 뽑았다가 다시 콘센트에 연결한 후 전원을 켭니다. • 문제가 지속되면 브레빌 고객 지원 센터에 문의하시기 바랍니다.
포터필터 추출구에서 에스프레소가 나오지만, 원활하게 추출되지는 않습니다	<ul style="list-style-type: none"> • 커피가 너무 굵게 분쇄되었습니다. 	<ul style="list-style-type: none"> • 분쇄 설정을 더 높은 숫자로 조정해 분쇄 설정을 약간 더 굵게 조정합니다. • 석회질이 쌓여 막힐 수 있습니다. 디스케일링 절차를 수행합니다.
에스프레소가 너무 빨리 흘러나옵니다	<ul style="list-style-type: none"> • 커피가 너무 굵게 분쇄되었습니다. • 커피 원두가 신선하지 않습니다. 	<ul style="list-style-type: none"> • 분쇄 설정을 더 낮은 숫자로 조정해 분쇄 설정을 더 굵게 조정해 줍니다. • '로스팅한 날짜'가 표시된 것 로스팅한 커피 원두를 사용하고 그 날짜로부터 5~20일 사이에 소비합니다.
크레마가 없습니다	<ul style="list-style-type: none"> • 커피 원두가 신선하지 않습니다. 	<ul style="list-style-type: none"> • '로스팅한 날짜'가 표시된 것 로스팅한 커피 원두를 사용하고 그 날짜로부터 5~20일 사이에 소비합니다.
우유 질감이 충분하지 않습니다	<ul style="list-style-type: none"> • 스팀 봉이 막혔습니다. 	<ul style="list-style-type: none"> • '스팀 봉 청소'를 참조합니다. • 석회질이 쌓여 막힐 수 있습니다. 디스케일링 절차를 수행합니다. <ul style="list-style-type: none"> • 우유 브랜드와 종류, 우유 대체품 사용 여부에 따라 우유의 질감이 달라집니다. 선택하는 우유에 따라 우유 거품 수준을 조정해야 할 수도 있습니다.
디스케일링과 스팀 봉 청소가 끝나도 스팀과 뜨거운 물이 나오지 않고, 에러 메시지도 뜨지 않습니다	<ul style="list-style-type: none"> • 밸브에 문제가 있습니다. 	<ul style="list-style-type: none"> • 에스프레소 머신의 열기가 가신 다음에, 머신의 플러그를 콘센트에서 제거하고 포터필터를 분리합니다. 플러그를 콘센트에 다시 결합하고 뜨거운 물이나 스팀이 나오는지 점검합니다. 만약 문제가 지속된다면 공식 서비스센터에 연락합니다.
머신을 Wi-Fi에 연결할 수 없습니다	<ul style="list-style-type: none"> • SSID에 잘못된 비밀번호를 입력했습니다. • 공유기 근접성을 확인하세요. 신호 강도가 약할 수 있습니다. 	<ul style="list-style-type: none"> • 머신의 플러그를 뽑았다가 콘센트에 연결합니다. • Wi-Fi 자격 증명을 다시 입력합니다. • 공유기를 머신에 더 가깝게 설치하여 신호 강도를 높입니다.

문제	원인	해결방법
클라우드에 연결 및 초기화에 시간이 오래 걸립니다	<ul style="list-style-type: none"> 공유기 근접성 문제입니다. 	<ul style="list-style-type: none"> 머신의 플러그를 뽑았다가 콘센트에 연결합니다. 공유기를 재부팅합니다. Wi-Fi 자격 증명을 다시 입력합니다. 문제가 지속되면 브레빌 고객 지원 센터에 문의하시기 바랍니다.
소프트웨어 업데이트를 다운로드하는 데 시간이 오래 걸립니다	<ul style="list-style-type: none"> Wi-Fi 신호 강도가 약합니다. 	<ul style="list-style-type: none"> 커피 머신을 다시 시작합니다. 공유기를 커피머신 가까이 이동합니다.
소프트웨어가 다운로드되었지만 설치되지 않습니다	<ul style="list-style-type: none"> 머신을 재부팅해야 합니다 	<ul style="list-style-type: none"> 머신의 플러그를 뽑았다가 콘센트에 연결합니다. 공장 초기화를 수행합니다. 문제가 지속되면 브레빌 고객 지원 센터에 문의하시기 바랍니다.
Wi-Fi를 사용할 수 없습니다	<ul style="list-style-type: none"> 신호 없음 및 공유기 사용이 어렵습니다. 	<ul style="list-style-type: none"> 커피머신을 휴대폰 핫스팟에 연결하세요. 커피 머신을 Wi-Fi 라우터에 연결합니다(가능한 경우).

참고: 최적의 성능을 위해 기기를 Wi-Fi에 연결하여 정기적인 소프트웨어 업데이트를 받는 것을 권장합니다.

- Wi-Fi 없이도 기기를 사용할 수 있습니다. 소프트웨어 버전이 Wi-Fi에 계속 연결되는 경우 연결 화면에서 다음 단계를 따릅니다:
 - » "네트워크 선택"을 입력합니다.
 - » 인터넷이 없는 경우 기타를 선택합니다.
 - » 화살표 버튼을 클릭하면 네트워크 선택을 건너뛸 수 있습니다.
 - » 비밀번호 입력을 건너뛰려면 화살표 버튼을 클릭합니다.
 - » "연결" 오류가 발생할 수 있습니다.

다시 시도를 선택하고 위의 단계를 반복합니다. 두 번째 시도에도 실패하면 '나중에 업데이트'를 클릭하여 Wi-Fi 설정을 건너뛹니다.

QR 코드 링크



추출 가이드

<https://scan.breville.com/bes985/extraction>



스팀 봉 청소

<https://scan.breville.com/bes985/cleansteamwand>



튜토리얼

<https://scan.breville.com/bes985/tutorials>



디스케일링

<https://scan.breville.com/bes985/descale>



우유 텍스처링

<https://scan.breville.com/bes985/descale>



참고

수입판매원: 브레빌코리아 유한회사
서울특별시 강남구 논현로 159길 41 (신사동)
고객 서비스 센터: 080-822-1691

Breville®
Master Every Moment™

Copyright Breville Pty. Ltd. 2025.

지속적인 제품 개선으로 인해, 본 책자에 담긴 제품 삽화 및 사진은 실제 제품과 약간 다를 수 있습니다.

BES985 KOR - A25