

# *the Tea Maker™*

Instruction Book – BTM800



**Breville®**



## Contents

2	Breville® Recommends Safety First
7	Components
9	Tea Insight
11	Functions
21	Care & Cleaning
23	Troubleshooting
24	Warranty

## BREVILLE® RECOMMENDS SAFETY FIRST

At Breville® we are very safety conscious. We design and manufacture consumer products with the safety of you, our valued customer, foremost in mind. In addition we ask that you exercise a degree of care when using any electrical appliance and adhere to the following precautions.

## IMPORTANT SAFEGUARDS

### READ ALL INSTRUCTIONS BEFORE USE AND SAVE FOR FUTURE REFERENCE

- Carefully read all instructions before operation and save for future reference.
- Remove and safely discard any packaging material and promotional labels before using the appliance for the first time.
- To eliminate a choking hazard for young children, remove and safely discard the protective cover fitted to the power plug of this appliance.
- This appliance has been designed specifically for the purpose of heating and boiling quality drinking water and tea only. Under no circumstances should this product be used to heat or boil any other liquids or foodstuffs.
- Do not place the appliance near the edge of a bench or table during operation. Ensure that the surface is level, clean and free of water.
- Do not place the appliance on or near a hot gas burner,


- electric element or where it could touch a heated oven.
- Keep the appliance clear of walls, curtains and other heat or steam sensitive materials. Keep a minimum 20cm (8") of space on both sides of the appliance.
  - Do not operate the appliance on a sink drain board.
  - Always ensure the appliance is properly assembled before connecting to a power outlet and operating. Follow the instructions provided in this book.
  - The glass jug must be used only with the power base supplied. Do not use on a range top.
  - The appliance is not intended to be operated by means of an external timer or separate remote control system.
  - Do not touch hot surfaces. Use the handle for lifting and carrying the glass jug.
  - Attach the jug lid securely to the glass jug before operation.
  - Do not place anything on top of the jug lid.
  - Do not open the jug lid during operation as scalding may occur.
  - Extreme caution must be used when moving the glass jug containing hot liquid.

- Use caution when pouring water from the glass jug as boiling water and steam will scald. Do not pour the water too quickly.
- To avoid scalding, never fill the glass jug past the 'WATER MAX' (when heating water) or 'TEA MAX' (when brewing tea) line markings.
- Do not operate the appliance without water. Always fill the glass jug to at least the 'MIN' marking. Should it be operated without water, the boil-dry protection will shut the power off automatically. Allow the appliance to cool before refilling.



## **WARNING**

To protect against electric shock, do not immerse the glass jug base, power base, power cord or power plug in water or allow moisture to come in contact with these parts.

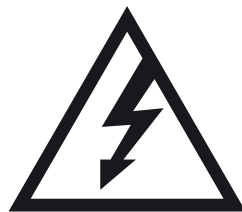


Please refer to cleaning instructions on page 21 of the instruction booklet.

- Do not remove the glass jug from the power base during heating or when the basket is in operation. Ensure the appliance has completed the water heating or tea brewing cycle before removing the glass jug from the power base.
- The use of accessory attachments not recommended by Breville® may result in fire, electric shock or injury to persons.
- To turn OFF the appliance, press the TEA|Cancel button (when brewing tea) or the HOT WATER|Cancel button (when heating water) on the power base. The appliance is OFF when the button surround illumination goes out.
- To disconnect from the wall outlet, first turn OFF the appliance then remove the power plug from the wall outlet.
- When the appliance is not in use or when left unattended, disconnect the power cord from the wall outlet.
- Before attempting to move the appliance or before assembling or disassembling parts, cleaning or storing, turn OFF the appliance, allow to cool and disconnect from the wall outlet.
- Allow the appliance to cool down in between brewing cycles.
- Strictly follow the Care and Cleaning instructions on page 21.
- Do not use harsh abrasives or caustic cleaners when cleaning this appliance.
- This appliance is not intended for use by young children or infirm persons unless they have been adequately supervised by a responsible person to ensure they can use the appliance safely.
- Young children should be supervised to ensure that they do not play with the appliance.



## WARNING

Never immerse the glass jug, power base, power cord or power plug in water or allow moisture to come in contact with these parts.

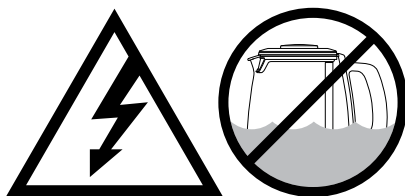



## **WARNING**

Do not wash jug exterior under running water.



## **IMPORTANT SAFEGUARDS FOR ALL ELECTRICAL APPLIANCES**

- This appliance is for household use only.
- Unwind the power cord fully before use.
- Do not let the cord hang over the edge of a table or counter, or touch hot surfaces.
- Do not use the appliance for anything other than its intended purpose as described in this booklet. Do not use outdoors. Do not use in moving vehicles or boats.
- Close supervision is necessary when any appliance is used by or near children.
- Regularly inspect the supply cord, plug and actual appliance for any damage. Do not operate if damaged in any way or after the appliance malfunctions.

Immediately cease use of the appliance and call Breville® Customer Service at 080-822-1691 for examination, repair or adjustment.

- For any maintenance other than cleaning, call Breville® Customer Service at 080-822-1691.
- Consult a qualified electrician if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.



## **WARNING**

Do not operate the appliance on an inclined surface. Do not move the appliance while it is switched on.


## BREVILLE ASSIST™ PLUG

- Your Breville® appliance comes with a unique Assist™ Plug, conveniently designed with a finger hole in the power plug for easy and safe removal from the wall outlet. For safety reasons it is recommended you plug your Breville® appliance directly into its own electrical outlet on a dedicated circuit separate from other appliances. If the electrical circuit is overloaded with other appliances, your appliance may not function properly. Using in conjunction with a power strip or extension cord is not recommended.


**FOR HOUSEHOLD USE ONLY  
SAVE THESE INSTRUCTIONS**



## Components

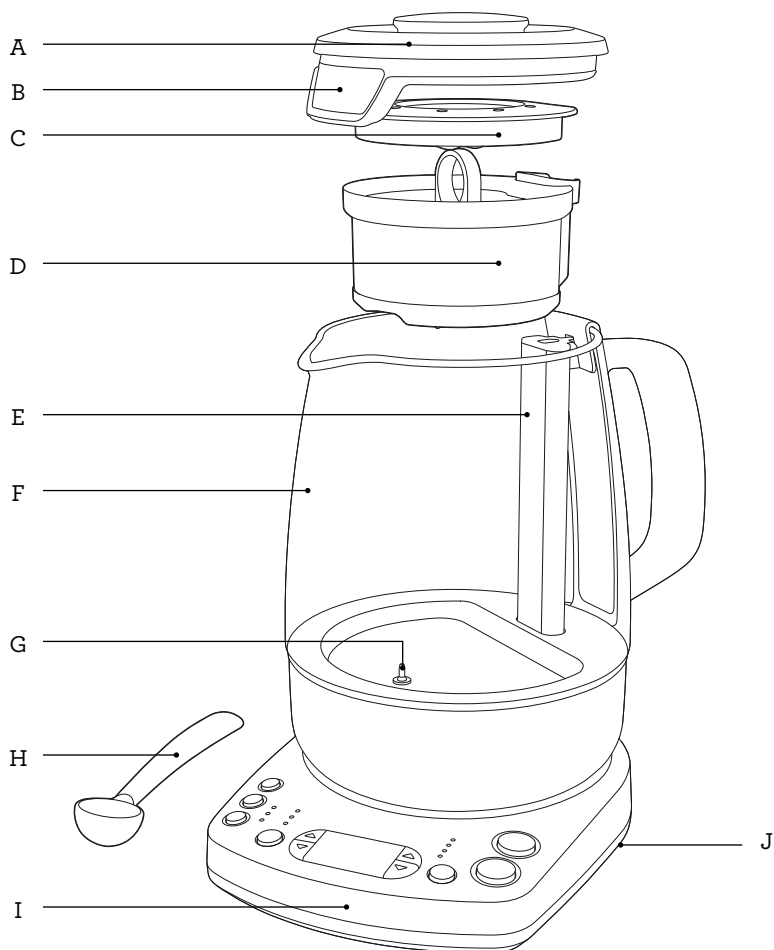

- |                                       |                                |
|---------------------------------------|--------------------------------|
| A. Jug Lid                            | G. Immersed Temperature Sensor |
| B. Stainless Steel Scale Filter       | H. Tea Scoop                   |
| C. Tea Basket Lid                     | I. Power Base                  |
| D. Stainless Steel Tea Basket         | J. Cord Storage                |
| E. Jug Post                           | concealed on the underside     |
| Magnetically attaches the tea basket. | of the power base.             |
| F. Glass Jug                          |                                |
| 1500ml water max, 1200ml tea max.     |                                |

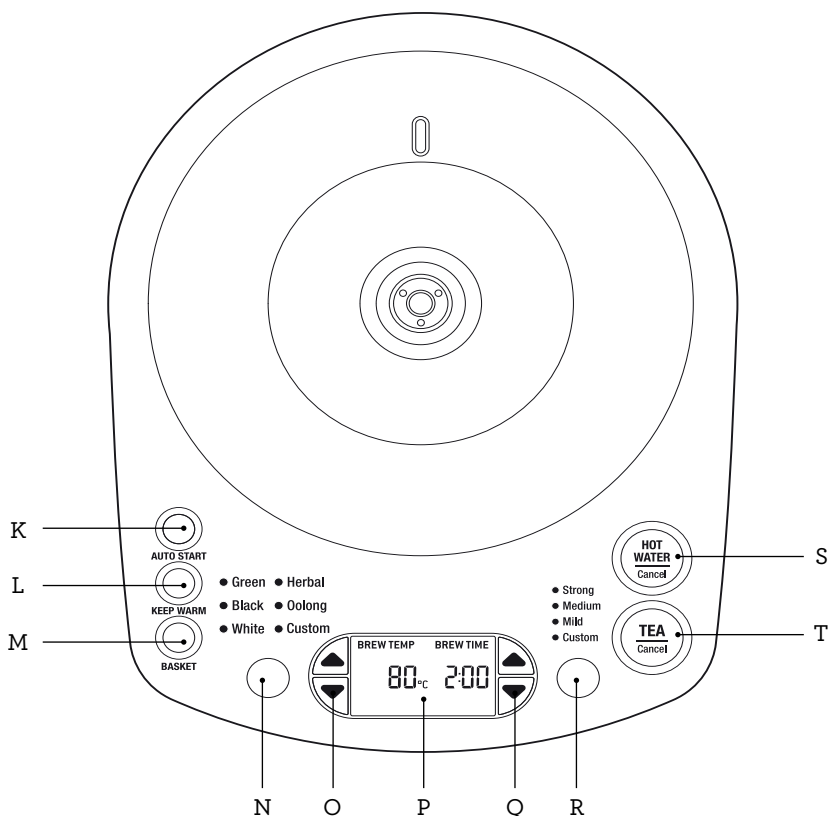

#### K. AUTO START Button

Set the tea maker to automatically begin brewing at a pre-selected time.

#### L. KEEP WARM Button

Keeps the brewed tea or heated water warm for up to 60 minutes.

#### M. BASKET Button

Auto lifts & lowers the tea basket. The movement allows water to circulate freely around the tea leaves for maximum infusion.

#### N. TEA TYPE Button

Preset brew temperatures recommended for green, black, white, herbal & oolong tea.

#### O. Variable Temperature Control

Overrides the preset brew temperatures.

#### P. Backlit LCD

#### Q. Variable Time Control

Overrides the preset brew times.

#### R. TEA STRENGTH Button

Preset brew times recommended for strong, medium and mild brews.

#### S. HOT WATER | Cancel Button

For use as a variable temperature kettle.

#### T. TEA | Cancel Button

Activates the tea brewing cycle.





# Tea Insights

## TEA TYPES

There are four main types of tea from the tea plant *camellia sinensis*. The picking and processing methods determine the type of tea finally produced.

### Black Tea

Black tea is the most common type of tea worldwide. It is made by fermenting the harvested leaves for a couple of hours before heating or drying. This oxidation darkens the leaves and increases the amount of caffeine. Of all the teas, black tea has the strongest colour and flavour.

### White Tea

White tea is the rarest and the most exclusive tea. White tea consists of the whitish buds of the tea plant which are steamed then left to dry naturally. This tea is low in caffeine and has a slightly sweet flavour.

### Green Tea

Green tea makes up approximately ten percent of the world's tea. The leaves are picked, rolled and dried before they can go brown. Green tea has a distinctive aroma and has a slight astringent taste.

### Oolong Tea

Oolong Tea is semi fermented, which means leaves are processed immediately after picking. They only have a short period of oxidation which turns the leaves from green to red/brown. Its leaves have a floral, fruity quality and hence have a delicate fruity taste. It is recommended not to drink Oolong tea with milk, sugar or lemon.

## Herbal Infusions or Tisanes

Herbal infused teas are not produced from the tea plant, but from flowers, leaves, roots or seeds. Common herbal beverages are chamomile, peppermint, fennel, rose hip, and lemon verbena. Herbal infusions that do not contain tea will generally not become bitter with extended brews. These can often be brewed with boiling water 3 times without jeopardising the taste.

## Blends

Tea producers make blends by combining different types of teas, often in order to achieve flavour consistency from one season to the next. Common black tea blends include English Breakfast, Earl Grey, Irish Breakfast, and Russian Caravan.



### TIP

Brewed tea leaves make an ideal garden fertilizer and help condition the soil.

## TEA STORAGE

- Teas stored inside a vacuum sealed bag can be stored for up to two years, depending on the quality and grade of tea. Once opened, tea should be stored in an airtight container and kept in a dry and dark place.
- Once opened, black teas will last longer than green and oolong teas but all tea needs to be stored in ideal conditions.
- You can tell when tea is past its best if it has lost its aroma and will create either a bitter or dull tasting cup.

**TIPS FOR OPTIMAL TEA BREWING**

- Water quality affects taste. For best results, use filtered water.
- Finer tea particles and leaves will infuse more quickly than whole leaves. As a result, finer tea particles often release too much tannin too quickly, creating a harsher taste. Adjust the brewing time until desired strength is achieved.
- Using the tea scoop provided, use roughly one scoop of tea per cup/250ml of water.

**Water to Tea Scoop Ratio**

GLASS JUG MARKING	CUPS / ML	TEA SCOOPS
500mL	Approx. 2 Cups/500ml	2 Scoops
750mL	Approx. 3 Cups/750ml	3 Scoops
1000mL	Approx. 4 Cups/1000ml	4 Scoops
1200mL	Approx. 5 Cups/1200ml	5 Scoops



## Functions

### PREPARING THE TEA MAKER™ FOR USE

In order to remove any dust or protective residues from the manufacturing process, it is recommended to run a boiling cycle then discard the water.

1. Remove and safely discard any packing material, promotional labels and tape from the Tea Maker™.
2. Remove the Jug Lid then remove the tea basket from the magnetic post within the glass jug. Wash the jug lid, tea basket, basket lid and tea scoop in warm soapy water with a soft sponge, rinse and dry thoroughly.



### WARNING

Never immerse the base of the glass jug, the power base, power cord or power plug in water or allow moisture to come in contact with these parts.

3. Place the power base on a flat, dry surface.
4. Without the tea basket in place, fill the glass jug to the water maximum mark (1500mL WATER MAX) and place on the power base. Securely fit the jug lid onto the glass jug.



### WARNING


Never fill the glass jug with chilled water. Allow the tea maker to cool before refilling.



### WARNING

Filling past the 'MAX' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'MIN' line will result in the Tea Maker™ switching off before the water has boiled or reached the selected temperature.

5. Unwind the power cord completely and insert the power plug into a grounded wall outlet.
6. The LCD screen will illuminate with the default brew temperature and brew time display.

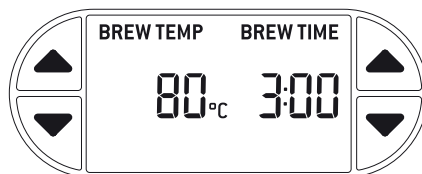

7. Press the left ▲ ARROW UP button until the LCD screen displays 100°C. The 'Custom' LED will automatically illuminate.



AUTO START




KEEP WARM



BASKET

- Green • Herbal
- Black • Oolong
- White • Custom

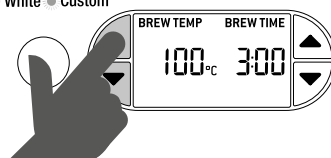

8. Press the HOT WATER|Cancel button to start the cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°C.
9. Once the water reaches 100°C, the tea alert will sound three times and the HOT WATER|Cancel button surround will cease to illuminate.
10. Discard the water. The Tea Maker™ is now ready to use.

## USE AS A TEA MAKER™ FOR BREWING TEA


1. Remove the glass jug from the power base and remove jug lid. When brewing tea, fill with desired amount of water. Ensure you do not fill past the tea maximum mark (1200mL TEA MAX).



### WARNING


Filling past the 'MAX' line may result in serious burns or injuries as a result of overflowing hot or boiling water. Filling below the 'MIN' line will result in the tea maker switching off before the water has boiled or reached the selected temperature.

2. Place the basket on a flat, dry surface. Remove basket lid by lifting from the sides.

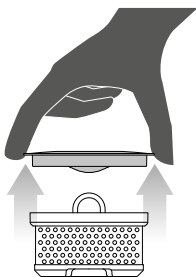

3. Use the provided tea scoop to fill the basket with tea leaves. As a general guide, use 1 scoop of tea leaves per cup / 250ml of water, however this will depend on the instructions on tea packaging and your personal preference (See page 10, Water to Tea Scoop Ratio).
4. Replace the basket lid on top of the basket. Ensure lid is securely snapped in place by pressing firmly on the centre of the lid.

5. Slide the assembled basket on to the magnetic post located within the glass jug. The assembled basket will attach itself to the top of the magnetic post. Replace jug lid.

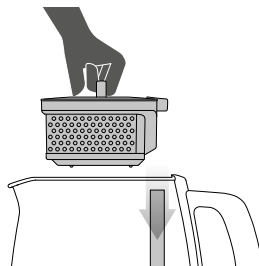

## SELECTING THE TEA TYPE

The tea type determines brew temperature.

The Tea Maker has 5 preset tea types recommended for optimal brewing of Green, Black, White, Herbal or Oolong tea. It also features a customisable tea type temperature setting for other tea varieties or to suit your personal taste (see Page 16, Customising Brew Temperature).

To select a preset tea type:

- a) Press the TEA TYPE button and toggle through until the desired tea - 'Green', 'Black', 'White', 'Herbal' or 'Oolong' illuminates.
- b) The LCD screen will display the preset brew temperature recommended for optimal brewing of the selected tea type. This is displayed on the left hand side of the LCD screen.

TEA TYPE	GREEN TEA	WHITE TEA	OOLONG TEA	HERBAL TEA	BLACK TEA
PRESET BREW TEMP	80°C	85°C	90°C	100°C	100°C
PRESET BREW TIME	3:00	3:00	3:00	4:00	2:00

## SELECTING THE TEA STRENGTH

The desired tea strength determines the brew time. The correct brew time depends on the tea type and your personal tea strength preference.

The Tea Maker has 3 preset tea strengths recommended to achieve Strong, Medium or Mild tea brews. It also features a customisable brew time setting to suit your personal taste (see Page 16, Customising Brew Time).

- To select a preset tea strength:
  - Press the TEA STRENGTH button and toggle through until the desired tea strength - 'Strong', 'Medium' or 'Mild' illuminates.
  - The LCD screen will display the preset brew time recommended to achieve the selected brew strength for the tea type selected. This is displayed as the right figure on the LCD screen.
- Press the TEA|Cancel button to start the tea brewing cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°C. Once the water temperature reaches 50°C, 'ON' will be replaced by the selected brew time.



## NOTE

The 'BREW TIME' can be adjusted during the heating process but 'BREW TEMP' cannot be changed once the heating cycle commences.

To change the brew time press the right ▲ ARROW UP button to increase the time, or the right ▼ ARROW DOWN button to decrease the time. The brewing time can be adjusted in 30 second increments up to a maximum of 10 minutes.

To change the brew temperature, press the TEA|Cancel button to cancel the heating cycle. Re-select the brew temperature (see page 16).

- Once the selected brew temperature is reached the assembled basket will automatically lower into the heated water.
- Once the basket reaches the bottom of the glass jug, the LCD screen will indicate the brewing progress, automatically counting down in one second increments. This is displayed on the right hand side of the LCD screen.

- At the end of the tea brewing cycle, the basket will automatically rise to the top of the glass jug to prevent over-brewing. The tea alert will sound three times.



## WARNING

The tea basket is hot to touch after tea is brewed. Ensure the tea basket handle has cooled before handling.

## SELECTING THE 'KEEP WARM' FEATURE

This feature allows the brewed tea or heated water to remain warm for up to 60 minutes. The 'Keep Warm' temperature ranges between 50-80°C depending on the original brew temperature selected. The lower the brew temperature, the lower the 'Keep Warm' temperature.

ORIGINAL BREW TEMP.	APPROXIMATE KEEP WARM TEMP.
50°C - 65°C	50°C
70°C - 80°C	70°C
85°C	75°C
90°C - 100°C	80°C



## NOTE

During the 'Keep Warm' cycle, brewed tea will continue to develop flavour. Depending on how long you intend to keep the brewed tea warm, you may consider reducing the initial tea strength / brew time (see page 13).

To activate the 'Keep Warm' feature:

- Press the KEEP WARM button before, during or after completion of the tea brewing or water heating cycle. The button surround will illuminate, indicating the 'Keep Warm' feature has been selected.



## NOTE

'Keep Warm' will only maintain temperature during the 60 minute 'Time Since Brew' feature at the end of the 'Tea' or 'Hot Water' function.

- Once the tea brewing or water heating cycle is complete, the LCD screen will automatically display the 'Time Since Brew' count-up. The KEEP WARM button surround will remain illuminated, indicating the 'Keep Warm' cycle is active for up to 60 minutes during 'Time Since Brew' while the glass jug remains on the power base.
- During this time, the glass jug can be removed from the Power Base, however the 'Keep Warm' feature will automatically switch off. You can re-select the 'Keep Warm' feature by pressing the KEEP WARM button. The 'Keep Warm' cycle will remain active for the duration of the 60 minute 'Time Since Brew' feature.



## NOTE

'Keep Warm' feature will not activate and will not function if water temperature is below 50°C.

## SELECTING THE 'BASKET CYCLE' FEATURE

This feature continuously auto lifts and lowers the basket during the tea brewing cycle. This movement loosens the tea leaves within the basket, allowing the heated water to circulate freely around the tea leaves for maximum infusion.



### NOTE

The 'Basket Cycle' can significantly increase the rate of infusion and affect the tea strength. You may consider reducing the initial tea strength / brew time (see page 13) when using the 'Basket Cycle' feature.



### NOTE

It is recommended that the 'Basket Cycle' feature is used only when making between 1000mL (approx. 4 cups) to 1200mL (approx. 5 cups).

1. To activate the 'Basket Cycle' feature, press the BASKET button once. The button surround will illuminate and the LCD screen will display BASKET CYCLE.
2. During the brewing cycle, the BASKET button surround will flash while the basket slowly lifts and lowers within the heated water.
3. The 'Basket Cycle' feature can be cancelled anytime during the tea brewing cycle. Press the BASKET button once. The button surround will cease to illuminate and the LCD screen will no longer display BASKET CYCLE. The basket will return to the bottom of the glass jug for the remaining brewing time.

## USE AS A VARIABLE TEMPERATURE KETTLE

The Tea Maker™ can be used for boiling or heating water to a customisable temperature.



### NOTE

If you have used the glass jug for making tea we recommend thoroughly cleaning the interior of the jug and removing the tea basket before boiling or heating water. See Care & Cleaning instructions on page 21.


1. Fill the glass jug with the desired amount of water. Do not fill over the water maximum mark (1500ml WATER MAX).

2. a) **To boil water (100°C):**

Press the left ▲ ARROW UP button to increase the temperature to 100°C. The 'Custom' LED will automatically illuminate.

- b) **To heat water to a customised temperature:**

Press the left ▲ ARROW UP button to increase the temperature, or the left ▼ ARROW DOWN button to decrease the temperature. The temperature can be adjusted in 5°C increments from 50°C to a maximum of 100°C. The 'Custom' LED will automatically illuminate.

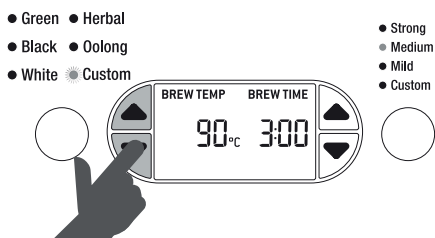



## NOTE

Once a customised temperature has been selected and once tea making or water heating cycle has been activated, the customised temperature setting will remain in the memory of the Tea Maker™ until you change it.

To return to default settings, see page 19.

3. Press the HOT WATER|Cancel button to start the cycle. The button surround will illuminate and the LCD screen will display 'ON' and the real-time heating progress in increments of 5°C.
4. The brew temperature cannot be changed once the heating cycle commences. To change the brew temperature, press the HOT WATER|Cancel button to cancel the heating cycle. Re-select the brew temperature (see Page 13).
5. Once the selected temperature is reached, the tea alert will sound three times. The LCD screen will automatically display the 'Time Since Brew' function. This function counts up to a maximum of 60 minutes, allowing you to monitor when the water heating cycle was complete. It does not activate the heating elements.
6. The Tea Maker™ has a 'Keep Warm' feature that allows brewed tea or heated water to remain warm for up to 60 minutes. This feature can be activated before, during or after the water heating cycle (see Page 14, Selecting the 'Keep Warm' feature).



## NOTE

'Keep Warm' will only maintain temperature during the 60 minute 'Time Since Brew' feature at the end of the 'Tea' or 'Hot Water' function.

## CUSTOMISING BREW TEMPERATURE

In addition to the 5 preset brew temperatures (see page 12, Selecting the Tea Type), the Tea Maker™ also features a customisable brew temperature setting for other tea varieties or to suit your personal taste.

### To customise a brew temperature:

1. Press the left ▲ ARROW UP button to increase the temperature, or the left ▼ ARROW DOWN button to decrease the temperature. The brewing temperature can be adjusted in 5°C increments from 50°C to a maximum of 100°C.
2. The LCD screen will display the customised brew temperature. This is displayed as the left figure on the LCD screen.



## NOTE

Pressing the left ▲ ARROW UP or the ▼ ARROW DOWN button while 'Green', 'Black', 'White', 'Herbal' or 'Oolong' are illuminated, will override the tea type options and illuminate 'Custom'.



## NOTE

This product is not calibrated for commercial or scientific use. Temperatures may vary  $\pm 3^{\circ}\text{C}$ , which is within range for optimal brewing for each tea variety.





## CUSTOMISING BREW TIME

In addition to the 3 preset brew times (see Page 13, Selecting the Tea Strength), the Tea Maker™ also features a customisable brew time setting to suit your personal taste.

### To customise a brew time:



Ensure the brew temperature (tea type) has been selected (see page 12).


### Brew time less than 10 minutes

1. Press the right  ARROW UP button to increase the time, or the right  ARROW DOWN button to decrease the time. The brewing time can be adjusted in 30 second increments up to a maximum of 10 minutes.
2. Once the Tea Maker™ is activated and the correct water temperature is reached, the basket will automatically lower and the brew time counter will count down the selected time.
3. Once the brewing is complete, the basket will automatically rise and the LCD screen will display the 'Time Since Brew' function. This function counts up to a maximum of 60 minutes, allowing you to monitor the freshness of your brew. It does not activate the heating elements.

### Manual mode-brew times over 10 minutes

In this mode, once the correct water temperature is reached, the assembled basket will automatically lower and commence brewing. However, it will not automatically lift the basket, allowing you to manually lift it once the desired brew time has elapsed.

1. Press the right  ARROW UP button to increase the time up to the maximum 10 minutes.
2. Continue to press the right  ARROW UP button. The LCD screen will display 'MANUAL LIFT' and '- - : - -' on the right side of the LCD.
3. Once the Tea Maker™ is activated and the correct water temperature is reached, the basket will automatically lower.
4. In the manual lift mode, the LCD screen will automatically commence the 'Brew Time' feature. This feature counts up to a maximum of 60 minutes, allowing you to monitor how long the basket has been submerged.
5. Once the desired brew time has elapsed, press and hold the BASKET button for 2 seconds. The basket will rise.
6. Once the brewing is complete, the LCD screen will automatically display the 'Time Since Brew' function. This function counts up to a maximum of 60 minutes, allowing you to monitor the freshness of your brew. It does not activate the heating elements.

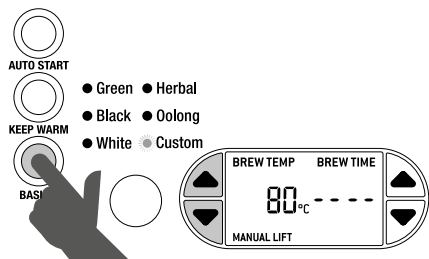

## NOTE

Once a customised time has been selected and one tea making or water heating cycle has been activated, the customised time will remain in the memory of the Tea Maker™ until you change it. To return to default settings, see Page 19.

## AUTO START FEATURE

This feature allows you to program the specific time when the Tea Maker™ will automatically turn on and start either a tea brewing cycle or water heating cycle.

### Setting the 'Auto Start' Feature

1. Press and hold the AUTO START button for 2 seconds. The button surround will illuminate and the tea alert will sound.
2. The LCD screen will display the ⌚ AUTO START clock symbol and a blinking CURRENT TIME and START TIME.
3. To set the CURRENT TIME, press the left ▲ ARROW UP button to increase the time, or the left ▼ ARROW DOWN button to decrease the time in 1 minute increments. Ensure the correct 'AM' or 'PM' is displayed.

## NOTE

Pressing and holding the  
 ▲ ARROW UP button or  
 ▼ ARROW DOWN button will increase the scrolling speed

4. To set the START TIME, press the right ▲ ARROW UP button to increase the time, or the right ▼ ARROW DOWN button to decrease the time in 1 minute increments. Ensure the correct 'AM' or 'PM' is displayed.
5. Once current time and start time are programmed, press either the flashing HOT WATER|Cancel or TEA|Cancel button to select which feature you would like to start at the programmed time.
6. The LCD screen will display the current time and start time, in addition to the ⌚ AUTO START symbol. The AUTO START button surround will illuminate and remain illuminated until the START TIME is reached, indicating that the 'Auto Start' feature has been activated.
7. Ensure that the Tea Maker™ is prepared with:
  - a) Sufficient water in the glass jug and tea leaves in the basket for the tea brewing cycle or,
  - b) Sufficient water in the glass jug for the water heating cycle.

## NOTE

Insufficient water may discolour your Tea Maker™ base!


8. Once the selected START TIME is reached, the Tea Maker™ will automatically commence the tea brewing or water heating cycle. During this time, the AUTO START button surround will no longer illuminate until the cycle is complete.

### Re-selecting the 'Auto Start' feature using previous START TIME

1. Press the AUTO START button once. The HOT WATER|Cancel and TEA|Cancel buttons will flash.
2. Press either the HOT WATER|Cancel or TEA|Cancel button to re-select the desired function. The 'Auto Start' feature has now been re-set.



#### NOTE

The 'Auto Start' feature can be cancelled anytime by pressing the AUTO START button. The LCD screen will no longer display the  AUTO START symbol and the AUTO START button surround will cease to illuminate.

### RESETTING DEFAULT SETTINGS

Even when unplugged from the power outlet, the Tea Maker™ will remember the last setting used for each setting. To restore the Tea Maker's default settings for each function, simultaneously press and hold AUTO START and KEEP WARM buttons for 2 seconds.

### STANDBY MODE

When the Tea Maker™ is plugged into a wall outlet, the LCD screen will illuminate for 3 minutes before entering standby mode. When in standby mode, the backlight of the LCD screen will switch off and the current time will appear on the display.

To re-activate the Tea Maker™ out of standby mode, press any button, except the HOT WATER|Cancel or TEA|Cancel button on the power base.

The LCD screen will re-illuminate. Pressing either the HOT WATER|Cancel or TEA|Cancel button will start the respective operation immediately.

### MOVING THE TEA BASKET WHEN NOT IN THE BREWING CYCLE

After the brewing cycle is complete, you may wish to lower the tea basket again for extra infusion to produce a stronger tasting tea. To do this, press and hold the BASKET button for 2 seconds. The button surround will flash and the tea basket will automatically lower to the bottom of the glass jug.

Once the desired strength has been reached, press and hold the BASKET button for 2 seconds. The button surround will flash and the tea basket will automatically rise to the top of the glass jug.




#### NOTE

If the glass jug is removed from the power base and the tea basket is in the lowered position, it will automatically return to the top -upon return of the glass jug to the power base.

## A NOTE ON TEMPERATURE CONVERSION (°C TO °F)

The temperature reading on the Tea Maker is preset to Celsius but can be converted to Fahrenheit.

Simultaneously press and hold the TEA TYPE and TEA STRENGTH buttons for 2 seconds. The corresponding '°C' or '°F' symbol will be displayed on the LCD screen.

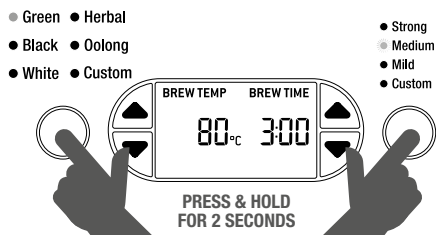

### NOTE


Once the Celsius default has been changed to Fahrenheit and once tea brewing or water heating cycle has been activated, the Fahrenheit setting will remain in the memory of the Tea Maker™ until you change it. To return to default settings, see Page 19.



## Care & Cleaning

### CLEANING THE GLASS JUG

1. After each use, empty the glass jug. Do not allow brewed tea to stand overnight.
2. Wipe the interior of the glass jug with a soft damp sponge or rinse with warm water. Tea deposits will enhance the flavour of the brewed tea, so if only using as a Tea Maker™ do not wash with soapy water.
3. Wipe the exterior of the glass jug with a soft damp cloth to clean.

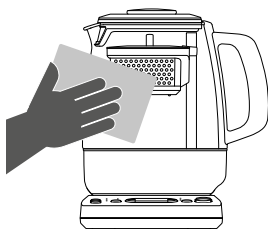

### WARNING

Never immerse or wash exterior of glass jug under running water.



### NOTE

Do not use chemicals, steel wool, or abrasive cleaners to clean the inside or outside of the Glass Jug as these may scratch the surface.

4. To remove the build-up of tannin, the astringent chemical constituent of tea, fill the glass jug with water up to the water maximum mark (1500mL WATER MAX) and either:
  - a) Bring water to boil and allow water to cool for one minute. Add contents of tea cleaner packet and allow to stand for 5 minutes. Empty tea maker, refill with fresh water and boil. Once again, empty the tea maker, refill with fresh water and boil. Empty tea maker and rinse thoroughly.
  - b) Add the juice of one lemon, as well as the lemon and boil. Leave to soak overnight then discard the solution. Fill the glass jug with clean water, boil, then discard the water. Repeat if necessary.  
or,
  - c) Add 6 tablespoons of white vinegar and boil. Leave to soak overnight then discard the solution. Fill the glass jug with clean water, boil, then discard the water. Repeat if necessary.
  - d) Dry thoroughly with a soft, lint-free cloth before using.



### NOTE

Through regular use over time, scale build-up can affect the performance and the life of the Tea Maker™. Lime and phosphate are common forms of scale that can damage your Tea Maker™. Lime scale, a harmless mineral, comes in the appearance of white-coloured or rusty looking build up on the inner walls and inner base of the glass jug. Phosphate scale can't be seen, however, it can cause the water to appear cloudy when heated. To prevent scale from damaging your Tea Maker™, ensure to de-scale the glass jug regularly. Use a commercial de-scaling agent and follow the instructions that come with the agent.

Ensure the Tea Maker™ is turned OFF by pressing the TEA|Cancel button (when brewing tea) or the HOT WATER|Cancel button (when heating water) on the power base. The Tea Maker™ is OFF when the button surround illumination goes out. Remove the power plug from the wall outlet.



#### NOTE

Allow all parts of the Tea Maker™ to cool completely before disassembling and cleaning.



#### NOTE

Only the jug lid, tea basket, tea basket lid and tea scoop are dishwasher safe.



#### WARNING

Never immerse the BASE OF THE GLASS JUG, POWER BASE, POWER CORD or POWER PLUG in water or allow moisture to come in contact with these parts.



### CLEANING THE JUG LID AND INTEGRATED SCALE FILTER

1. Wash the jug lid in warm soapy water with a soft sponge, rinse and dry thoroughly. The integrated scale filter can be cleaned by placing under running hot water and rubbing with a cleaning cloth or brush.

2. Alternatively, the jug lid is dishwasher safe. Position the jug lid vertically so the scale filter is facing upwards. This will allow water to drain properly.
3. Let all surfaces dry thoroughly prior to using.

### CLEANING THE TEA BASKET LID, TEA BASKET AND TEA SCOOP

1. Wash the tea basket lid, tea basket and tea scoop in warm soapy water with a soft sponge, rinse and dry thoroughly. A non-abrasive liquid cleanser or mild spray solution may be used to avoid build-up of stains. Apply the cleanser to the sponge, not the accessory surfaces, before cleaning.
2. Alternatively, these accessories are dishwasher safe.
3. Let all surfaces dry thoroughly prior to using.

### CLEANING THE POWER BASE

1. Wipe the power base with a soft damp sponge.
2. Let all surfaces dry thoroughly prior to inserting the power plug into a wall outlet.

### STORAGE

1. Ensure the Tea Maker™ is switched off, cleaned and dried before storing.
2. Ensure that the assembled tea basket is securely attached to the magnetic post within the glass jug.
3. Ensure that jug lid is securely in place.
4. Wrap the power cord around the power cord storage under the power base.
5. Stand the Tea Maker™ upright on the power base. Do not store anything on top.



## Troubleshooting

PROBLEM	POSSIBLE CAUSE
<b>Tea Maker™ will not switch ‘ON’</b>	<ul style="list-style-type: none"><li>• Check the power plug is securely inserted into the outlet.</li><li>• Insert the power plug into an independent outlet.</li><li>• Insert the power plug into a different outlet.</li><li>• Reset the circuit breaker if necessary.</li><li>• For additional safety the Tea Maker™ is fitted with a thermal cut out. In the event of severe overheating, the Tea Maker™ will automatically shut down to prevent further damage. Should this continue, call the Breville® Customer Service Centre 080-822-1691.</li></ul>
<b>The Tea Maker™ will not work</b>	<ul style="list-style-type: none"><li>• Check the glass jug is securely positioned on the power base.</li></ul>
<b>The LCD light has gone out</b>	<ul style="list-style-type: none"><li>• The Tea Maker™ goes into standby mode if not used for 3 minutes. When in standby mode, the backlight of the LCD screen will switch off and the current time will appear on the display.</li><li>• To re-activate the Tea Maker out of standby mode:<ul style="list-style-type: none"><li>- Remove then replace the glass jug from the power base.</li><li>- Press any button on the power base except the HOT WATER Cancel or TEA Cancel buttons. The LCD screen will re-illuminate.</li></ul></li></ul>
<b>I cannot select a certain function</b>	<ul style="list-style-type: none"><li>• Certain features cannot be selected or changed during the heating or brewing cycle. The LCD screen may temporarily change or a sound alert may be heard, but no changes to the cycle will be made.</li></ul>
<b>The LCD screen displays ‘RESET’</b>	<ul style="list-style-type: none"><li>• The LCD screen will display a flashing ‘RESET’ when there is a resettable electronic issue. Remove the plug from the wall outlet, wait 5 seconds, then plug back in.</li><li>• Call Breville® Customer Service 080-822-1691 if the ‘RESET’ message continues.</li></ul>
<b>The LCD screen displays ‘ERROR’</b>	<ul style="list-style-type: none"><li>• The LCD screen will display a flashing ‘ERROR’ when there is a non-resettable issue with the appliance. Should this occur, call the Breville® Customer Service Centre 080-822-1691.</li></ul>

PROBLEM	WHAT TO DO
<b>I would like to have the Tea Maker's default settings back</b>	<ul style="list-style-type: none"> <li>• Even when unplugged from the wall outlet, the Tea Maker™ will remember the last setting used for each function.</li> <li>• To restore the Tea Maker's default settings for each function, simultaneously press and hold AUTO START and KEEP WARM buttons for 2 seconds.</li> </ul>
<b>The 'BASKET CYCLE' feature / BASKET button does not work</b>	<ul style="list-style-type: none"> <li>• The basket cycle is only operational during brewing cycles that are under 10 minutes.</li> <li>• The tea basket cannot be lowered during the heating up phase of normal operation.</li> </ul>
<b>After boiling water, bubbles appear around the temperature sensor</b>	<ul style="list-style-type: none"> <li>• This is normal for the functionality of the Tea Maker™.</li> </ul>
<b>My tea tastes too weak or too strong</b>	<ul style="list-style-type: none"> <li>• Tea taste is a personal preference and may require experimentation to get it to your liking. For stronger tasting tea, increase the amount of tea or brew time (see Page 13 and 16). For a weaker tasting tea, decrease the amount of tea or brew time (see page 13 and 16).</li> </ul>
<b>There is a rattling noise inside the glass jug</b>	<ul style="list-style-type: none"> <li>• This is normal. The noise is from the magnet located inside the jug post and may be heard when the tea basket is not attached.</li> </ul>





## Warranty

### 2 YEAR WARRANTY

Breville provides product warranty for domestic use in specified territories for 2 year from date of purchase by faulty workmanship and materials. During this warranty period, Breville will provide repairs and replacement for any defective product (based on Breville's Warranty Policy).

Also, all legal warranty rights under Korea's legislation will be protected and will not be impaired by our warranty. For full terms and conditions on the warranty, as well as instructions on how to make a claim, please visit [www.breville.com/kr](http://www.breville.com/kr)



Notes

# *the Tea Maker™*

설명서 - BTM800



# **Breville®**



## 목차

- 2 Breville®은 안전을  
최우선으로 합니다
- 7 제품 구조
- 9 차의 이해
- 11 기능
- 21 관리 및 청소
- 23 문제 해결
- 25 보증

# BREVILLE®은 안전을 최우선으로 합니다

Breville®은 안전을 매우 중요하게 생각합니다. 우리는 소중한 고객의 안전을 최우선으로 생각하여 제품을 설계하고 제조합니다. 아울러 전기 제품을 사용할 때는 각별한 주의를 기울이고 다음의 예방 조치를 준수해 주시기 바랍니다.

## 중요 안전 지침

사용하기 전에 모든 지침을 읽고 나중에 참조할 수 있도록 보관하시기 바랍니다


- 작동하기 전에 모든 지침을 꼼꼼하게 읽고 나중에 참조할 수 있도록 보관하시기 바랍니다.
- 제품을 처음 사용하기 전에 모든 포장재와 판촉 라벨을 제거하고 안전하게 폐기하시기 바랍니다.
- 어린이의 질식 위험을 방지하기 위해 이 제품의 전원 플러그에 장착된 보호 커버를 제거하고 안전하게 폐기하시기 바랍니다.
- 본 제품은 고품질의 음용수와 차를 가열하고 끓일 목적으로만 특별히 설계되었습니다. 어떠한 경우에도 이 제품을 다른 액체나 식품을 가열하거나 끓이는 데 사용하면 안 됩니다.
- 작동 중 제품을 조리대나 테이블 가장자리 근처에 두면 안 됩니다. 표면이 평평하고 깨끗하며 물이 없는지 확인하시기 바랍니다.
- 고압 가스 버너나 전열기 위 또는 근처, 가열된 오븐에 닿을 수 있는 곳에 제품을 놓으면 안 됩니다.

- 제품을 벽, 커튼 및 기타 열 또는 증기에 민감한 소재에서 멀리합니다. 제품의 양쪽에 최소 20cm의 공간을 확보하시기 바랍니다.
- 제품을 싱크대 식기 건조판에 놓고 작동하면 안 됩니다.
- 전원 콘센트에 연결하고 작동하기 전에 항상 제품이 올바르게 조립되었는지 확인합니다. 본 설명서에 명시된 지침을 따르도록 합니다.
- 유리 용기는 제공된 전원 받침대로만 사용해야 합니다. 가스레인지 위에서 사용하면 안 됩니다.
- 본 제품은 외부 타이머나 별도의 원격 제어 시스템으로 작동하도록 제작되지 않았습니다.
- 뜨거운 표면을 만지시면 안 됩니다. 손잡이를 사용하여 유리 용기를 들어올리고 옮깁니다.
- 작동하기 전에 유리 용기에 용기 뚜껑을 단단히 부착하시기 바랍니다.
- 용기 뚜껑 위에 아무것도 올려놓으면 안 됩니다.
- 데일 수 있으므로 작동 중에는 용기 뚜껑을 열면 안 됩니다.
- 뜨거운 액체가 들어 있는 유리 용기를 옮길 때는 각별한 주의가 필요합니다.
- 유리 용기의 물을 부을 때는 끓는 물과 증기에 데일 수 있으므로 주의합니다. 물을 너무 빨리 붓지 않도록 합니다.
- 데임을 방지하려면 절대 '물 최대(WATER MAX)'(물을 가열할 때) 또는 '차 최대(TEA MAX)'(차를 우려낼 때) 선 표시를 넘겨서 유리 용기를 채우면 안 됩니다.
- 물이 없는 상태에서 제품을 작동하면 안 됩니다. 항상 적어도 '최소(MIN)' 표시까지 유리 용기를 채웁니다. 물 없이 작동할 경우 비등 방지 안전 장치가 자동으로 전원을 차단합니다. 다시 채우기 전에 기기를 식혀 줍니다.



## 경고

감전을 방지하기 위해 유리 용기 베이스, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 수분에 닿지 않게 확인합니다.

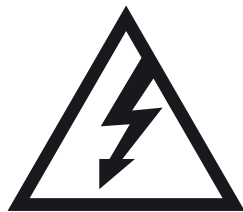


설명서 21페이지의 청소 지침을 참조하시기 바랍니다.

- 가열 중이나 바스켓이 작동 중일 때는 전원 받침대에서 유리 용기를 분리하면 안 됩니다. 전원 받침대에서 유리 용기를 분리하기 전에 제품이 물 가열 또는 차 우려내기 사이클을 완료했는지 확인합니다.
- Breville®에서 추천하지 않는 액세서리 부품을 사용하면 화재, 감전 또는 부상을 초래할 수 있습니다.
- 제품을 끄려면 전원 받침대의 차 | 취소(TEA | Cancel) 버튼(차를 우려낼 때) 또는 온수 | 취소(HOT WATER | Cancel) 버튼(물을 가열할 때)을 누릅니다. 버튼 주변 조명이 꺼지면 제품이 꺼진 것입니다.
- 벽면 콘센트에서 분리하려면 먼저 제품을 끈 다음 벽면 콘센트에서 전원 플러그를 뽑습니다.
- 제품을 사용하지 않거나 자리를 비울 때는 벽면 콘센트에서 전원 코드를 분리하시기 바랍니다.
- 제품을 이동하기 전이나 부품을 조립 또는 분해하기 전, 그리고 청소 또는 보관 전에 제품의 전원을 끄고 식힌 다음 벽면 콘센트에서 분리합니다.

- 우려내기 사이클 간에는 제품을 식혀 줍니다.
- 21페이지에 있는 관리 및 청소 지침을 철저히 따르시기 바랍니다.
- 제품 청소 시 거친 연마제나 부식성 세제를 사용하면 안 됩니다.
- 제품을 안전하게 사용할 수 있도록 보호자의 적절한 감독을 받지 않은 경우 어린이나 노약자는 이 제품을 사용할 수 없습니다.
- 어린이가 제품을 가지고 놀지 않도록 감독해야 합니다.

#### 경고

절대 유리 용기, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 수분에 닿지 않게 합니다.

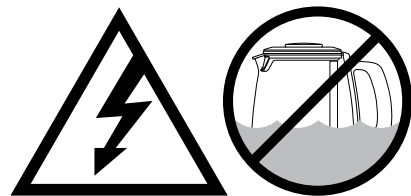



## 경고

용기 외부를 흐르는 물에 씻으면 안 됩니다.



## 모든 전기 제품에 대한 중요 안전 지침

- 본 제품은 가정용입니다.
- 사용하기 전에 전원 코드를 완전히 뽑니다.
- 전원 코드가 테이블이나 조리대 가장자리에 걸리거나 뜨거운 표면에 닿지 않도록 합니다.
- 제품을 본 설명서에 설명된 원래의 용도 이외의 목적으로 사용하면 안 됩니다. 야외에서 사용하거나, 움직이는 차량이나 선박에서 사용하면 안 됩니다.
- 어린이가 제품을 사용하거나 어린이 옆에서 제품을 사용할 때는 세심한 감독이 필요합니다.
- 전원 코드, 플러그 및 실제 제품에 손상이 있는지 정기적으로 검사합니다. 어떤 방식으로든 손상된 경우나 제품이 오작동한

후에는 작동하면 안 됩니다. 즉시 제품 사용을 중단하고 Breville® 고객 서비스 센터(080-822-1691)에 문의하여 검사, 수리 또는 조정을 받으시기 바랍니다.

- 청소 이외의 유지 보수는 Breville® 고객 서비스 센터(080-822-1691)에 문의하시기 바랍니다.
- 접지 지침을 완전히 이해하지 못했거나 제품이 적절하게 접지되었는지 여부가 의심되는 경우 자격을 갖춘 전기 기술자에게 문의하시기 바랍니다.



## 경고

경사진 곳에서 제품을 작동하면 안 됩니다. 전원이 켜져 있는 동안 제품을 움직이면 안 됩니다.

## Breville Assist™ 플러그

- Breville® 제품에는 벽면 콘센트에서 전원 플러그를 쉽고 안전하게 분리할 수 있도록 손가락 구멍이 있는 고유한 Assist™ 플러그가 함께 제공됩니다. 안전상의 이유로 Breville® 제품을 다른 제품과 분리된 전용 회로의 자체 전기 콘센트에 직접 연결하는 것이 좋습니다. 전기 회로가 다른 제품으로 인해 과부하되면 제품이 올바르게 작동하지 않을 수도 있습니다. 멀티탭이나 연장 코드와 함께 사용하는 것은 추천하지 않습니다.


가정용

이 지침을 보관하시기 바랍니다





## 제품 구조

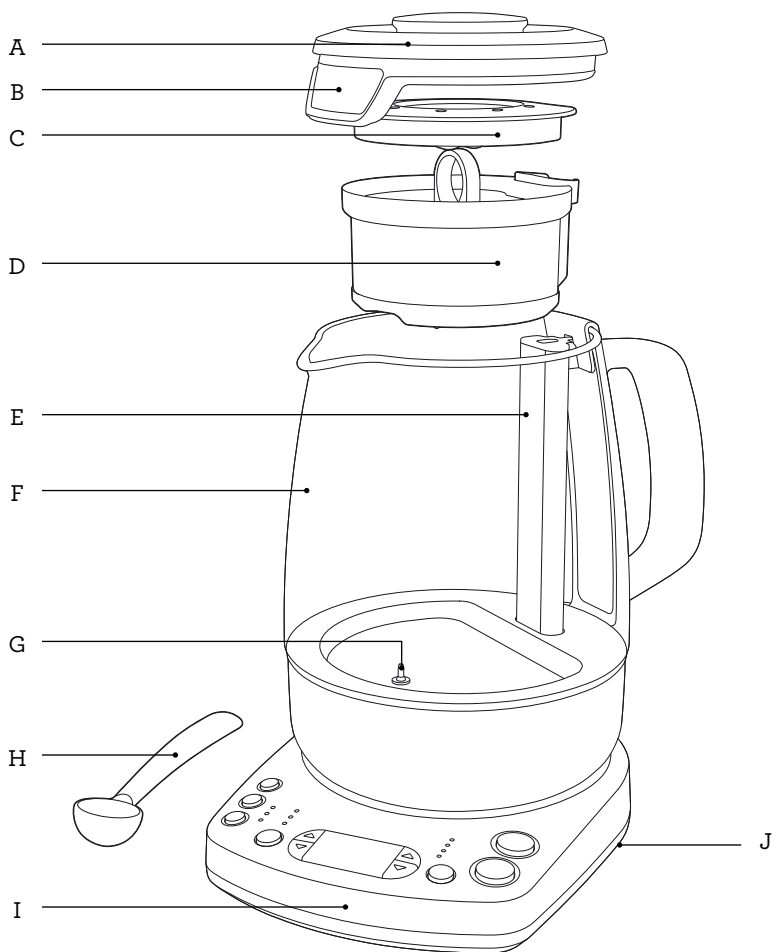

A. 용기 뚜껑

B. 스테인리스 스틸 스케일 필터

C. 티 바스켓 뚜껑

D. 스테인리스 스틸 티 바스켓

E. 용기 기둥

자성으로 티 바스켓을 부착합니다.

F. 유리 용기

최대 1500ml의 물, 최대 1200ml의 차


G. 수중 온도 센서

H. 티 스푼

I. 전원 받침대

J. 코드 보관함

전원 받침대 아래에 숨어 있습니다.

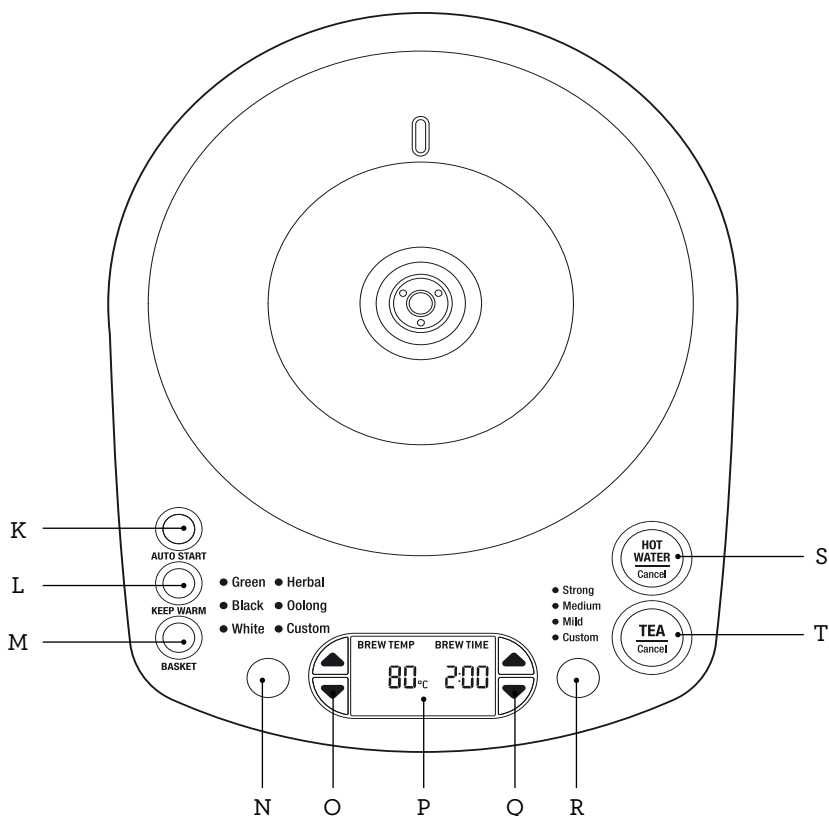

**K. 자동 시작(AUTO START) 버튼**  
Tea Maker™가 사전 선택한 시간에 자동으로 차를 우려내도록 설정합니다.

**L. 보온 유지(KEEP WARM) 버튼**  
우려낸 차나 가열한 물을 최대 60분 간 따뜻하게 유지합니다.

**M. 바스켓(BASKET) 버튼**  
자동으로 티 바스켓을 올리고 내립니다. 이 움직임은 차를 최대한 우려내기 위해 물이 찻잎 주위로 자유롭게 순환하도록 합니다.

**N. 차 종류(TEA TYPE) 버튼**  
녹차(Green), 홍차(Black), 백차(White), 허브차(Herbal) 및 우롱차(Oolong)에 추천하는 우려내기 온도를 사전 설정합니다.

**O. 다양한 온도 제어**  
사전 설정된 우려내기 온도를 무시합니다.

**P. 백라이트 LCD**

**Q. 다양한 시간 제어**  
사전 설정된 우려내기 시간을 무시합니다.

**R. 차 농도(TEA STRENGTH) 버튼**  
진하게, 중간 정도로, 순하게 우려내는 데 추천하는 우려내기 시간을 사전 설정합니다.

**S. 온수 | 취소(HOT WATER | Cancel) 버튼**  
다양한 온도로 주전자로 사용할 때 누릅니다.

**T. 차 | 취소(TEA | Cancel) 버튼**  
차 우려내기 사이클을 활성화합니다.



## 차의 이해

### 차 종류

차나무(camellia sinensis)에서 나오는 네 가지 기본 차 종류가 있습니다. 찻잎 따기 및 가공 방법에 따라 최종 생산되는 차의 종류가 결정됩니다.

#### 홍차

홍차는 전 세계적으로 가장 흔한 차 종류입니다. 수확한 잎을 두 시간 정도 발효시킨 후 가열하거나 건조하여 만듭니다. 이 산화는 잎을 어둡게 하고 카페인 양을 증가시킵니다. 모든 차 중에서 홍차의 색과 풍미가 가장 강합니다.

#### 백차

백차는 가장 희귀하고 가장 고급스러운 차입니다. 백차는 차나무의 희끄무레한 새싹을 찢 다음 자연 건조시켜 만듭니다. 이 차는 카페인이 적고 약간 달콤한 풍미가 있습니다.

#### 녹차

녹차는 전 세계에서 생산되는 차의 약 10%를 차지합니다. 잎을 따서 말고 갈색으로 변하기 전에 말립니다. 녹차는 독특한 향기가 있고 약간 떫은 맛을 냅니다.

#### 우롱차

우롱차는 반발효되며 이는 잎을 따서 바로 가공한다는 의미입니다. 잎이 녹색에서 적색/갈색으로 바뀌는 짧은 산화 기간만 있습니다. 잎은 꽃향과 과일향이 나며 은은한 과일 맛이 있습니다. 우롱차는 우유, 설탕 또는 레몬과 함께 마시지 않는 것이 좋습니다.

### 허브차 또는 약탕

허브차는 차나무로 생산하지 않고 꽃, 잎, 뿌리 또는 씨앗으로 생산합니다. 흔한 허브 음료는 카모마일, 페퍼민트, 회향, 장미 열매 및 방취목입니다. 차에 포함되지 않는 허브차는 일반적으로 장시간 우려내도 쓴맛이 나지 않습니다. 이들은 흔히 맛에 영향을 주지 않고 끓는 물로 3번 우려낼 수 있습니다.

### 블렌드

차 생산자는 흔히 한 시즌에서 다음 시즌까지 풍미의 일관성을 달성하기 위해 여러 종류의 차를 결합하여 블렌드를 만듭니다. 흔한 홍차 블렌드에는 잉글리시 브렉퍼스트, 얼 그레이, 아이리시 브렉퍼스트 및 러시아인 캐러밴이 포함됩니다.



#### 팁

우려낸 찻잎은 이상적인 정원 비료가 되고 토양을 비옥하게 해 줍니다.

### 차 보관

- 진공 밀봉 백에 보관된 차는 차의 품질과 등급에 따라 최대 2년까지 보관할 수 있습니다. 개봉한 차는 밀폐 용기에 담아 건조하고 어두운 곳에 보관해야 합니다.
- 개봉한 홍차는 녹차와 우롱차보다 더 오래이지만 모든 차는 이상적인 조건에서 보관해야 합니다.
- 차가 향을 잃고 쓴맛이 나거나 맛을 잃는다면 유통기한이 지났다고 볼 수 있습니다.

## 최적의 차 우려내기를 위한 팁

- 수질은 맛에 영향을 줍니다. 최상의 결과를 얻으려면 여과된 물을 사용합니다.
- 미세한 차 입자와 찻잎은 전체 잎보다 더 빨리 우려냅니다. 따라서, 미세한 차 입자는 종종 너무 많은 타닌을 너무 빨리 내어 더 떫은 맛을 만듭니다. 원하는 농도에 도달할 때까지 우려내기 시간을 조정합니다.
- 제공된 티 스푼을 사용하되, 컵/물 250ml당 대략 한 스푼의 차를 사용합니다.

## 물의 양 대비 티 스푼 비율

유리 용기 표시	컵/ML	티 스푼
500mL	약 2컵/500ml	2스푼
750mL	약 3컵/750ml	3스푼
1000mL	약 4컵/1000ml	4스푼
1200mL	약 5컵/1200ml	5스푼



## 기능

### TEA MAKER™ 사용 준비

제조 과정에서 나오는 먼지나 보호 잔여물을 제거하기 위해서는 끓이기 사이클을 실행한 다음 물을 버리는 것이 좋습니다.

1. Tea Maker™에서 포장재, 판촉 라벨 및 테이프를 제거하고 안전하게 폐기합니다.
2. 용기 뚜껑을 분리한 다음 유리 용기 안의 자석 기둥에서 티 바스켓을 분리합니다. 용기 뚜껑, 티 바스켓, 바스켓 뚜껑, 티 스푼을 따뜻한 비눗물에 부드러운 스펀지로 씻은 다음 행구고 완전히 말립니다.



### 경고

절대 유리 용기, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 수분에 닿지 않게 합니다.

3. 전원 받침대를 평평하고 건조한 표면에 놓습니다.
4. 티 바스켓을 제자리에 두지 않은 상태에서 유리 용기를 물 최대 표시(1500mL WATER MAX)까지 채우고 전원 받침대에 올려놓습니다. 용기 뚜껑을 유리 용기에 단단히 고정합니다.



### 경고


유리 용기를 절대 차가운 물로 채우시면 안 됩니다. 다시 채우기 전에 Tea Maker™를 식혀 줍니다.



### 경고

'최대(MAX)' 선을 초과하여 채우면 온수나 끓는 물이 넘쳐 심한 화상이나 부상을 입을 수 있습니다. '최소(MIN)' 선 아래로 채우면 물이 끓거나 선택한 온도에 도달하기 전에 Tea Maker™가 꺼집니다.

5. 전원 코드를 완전히 풀고 전원 플러그를 접지된 벽면 콘센트에 꽂습니다.
6. 기본 우려내기 온도 및 우려내기 시간 표시와 함께 LCD 화면에 불이 들어옵니다.

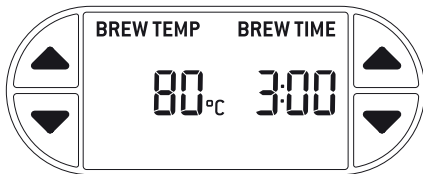

7. LCD 화면에 100°C가 표시될 때까지 왼쪽에 있는 ▲ 위로 화살표 버튼을 누릅니다. '사용자 정의(Custom)' LED에 자동으로 불이 들어옵니다.



AUTO START




KEEP WARM



BASKET

- Green • Herbal
- Black • Oolong
- White • Custom

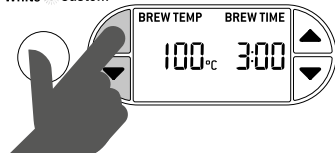

8. 온수 | 취소(HOT WATER | Cancel) 버튼을 눌러 사이클을 시작합니다. 버튼 주변에 불이 들어오고 LCD 화면에 '켜짐(ON)'이 표시되고 실시간 가열이 5°C 단위로 진행됩니다.
9. 물이 100°C에 도달하면 차 경고음이 세 번 울리고 온수 | 취소(HOT WATER | Cancel) 버튼 주변 조명이 꺼집니다.
10. 물을 버리시기 바랍니다. 이제 Tea Maker™를 사용할 준비가 되었습니다.

## 차를 우려내기 위한 TEA MAKER™로 사용


1. 전원 받침대에서 유리 용기를 분리하고 용기 뚜껑을 분리합니다. 차를 우려낼 때는 원하는 양의 물을 채웁니다. 차 최대 표시(1200mL TEA MAX)를 넘게 채우지 않도록 합니다.



### 경고


'최대(MAX)' 선을 초과하여 채우면 온수나 끓는 물이 넘쳐 심한 화상이나 부상을 입을 수 있습니다. '최소(MIN)' 선 아래로 채우면 물이 끓거나 선택한 온도에 도달하기 전에 Tea Maker™가 꺼집니다.

2. 바스켓을 평평하고 건조한 표면에 놓습니다. 측면에서 들어 올려 바스켓 뚜껑을 분리합니다.

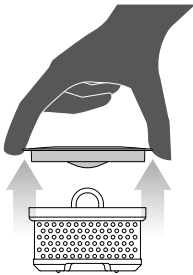

3. 제공된 티 스푼을 사용하여 바스켓에 차잎을 채웁니다. 일반적인 기준으로 컵/물 250ml당 차잎 한 스푼을 사용합니다. 단, 이것은 차 포장의 설명과 개인 취향에 따라 다릅니다(10페이지, 물의 양 대비 티 스푼 비율 참조).
4. 바스켓 위에 바스켓 뚜껑을 다시 장착합니다. 뚜껑 중앙을 세게 눌러 뚜껑이 제자리에 단단히 고정되었는지 확인합니다.

5. 유리 용기 안에 있는 자석 기둥에 조립된 바스켓을 밀어넣습니다. 조립된 바스켓이 자석 기둥 상단에 저절로 부착됩니다. 용기 뚜껑을 다시 장착합니다.

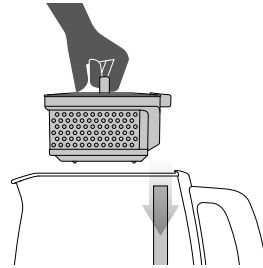

## 차 종류 선택

차 종류가 우려내기 온도를 결정합니다.

Tea Maker™에는 녹차, 홍차, 백차, 허브차, 우롱차를 최적으로 우려내는 데 추천하는 다섯 가지 사전 설정된 차 종류가 있습니다. 또한, 다른 차 품종이나 개인 취향에 맞게 맞춤 설정할 수 있는 차 종류 온도 설정이 있습니다(16페이지, 우려내기 온도 맞춤 설정 참조).

사전 설정된 차 종류를 선택하려면,

- a) 차 종류(TEA TYPE) 버튼을 누르고 원하는 차('녹차(Green)', '홍차(Black)', '백차(White)', '허브차(Herbal)' 및 '우롱차(Oolong)')에 볼이 들어올 때까지 전환합니다.
- b) LCD 화면은 선택한 차 종류를 최적으로 우려내는 데 추천하는 사전 설정된 우려내기 온도를 표시합니다. 이 정보는 LCD 화면 왼쪽에 표시됩니다.

차 종류	녹차	백차	우롱차	허브차	홍차
사전 설정 추출 온도	80°C	85°C	90°C	100°C	100°C
사전 설정 추출 시간	3:00	3:00	3:00	4:00	2:00

## 차 농도 선택

원하는 차 농도에 따라 우려내기 시간이 결정됩니다. 알맞은 우려내기 시간은 차 종류와 개인이 선호하는 차 농도에 따라 다릅니다.

Tea Maker™에는 진하게, 중간 정도로, 순하게 우려내는 데 추천하는 세 가지 사전 설정된 차 농도가 있습니다. 또한, 개인 취향에 맞게 맞춤 설정할 수 있는 우려내기 시간 설정이 있습니다(17페이지, 우려내기 시간 맞춤 설정 참조).

- 사전 설정된 차 농도를 선택하려면,
  - 차 농도(TEA STRENGTH) 버튼을 누르고 원하는 차 농도('진하게(Strong)', '중간 정도(Medium)', '순하게(Mild)')에 불이 들어올 때까지 전환합니다.
  - LCD 화면은 선택한 차 종류에 대해 선택한 우려내기 농도를 달성하는 데 추천하는 사전 설정된 우려내기 시간을 표시합니다. 이 정보는 LCD 화면의 오른쪽 그림으로 표시됩니다.
- 차 | 취소(TEA | Cancel) 버튼을 눌러 차 우려내기 사이클을 시작합니다. 버튼 주변에 불이 들어오고 LCD 화면에 '켜짐(ON)'이 표시되고 실시간 가열이 5°C 단위로 진행됩니다. 물 온도가 50°C에 도달하면 '켜짐(ON)'은 선택한 우려내기 시간으로 바뀝니다.



## 참고

- '우려내기 시간'은 가열 프로세스 중에 조정할 수 있지만 '우려내기 온도'는 가열 사이클이 시작되면 변경할 수 없습니다.
- 우려내기 시간을 변경하려면 오른쪽에 있는 ▲ 위로 화살표 버튼을 눌러 시간을 늘리거나 오른쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 시간을 줄입니다. 우려내기 시간은 최대 10분까지 30초 단위로 조정할 수 있습니다.
- 우려내기 온도를 변경하려면 차 | 취소(TEA | Cancel) 버튼을 눌러 가열 사이클을 취소합니다. 우려내기 온도를 다시 선택하시기 바랍니다(16페이지 참조).
- 선택한 우려내기 온도에 도달하면 조립된 바스켓이 자동으로 가열된 물 속으로 내려갑니다.
  - 바스켓이 유리 용기 바닥에 도달하면 LCD 화면에 우려내기 진행 상황이 표시되고 자동으로 1초 단위로 카운트다운됩니다. 이 정보는 LCD 화면 오른쪽에 표시됩니다.
  - 우려내기 사이클이 끝나면 바스켓이 자동으로 유리 용기 상부로 올라가 과도한 우려내기를 방지합니다. 차 경고음이 세번 울립니다.



## 경고

차를 우려낸 후에는 티 바스켓은 만지기에 뜨겁습니다. 다루기 전에 티 바스켓 손잡이가 식었는지 확인하시기 바랍니다.

## '보온 유지' 기능 선택

이 기능은 우려낸 차나 가열된 물을 최대 60분 간 따뜻하게 유지합니다. '보온 유지' 온도 범위는 선택한 원래의 우려내기 온도에 따라 50~80°C 사이에 있습니다. 우려내기 온도가 낮을수록 '보온 유지' 온도가 낮아집니다.

원래의 우려내기 온도	대략적인 보온 유지 온도
50°C - 65°C	50°C
70°C - 80°C	70°C
85°C	75°C
90°C - 100°C	80°C



## 참고

'보온 유지' 사이클 동안, 우려낸 차에는 계속해서 풍미가 더해집니다. 우려낸 차를 얼마나 오래 보온하려하는지에 따라 초기 차 농도/우려내기 시간을 줄이는 것을 고려할 수 있습니다 (13페이지 참조).

'보온 유지' 기능을 활성화하려면,

1. 차 우려내기나 물 가열 사이클이 완료되기 전후나 도중에 보온 유지(KEEP WARM) 버튼을 누릅니다. 버튼 주변에 불이 들어오면 '보온 유지' 기능이 선택되었음을 나타냅니다.



## 참고

'보온 유지'는 '차' 또는 '온수' 기능이 끝나고 60분의 '우려내기 이후 시간' 기능 중에만 온도를 유지합니다.

2. 차 우려내기나 물 가열 사이클이 완료되면 LCD 화면에 자동으로 '우려내기 이후 시간' 세기가 표시됩니다. 보온 유지(KEEP WARM) 버튼 주변에 계속 불이 들어오며 유리 용기가 전원 받침대 위에 있는 동안 '보온 유지' 사이클이 '우려내기 이후 시간' 중 최대 60분 간 활성화됨을 나타냅니다.
3. 이 시간 중에 전원 받침대에서 유리 용기를 분리할 수 있습니다. 단, '보온 유지' 기능은 자동으로 꺼집니다. 보온 유지(KEEP WARM) 버튼을 눌러 '보온 유지' 기능을 다시 선택할 수 있습니다. '보온 유지' 사이클은 60분의 '우려내기 이후 시간' 기능이 지속되는 동안 계속 활성화됩니다.



## 참고

'보온 유지' 기능은 물 온도가 50°C 미만일 경우 활성화되지 않으며 작동하지 않습니다.



## '바스켓 사이클' 기능 선택

이 기능은 차 우려내기 사이클 동안 연속적으로 바스켓을 자동으로 올리고 내립니다. 이 동작은 바스켓 안의 찻잎을 풀어서 가열된 물이 찻잎 주위로 자유롭게 순환하도록 하여 차가 최대한 우려낼 수 있도록 합니다.

### 참고

'바스켓 사이클'은 우려내는 속도를 크게 높이고 차의 농도에 영향을 줄 수 있습니다. '바스켓 사이클' 기능을 사용할 때는 초기 차 농도/우려내기 시간을 줄이는 것을 고려할 수 있습니다 (13페이지 참조).

### 참고

'바스켓 사이클' 기능은 1000mL(약 4컵) ~ 1200mL(약 5컵)를 만들 때만 사용하는 것을 추천합니다.

1. '바스켓 사이클' 기능을 활성화하려면 바스켓(BASKET) 버튼을 한 번 누릅니다. 버튼 주변에 불이 들어오고 LCD 화면에 바스켓 사이클(BASKET CYCLE)이 표시됩니다.
2. 우려내기 사이클 동안 바스켓(BASKET) 버튼 주변이 깜박이며 바스켓이 가열된 물 안에서 천천히 오르내립니다.
3. '바스켓 사이클' 기능은 차 우려내기 사이클 중에 언제든지 취소할 수 있습니다. 바스켓(BASKET) 버튼을 한 번 누릅니다. 버튼 주변 조명이 꺼지고 LCD 화면에 더이상 바스켓 사이클(BASKET CYCLE)이 표시되지 않습니다. 바스켓은 남은 끓우려내기 시간 동안 유리 용기 바닥으로 돌아갑니다.


## 다양한 온도의 주전자로 사용

Tea Maker™는 맞춤 설정 가능한 온도로 물을 끓이거나 가열하는 데 사용할 수 있습니다.

### 참고

유리 용기를 사용하여 차를 만든 경우 물을 끓이거나 가열하기 전에 용기 내부를 철저히 청소하고 차 바스켓을 분리하는 것이 좋습니다. 47페이지의 관리 및 청소 지침을 참조하시기 바랍니다.

1. 유리 용기에 원하는 양의 물을 채웁니다. 물 최대 표시(1500ml WATER MAX)를 넘게 채우시면 안 됩니다.
2. a) 물을 끓이려면(100°C), 왼쪽에 있는 ▲ 위로 화살표 버튼을 눌러 온도를 100°C로 올립니다. '사용자 정의(Custom)' LED에 자동으로 불이 들어옵니다.  
b) 맞춤 설정한 온도로 물을 가열하려면, 왼쪽에 있는 ▲ 위로 화살표 버튼을 눌러 온도를 올리거나 왼쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 온도를 내립니다. 50°C에서 최대 100°C까지 5°C 단위로 온도를 조정할 수 있습니다. '사용자 정의(Custom)' LED에 자동으로 불이 들어옵니다.

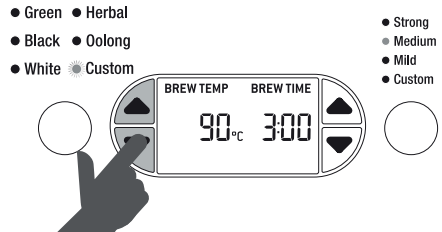



## 참고

맞춤 설정 온도를 선택하고 차 만들기 또는 물 가열 사이클을 활성화하면, 맞춤 설정 온도 설정은 이를 변경할 때까지 Tea Maker™의 메모리에 유지됩니다. 기본 설정으로 돌아가려면 19페이지를 참조하시기 바랍니다.

3. 온수 | 취소(HOT WATER | Cancel) 버튼을 눌러 사이클을 시작합니다. 버튼 주변에 불이 들어오고 LCD 화면에 '켜짐(ON)'이 표시되고 실시간 가열이 5°C 단위로 진행됩니다.
4. 우려내기 온도는 가열 사이클이 시작되면 변경할 수 없습니다. 우려내기 온도를 변경하려면 온수 | 취소(HOT WATER | Cancel) 버튼을 눌러 가열 사이클을 취소합니다. 우려내기 온도를 다시 선택합니다(13페이지 참조).
5. 선택한 온도에 도달하면 차 경고음이 세 번 울립니다. LCD 화면에 자동으로 '우려내기 이후 시간' 기능이 표시됩니다. 이 기능은 최대 60분까지 시간을 세어 물 가열 사이클이 완료된 시점을 모니터링할 수 있습니다. 이 기능은 발열체를 활성화하지 않습니다.
6. Tea Maker™에는 우려낸 차나 가열된 물을 최대 60분 간 따뜻하게 유지하는 '보온 유지' 기능이 있습니다. 이 기능은 물 가열 사이클 전후나 도중에 활성화할 수 있습니다(14페이지, '보온 유지' 기능 선택 참조).



## 참고

'보온 유지'는 '차' 또는 '온수' 기능이 끝나고 60분의 '우려내기 이후 시간' 기능 중에만 온도를 유지합니다.

## 우려내기 온도 맞춤 설정

Tea Maker™에는 다섯 가지 사전 설정 우려내기 온도(12페이지, 차 종류 선택 참조) 외에 다른 차 품종이나 개인 취향에 맞게 맞춤 설정할 수 있는 우려내기 온도 설정도 있습니다.

### 우려내기 온도를 맞춤 설정하려면,

1. 왼쪽에 있는 ▲ 위로 화살표 버튼을 눌러 온도를 올리거나 왼쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 온도를 내립니다. 50°C에서 최대 100°C까지 5°C 단위로 우려내기 온도를 조정할 수 있습니다.
2. LCD 화면에 맞춤 설정된 우려내기 온도가 표시됩니다. 이 정보는 LCD 화면의 왼쪽 그림으로 표시됩니다.



## 참고

'녹차(Green)', '홍차(Black)', '백차(White)', '허브차(Herbal)' 및 '우롱차(Oolong)'에 불이 들어와 있는 동안 왼쪽에 있는 ▲ 위로 화살표 또는 ▼ 아래로 화살표 버튼을 누르면, 차 종류 선택이 무효화되고 '사용자 정의(Custom)'에 불이 들어옵니다.



## 참고

이 제품은 상업적 또는 과학적 용도로 보정되지 않았습니다. 온도는  $\pm 3^{\circ}\text{C}$  오차로 달라질 수 있으며, 이는 각 차 종류에 대한 최적의 우려내기 범위 내에 있습니다.

## 우려내기 시간 맞춤 설정

Tea Maker™에는 세 가지 사전 설정 우려내기 시간(13페이지, 차 농도 선택 참조) 외에 개인 취향에 맞게 맞춤 설정할 수 있는 우려내기 시간 설정도 있습니다.

### 우려내기 시간을 맞춤 설정하려면,

우려내기 온도(차 종류)가 선택되었는지 확인하시기 바랍니다(12페이지 참조).


### 10분 미만의 우려내기 시간

1. 오른쪽에 있는 ▲ 위로 화살표 버튼을 눌러 시간을 늘리거나 오른쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 시간을 줄입니다. 우려내기 시간은 최대 10분까지 30초 단위로 조정할 수 있습니다.
2. Tea Maker™가 활성화되고 정확한 물 온도에 도달하면 바스켓이 자동으로 내려가고 우려내기 시간 카운터가 선택한 시간을 카운트다운합니다.
3. 우려내기가 완료되면 바스켓이 자동으로 올라가고 LCD 화면에 '우려내기 이후 시간' 기능이 표시됩니다. 이 기능은 최대 60분까지 시간을 세어 차 우려내기의 신선도를 모니터링할 수 있습니다. 이 기능은 발열체를 활성화하지 않습니다.

### 10분 이상의 수동 모드 우려내기 시간

이 모드에서는 정확한 물 온도에 도달하면 조립된 바스켓이 자동으로 내려가고 우려내기가 시작됩니다. 그러나, 자동으로 바스켓을 들어 올리지 않으므로 원하는 우려내기 시간이 경과한 후 수동으로 바스켓을 들어 올릴 수 있습니다.

1. 오른쪽에 있는 ▲ 위로 화살표 버튼을 눌러 시간을 최대 10분까지 늘립니다.
2. 오른쪽에 있는 ▲ 위로 화살표 버튼을 계속 누릅니다. LCD 화면에 '수동 올리기(MANUAL LIFT)'가 표시되고 오른쪽에 '- - : - -'가 표시됩니다.
3. Tea Maker™가 활성화되고 정확한 물 온도에 도달하면 바스켓이 자동으로 내려갑니다.
4. 수동 올리기 모드에서는 LCD 화면이 자동으로 '우려내기 시간' 기능을 시작합니다. 이 기능은 최대 60분까지 시간을 세어 바스켓을 담근 시간을 모니터링할 수 있습니다.
5. 원하는 우려내기 시간이 경과하면 바스켓(BASKET) 버튼을 2초간 길게 누릅니다. 바스켓이 올라갑니다.
6. 우려내기가 완료되면 LCD 화면에 자동으로 '우려내기 이후 시간' 기능이 표시됩니다. 이 기능은 최대 60분까지 시간을 세어 차 우려내기의 신선도를 모니터링할 수 있습니다. 이 기능은 발열체를 활성화하지 않습니다.

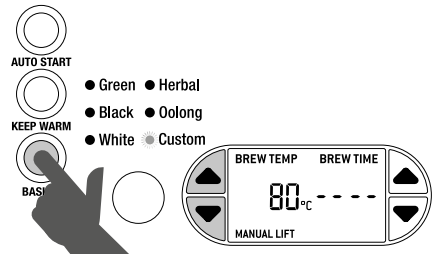



## 참고

맞춤 설정 시간을 선택하고 차 만들기 또는 물 가열 사이클을 활성화하면, 맞춤 설정한 시간은 이를 변경할 때까지 Tea Maker™의 메모리에 유지됩니다. 기본 설정으로 돌아가려면 19페이지를 참조하시기 바랍니다.

## 자동 시작 기능

이 기능으로 Tea Maker™가 자동으로 켜져서 차 우려내기 사이클 또는 물 가열 사이클을 시작하는 특정한 시간을 프로그래밍할 수 있습니다.

### '자동 시작' 기능 설정

1. 자동 시작(AUTO START) 버튼을 2초간 길게 누릅니다. 버튼 주변에 불이 들어오고 차 경고음이 울립니다.
2. LCD 화면에 ② 자동 시작(AUTO START) 시계 기호와 깜박이는 현재 시간(CURRENT TIME) 및 시작 시간(START TIME)이 표시됩니다.
3. 현재 시간(CURRENT TIME)을 설정하려면 왼쪽에 있는 ▲ 위로 화살표 버튼을 눌러 시간을 늘리거나 왼쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 1분 단위로 시간을 줄입니다. '오전(AM)' 또는 '오후(PM)'가 올바르게 표시되는지 확인하시기 바랍니다.



## 참고

▲ 위로 화살표 버튼 또는 ▼ 아래로 화살표 버튼을 길게 누르면 스크롤 속도가 올라갑니다.

4. 시작 시간(START TIME)을 설정하려면 오른쪽에 있는 ▲ 위로 화살표 버튼을 눌러 시간을 늘리거나 오른쪽에 있는 ▼ 아래로 화살표 버튼을 눌러 1분 단위로 시간을 줄입니다. '오전(AM)' 또는 '오후(PM)'가 올바르게 표시되는지 확인합니다.
5. 현재 시간과 시작 시간을 프로그램 래밍하면 깜박이는 온수 | 취소 (HOT WATER | Cancel) 또는 차 | 취소 (TEA | Cancel) 버튼을 눌러 프로그래밍 된 시간에 시작하려는 기능을 선택합니다.
6. LCD 화면에 ③ 자동 시작(AUTO START) 기호와 함께 현재 시간과 시작 시간이 표시됩니다. 자동 시작(AUTO START) 버튼 주변에 불이 들어오고 시작 시간에 도달할 때까지 계속 불이 들어오며 '자동 시작' 기능이 활성화되었음을 나타냅니다.
7. Tea Maker™를 다음과 같이 준비합니다.
  - a) 차 우려내기 사이클을 위해 유리 용기에 충분한 물을 넣고 바스켓에 찻잎을 넣거나,
  - b) 물 가열 사이클을 위해 유리 용기에 충분한 물을 넣습니다.



## 참고

물이 부족하면 Tea Maker™ 바닥이 변색될 수 있습니다!

8. 선택한 시작 시간에 도달하면 Tea Maker™가 자동으로 차 우려내기 또는 물 가열 사이클을 시작합니다. 이 시간 동안 자동 시작(AUTO START) 버튼 주변은 사이클이 완료될 때까지 더이상 불이 들어오지 않습니다.

## 이전의 시작 시간을 사용하여 '자동 시작' 기능 재선택

1. 자동 시작(AUTO START) 버튼을 한 번 누릅니다. 온수 | 취소(HOT WATER | Cancel) 버튼과 차 | 취소(TEA | Cancel) 버튼이 깜박입니다.
2. 온수 | 취소(HOT WATER | Cancel) 버튼 또는 차 | 취소(TEA | Cancel) 버튼을 눌러 원하는 기능을 다시 선택합니다. 이제 '자동 시작' 기능이 재설정되었습니다.



### 참고

자동 시작(AUTO START) 버튼을 눌러 언제든지 '자동 시작' 기능을 취소할 수 있습니다. LCD 화면에 더이상 ㉠ 자동 시작(AUTO START) 기호가 표시되지 않고 자동 시작(AUTO START) 버튼 주변 조명이 꺼집니다.

## 기본 설정 복원

전원 콘센트에서 플러그를 뽑더라도 Tea Maker™는 각 설정에 사용된 마지막 설정을 기억합니다. 각각의 기능에 대한 Tea Maker™의 기본 설정을 복원하려면 자동 시작(AUTO START) 버튼과 보온 유지(KEEP WARM) 버튼을 동시에 2초간 길게 누릅니다.

## 대기 모드

벽면 콘센트에 Tea Maker™의 플러그를 꽂으면 LCD 화면에 3분간 불이 들어온 후 대기 모드로 들어갑니다. 대기 모드에서는 LCD 화면의 백라이트가 꺼지고 화면에 현재 시간이 나타납니다.

Tea Maker™를 대기 모드에서 다시 활성화하려면 전원 받침대의 온수 | 취소(HOT WATER | Cancel) 버튼 또는 차 | 취소(TEA | Cancel) 버튼을 제외한 아무 버튼이나 누릅니다.

LCD 화면에 다시 불이 들어옵니다. 온수 | 취소(HOT WATER | Cancel) 버튼 또는 차 | 취소(TEA | Cancel) 버튼을 누르면 즉시 각각의 작동이 시작됩니다.

## 우려내기 사이클이 아닐 때 티 바스켓 움직이기

우려내기 사이클이 완료된 후, 더 진한 맛의 차를 만들기 위해 조금 더 우려내도록 티 바스켓을 다시 내릴 수 있습니다. 이렇게 하려면 바스켓(BASKET) 버튼을 2초간 길게 누릅니다. 버튼 주변이 깜박이고 티 바스켓이 자동으로 유리 용기 바닥으로 내려갑니다. 원하는 농도에 도달하면 바스켓(BASKET) 버튼을 2초간 길게 누릅니다. 버튼 주변이 깜박이고 티 바스켓이 자동으로 유리 용기 상부로 올라갑니다.




### 참고

유리 용기를 전원 받침대에서 분리하고 티 바스켓이 내려간 위치에 있으면 유리 용기를 전원 받침대로 되돌리는 즉시 바스켓이 자동으로 상부로 돌아갑니다.

## 온도 변환에 관한 참고 사항(°C → °F)

Tea Maker™의 온도 판독값은 섭씨로 사전 설정되어 있지만 화씨로 변환할 수 있습니다.

차 종류(TEA TYPE) 버튼과 차 농도(TEA STRENGTH) 버튼을 동시에 2초간 길게 누릅니다. 해당 '°C' 또는 '°F' 기호가 LCD 화면에 표시됩니다.

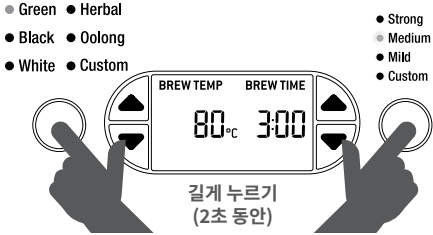

### 참고


섭씨 기본값을 화씨로 변경하고 차 우려내기 또는 물 가열 사이클을 활성화하면, 화씨 설정은 이를 변경할 때까지 Tea Maker™의 메모리에 유지됩니다. 기본 설정으로 돌아가려면 19페이지를 참조하시기 바랍니다.



## 관리 및 청소

### 유리 용기 청소

1. 매 사용 후에는 유리 용기를 비웁니다.  
우려낸 차를 밤새 두면 안 됩니다.
2. 부드럽고 젖은 스펀지로 유리 용기 내부를 닦거나 따뜻한 물로 헹굽니다.  
차 침전물은 우려낸 차의 풍미를 향상시키므로 Tea Maker™로만 사용한다면 비눗물로 씻으면 안 됩니다.
3. 부드럽고 젖은 천으로 유리 용기 외부를 닦아 청소하시기 바랍니다.

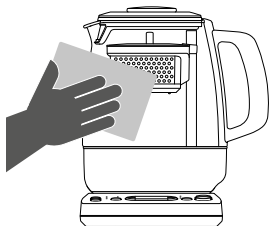

### 경고

절대 유리 용기의 외부를 흐르는 물에 담그거나 씻으면 안 됩니다.



### 참고

표면이 긁힐 수 있으므로 유리 용기의 내부 또는 외부를 청소할 때 화학 약품, 철 수세미 또는 연마성 세제를 사용하면 안 됩니다.

4. 차의 짙은 맛을 내는 화학 성분인 타닌의 축적을 제거하려면 유리 용기에 물을 최대 표시(1500mL WATER MAX)까지 채우고 다음과 같이 합니다.
  - a) 물을 끓이고 1분간 식힙니다. 티 클리너 봉지의 내용물을 넣고 5분간 그대로 둡니다. Tea Maker™를 비우고 신선한 물을 다시 채운 다음 끓입니다. 다시 한번 Tea Maker™를 비우고 신선한 물을 다시 채운 다음 끓입니다. Tea Maker™를 비우고 철저히 헹굽니다.
  - b) 레몬 1개의 즙과 레몬을 넣고 끓입니다. 밤새 담가두었다가 용액을 버립니다. 유리 용기에 깨끗한 물을 채웠다가 버립니다. 필요한 경우 반복합니다.  
또는,
  - c) 백식초 6큰술을 넣고 끓입니다. 밤새 담가두었다가 용액을 버립니다. 유리 용기에 깨끗한 물을 채웠다가 버립니다. 필요한 경우 반복합니다.
  - d) 사용하기 전에 부드럽고 보풀이 없는 천으로 완전히 말려 줍니다.



### 참고

정기적으로 장기간 사용하면 스케일 축적이 Tea Maker™의 성능과 수명에 영향을 줄 수 있습니다. 석회화 and 인산염은 Tea Maker™를 손상시킬 수 있는 흔한 형태의 스케일입니다. 무해한 광물인 석회 스케일은 유리 용기의 내벽과 내부 바닥에 흰색 또는 녹색 모양의 축적물로 나타납니다. 인산염 스케일은 보이지 않습니다. 그러나 가열되면 물이 탁하게 보이도록 만들 수 있습니다. 스케일로 인해 Tea Maker™가 손상되는 것을 방지하려면 유리 용기의 스케일을 정기적으로 제거합니다. 시판 디스케일링제를 사용하고 함께 제공된 지침을 따르시기 바랍니다.

전원 받침대의 차 | 취소(TEA | Cancel) 버튼(차를 우려낼 때) 또는 온수 | 취소(HOT WATER | Cancel) 버튼(물을 가열할 때)을 눌러 Tea Maker™가 꺼져 있는지 확인합니다. 버튼 주변 조명이 꺼지면 Tea Maker™가 꺼진 것입니다. 벽면 콘센트에서 전원 플러그를 뽑습니다.



### 참고

분해하여 청소하기 전에 Tea Maker™의 모든 부품을 완전히 식혀 줍니다.



### 참고

용기 뚜껑, 티 바스켓, 티 바스켓 뚜껑, 티 스쿱만 식기세척기를 사용할 수 있습니다.



### 경고

절대 유리 용기 밑부분, 전원 받침대, 전원 코드, 전원 플러그를 물에 담그지 마시고, 해당 부품이 수분에 닿지 않게 합니다.



## 용기 뚜껑 및 통합형 스케일 필터 청소

1. 용기 뚜껑을 따뜻한 비눗물에 부드러운 스펀지로 씻은 다음 행구고 완전히 말립니다. 통합형 스케일 필터는 흐르는 온수에 적신 후 청소용 천이나 브러시로 문질러 청소할 수 있습니다.
2. 또는 용기 뚜껑은 식기세척기를 사용할 수 있습니다. 스케일 필터가 위를 향하도록 하여 용기 뚜껑을 수직으로 놓습니다. 이렇게 하면 물이 제대로 배수될 수 있습니다.
3. 사용하기 전에 모든 표면을 완전히 건조시켜 줍니다.

## 티 바스켓 뚜껑, 티 바스켓, 티 스쿱 청소

1. 티 바스켓 뚜껑, 티 바스켓, 티 스쿱을 따뜻한 비눗물에 부드러운 스펀지로 씻은 다음 행구고 완전히 말립니다. 얼룩이 생기는 것을 방지하기 위해 비연마성 액체 세제나 순한 스프레이 용액을 사용할 수 있습니다. 청소하기 전에 액세서리 표면이 아니라 스펀지에 세제를 바릅니다.
2. 또는 이러한 액세서리는 식기세척기를 사용할 수 있습니다.
3. 사용하기 전에 모든 표면을 완전히 건조시켜 줍니다.

## 전원 받침대 청소

1. 부드럽고 젖은 스펀지로 전원 받침대를 닦습니다.
2. 전원 플러그를 벽면 콘센트에 꽂기 전에 모든 표면을 완전히 건조시켜 줍니다.

## 보관

1. 보관하기 전에 Tea Maker™의 전원을 끄고 청소하고 말립니다.
2. 조립된 티 바스켓이 유리 용기 안에 있는 자석 기둥에 단단히 부착되었는지 확인합니다.
3. 용기 뚜껑이 제자리에 단단히 고정되었는지 확인합니다.
4. 전원 받침대 아래의 전원 코드 보관함 주위에 전원 코드를 감습니다.
5. Tea Maker™를 전원 받침대 위에 똑바로 세웁니다. 위에 아무것도 올려놓으면 안 됩니다.





## 문제 해결

문제	가능한 원인
Tea Maker™가 '켜짐'으로 전환되지 않습니다	<ul style="list-style-type: none"> <li>전원 플러그가 콘센트에 제대로 꽂혀 있는지 확인합니다.</li> <li>전원 플러그를 독립된 콘센트에 꽂습니다.</li> <li>전원 플러그를 다른 콘센트에 꽂습니다.</li> <li>필요한 경우 회로 차단기를 재설정합니다.</li> <li>추가적인 안전을 위해 Tea Maker™에는 열 차단 장치가 장착되어 있습니다. 심하게 과열되면 Tea Maker™가 자동으로 꺼져 추가 손상을 방지합니다. 이 현상이 계속 발생할 경우 Breville® 고객 서비스 센터(080-822-1691)에 문의합니다.</li> </ul>
Tea Maker™가 작동하지 않습니다	<ul style="list-style-type: none"> <li>유리 용기가 전원 받침대 위에 확실하게 올려져 있는지 확인합니다.</li> </ul>
LCD 표시등이 꺼졌습니다	<ul style="list-style-type: none"> <li>3분간 사용하지 않으면 Tea Maker™가 대기 모드로 전환됩니다. 대기 모드에서는 LCD 화면의 백라이트가 꺼지고 화면에 현재 시간이 나타납니다.</li> <li>Tea Maker™를 대기 모드에서 다시 활성화하려면, <ul style="list-style-type: none"> <li>- 전원 받침대에서 유리 용기를 분리했다가 다시 장착합니다.</li> <li>- 온수   취소(HOT WATER   Cancel) 버튼 또는 차   취소(TEA   Cancel) 버튼을 제외한 전원 받침대의 아무 버튼이나 누릅니다. LCD 화면에 다시 불이 들어옵니다.</li> </ul> </li> </ul>
특정 기능을 선택할 수 없습니다	<ul style="list-style-type: none"> <li>가열 또는 우려내기 사이클 중에는 특정 기능을 선택하거나 변경할 수 없습니다. LCD 화면이 일시적으로 변경되거나 경고음이 들릴 수 있지만 사이클은 변경되지 않습니다.</li> </ul>
LCD 화면에 'RESET'이 표시됩니다	<ul style="list-style-type: none"> <li>재설정할 수 있는 전자 관련 문제가 있을 경우 LCD 화면에 깜박이는 '재설정(RESET)'이 표시됩니다. 벽면 콘센트에서 플러그를 뽑고 5초간 기다린 다음 다시 꽂습니다.</li> <li>'재설정(RESET)' 메시지가 계속되면 Breville® 고객 서비스 센터(080-822-1691)에 문의합니다.</li> </ul>
LCD 화면에 'ERROR'가 표시됩니다	<ul style="list-style-type: none"> <li>제품에 재설정할 수 없는 문제가 있을 경우 LCD 화면에 '오류(ERROR)'가 표시됩니다. 이 현상이 발생할 경우 Breville® 고객 서비스 센터(080-822-1691)에 문의합니다.</li> </ul>

문제	해야 할 일
Tea Maker™의 기본 설정을 복원하고 싶습니다	<ul style="list-style-type: none"> <li>• 벽면 콘센트에서 플러그를 뽑더라도 Tea Maker™는 각 기능에 사용된 마지막 설정을 기억합니다.</li> <li>• 각각의 기능에 대한 Tea Maker™의 기본 설정을 복원하려면 자동 시작(AUTO START) 버튼과 보온 유지(KEEP WARM) 버튼을 동시에 2초간 길게 누릅니다.</li> </ul>
'바스켓 사이클' 기능 / 바스켓 버튼이 작동하지 않습니다	<ul style="list-style-type: none"> <li>• 바스켓 사이클은 10분 미만의 우려내기 사이클 동안에만 작동합니다.</li> <li>• 정상 작동의 가열 단계 중에는 티 바스켓을 내릴 수 없습니다.</li> </ul>
물을 끓인 후 온도 센서 주변에 기포가 나타납니다	<ul style="list-style-type: none"> <li>• 이는 Tea Maker™의 기능으로, 정상적인 현상입니다.</li> </ul>
차 맛이 너무 약하거나 너무 강합니다	<ul style="list-style-type: none"> <li>• 차 맛은 개인의 취향이며 원하는 대로 하려면 약간의 시도가 필요할 수 있습니다. 차 맛을 더 강하게 하려면 차의 양이나 우려내는 시간을 늘립니다(13페이지 및 16페이지 참조). 차 맛을 더 약하게 하려면 차의 양이나 우려내는 시간을 줄입니다(13페이지 및 16페이지 참조).</li> </ul>
유리 용기 안에서 덜거덕거리는 소리가 납니다	<ul style="list-style-type: none"> <li>• 정상적인 현상입니다. 이 소음은 용기 기둥 안에 있는 자석에서 나는 소리로, 티 바스켓이 부착되어 있지 않을 때 들을 수 있습니다.</li> </ul>



## 보증

### 2년 품질 보증

Breville은 구입일로부터 2년 동안 대한민국 내에서 가정용으로 사용되는 제품의 잘못된 제조 공정 및 자재로 인한 결함에 대하여 보증 서비스를 제공합니다. 보증기간 동안 Breville은 결함이 있는 제품에 대해 수리 또는 교체를 제공합니다(Breville의 보증 정책에 따름).

또한, 고객이 대한민국의 법률에 따라 제품의 하자에 관하여 행사할 수 있는 법적 권리는 보호되며 Breville의 보증정책으로 인하여 이러한 법적 권리가 훼손되는 것은 아닙니다.

Breville의 보증 서비스에 관한 자세한 내용과 고객센터에 대한 문의 방법을 살펴 보시려면 **[www.breville.com/kr](http://www.breville.com/kr)**를 방문해 주시기 바랍니다.

**브레빌코리아 유한회사**  
서울특별시 강남구 테헤란로 518, 13층 125호 (대치동)  
고객 서비스 센터: 080-822-1691

**Breville®**  
Master Every Moment™

Copyright Breville Pty. Ltd. 2022.

지속적인 제품 개선으로 인해, 본 책자에 담긴 제품 삽화 및 사진은 실제 제품과 약간 다를 수 있습니다.

BTM800 KOR - C22